



SCANSTRUT DS-LP-MULTI-S Low Profile Multi Cable Seal Installation Guide

[Home](#) » [SCANSTRUT](#) » SCANSTRUT DS-LP-MULTI-S Low Profile Multi Cable Seal Installation Guide 

SCANSTRUT®

DS-LP-MULTI-S

DS-LP-MULTI-BLK





18-09-2023 (Issue 1)

Installation Instructions




Contents

- [1 Parts List](#)
- [2 Tools Required](#)
- [3 Documents / Resources](#)
- [3.1 References](#)

Parts List

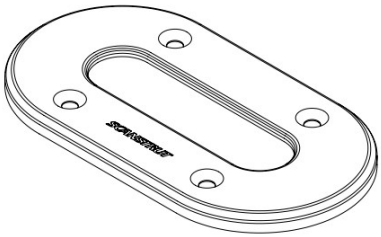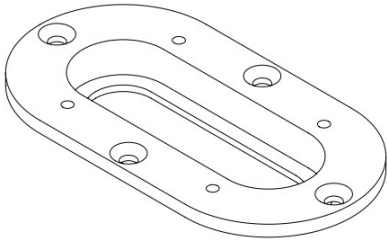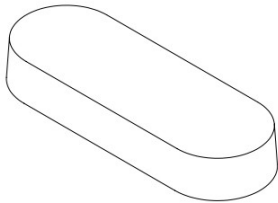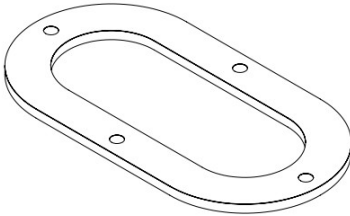
		
Top x1	Base x1	Bung x1
		
Gasket x1	No.6 x 19mm Screw x4	M4 x 6mm Countersunk Bolt x4


Tools Required

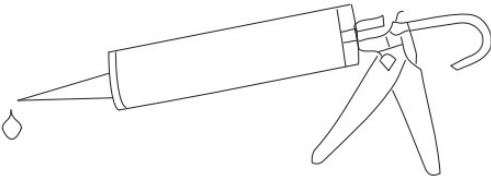
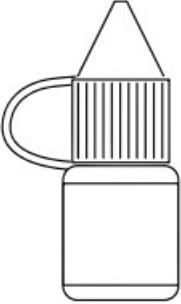
		
ø2.5mm (3/32") ø3mm (1/18") Drill Bit	ø35mm (1 3/8") Hole Saw/Drill Bit	Jig Saw
		
Pozi Screwdriver	Silicone	Optional: Thread Lock

Material	Drill	Fixing
Soft Material e.g. plywood	2.5mm (3/32")	No.6 Screw (Included)
Hard Material e.g. fiberglass, hardwoods, acrylics	3mm (1/8")	
Metal e.g. Steel, aluminium	4mm (5/32")	Recommended >12mm x M4 Countersunk Bolt with washer and Nyloc (Not included)

- ① Tape down cutting template and drill 6 pilot holes.


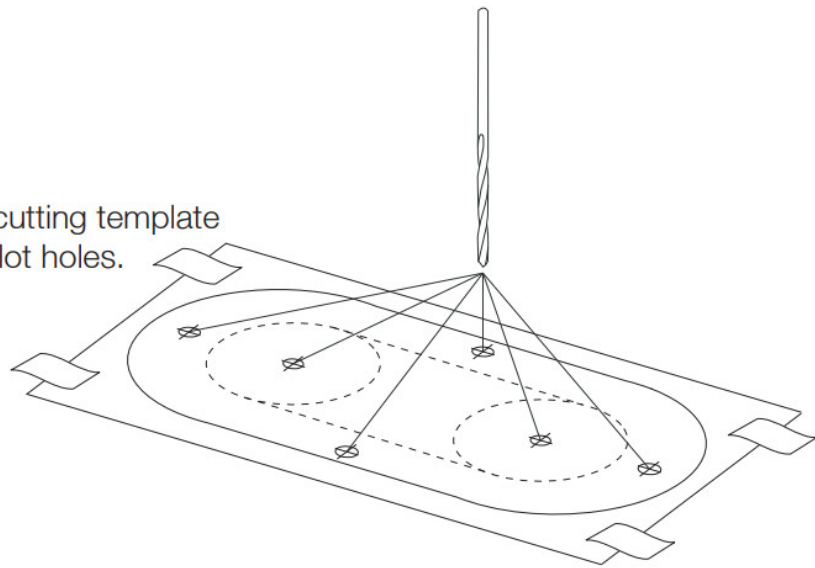


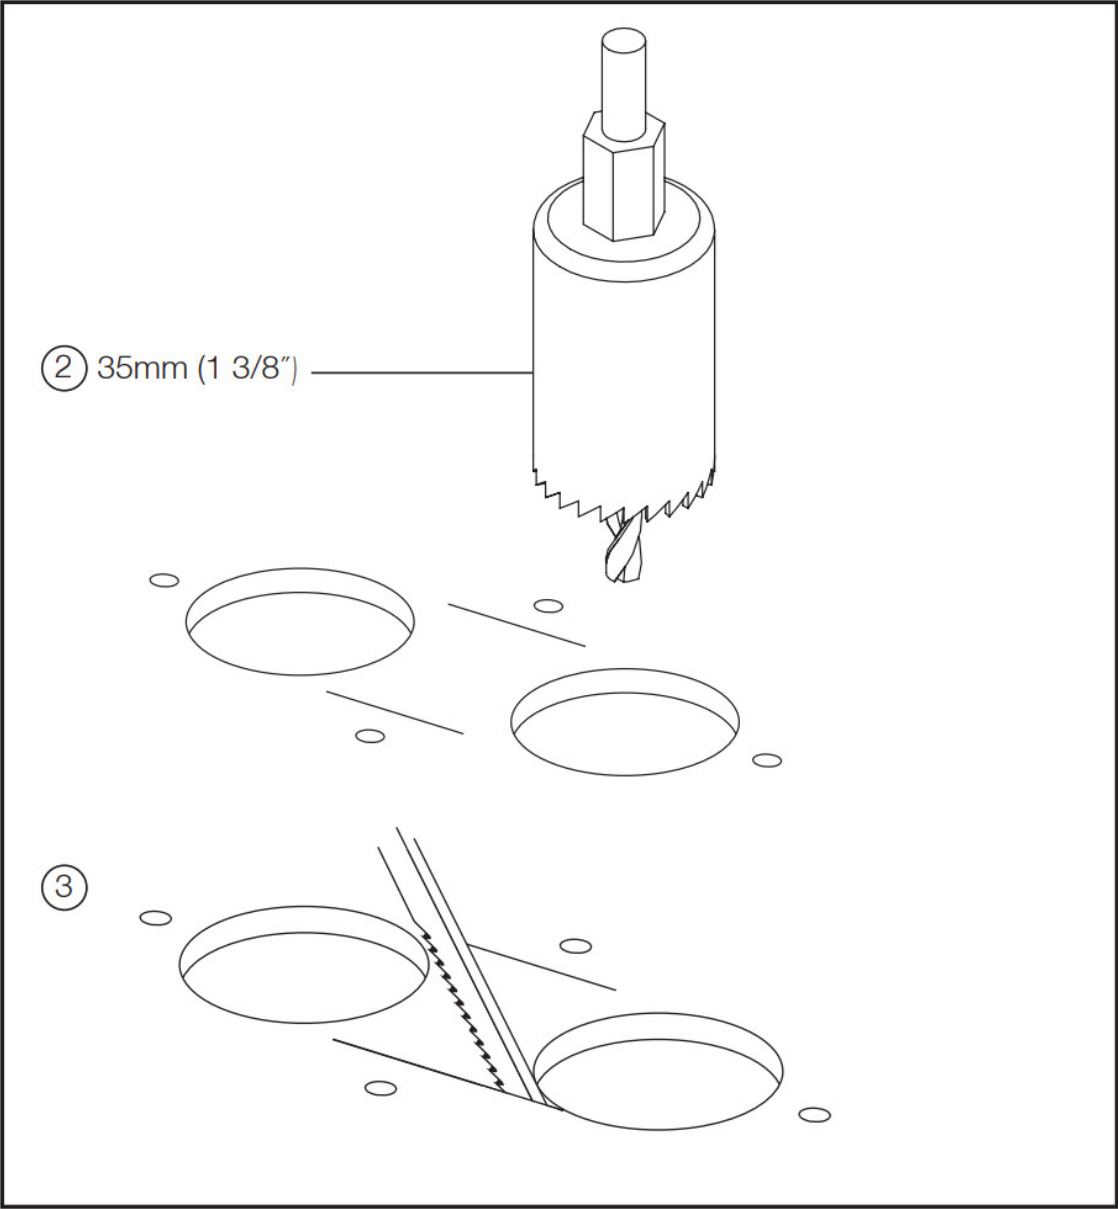


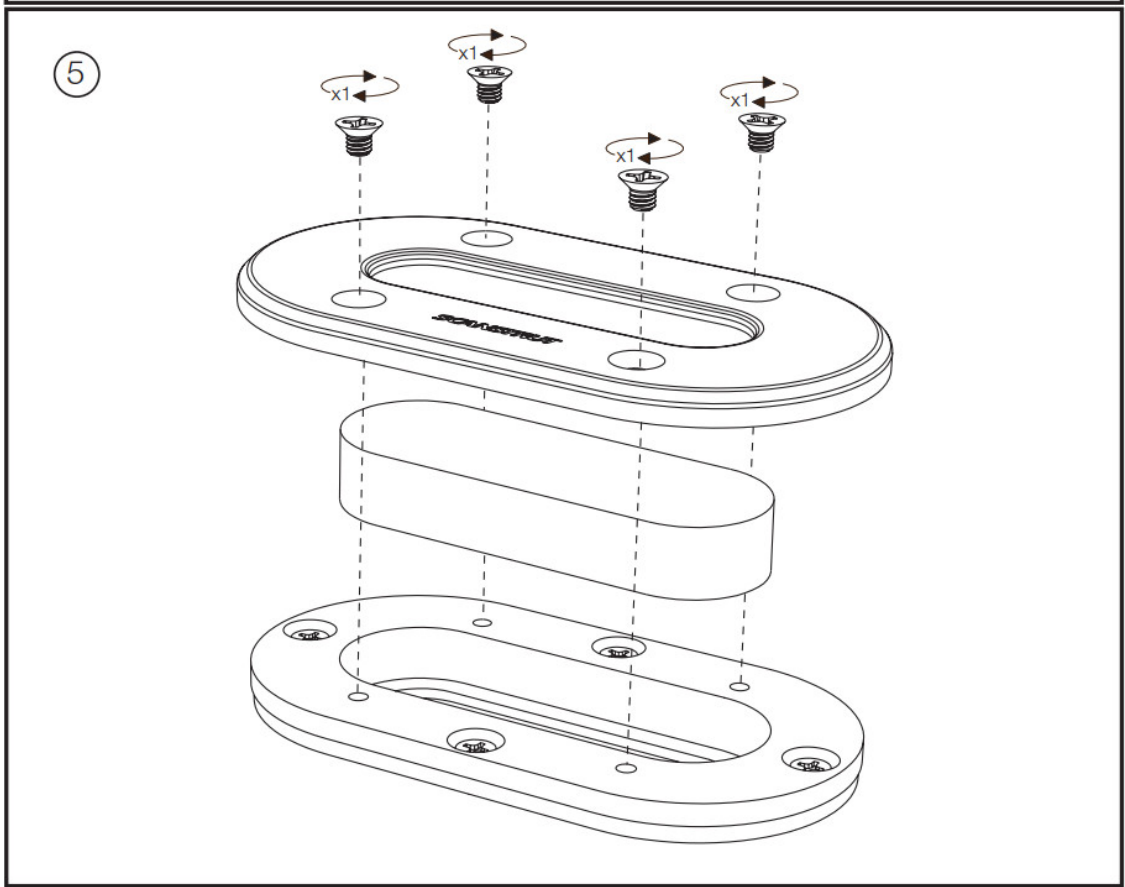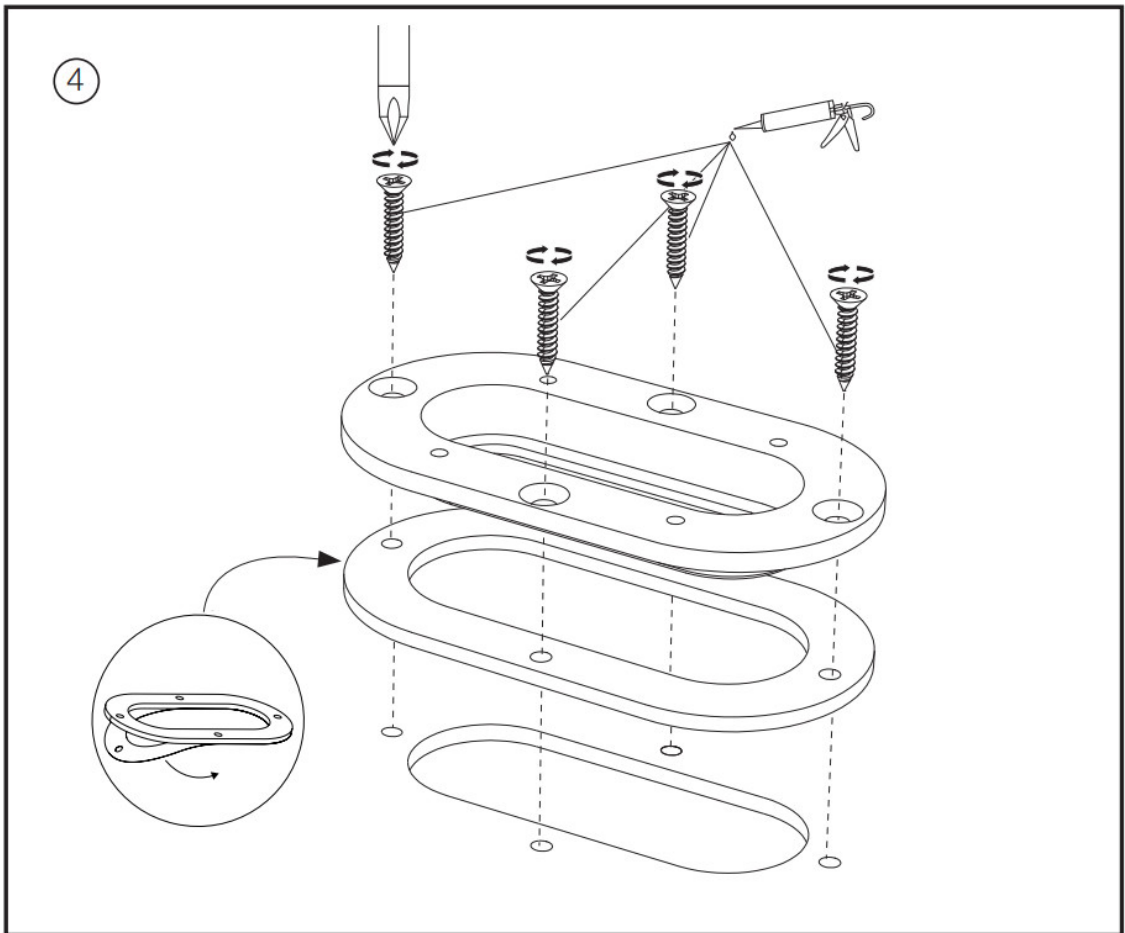


⑥

Tip : freeze bung before drilling

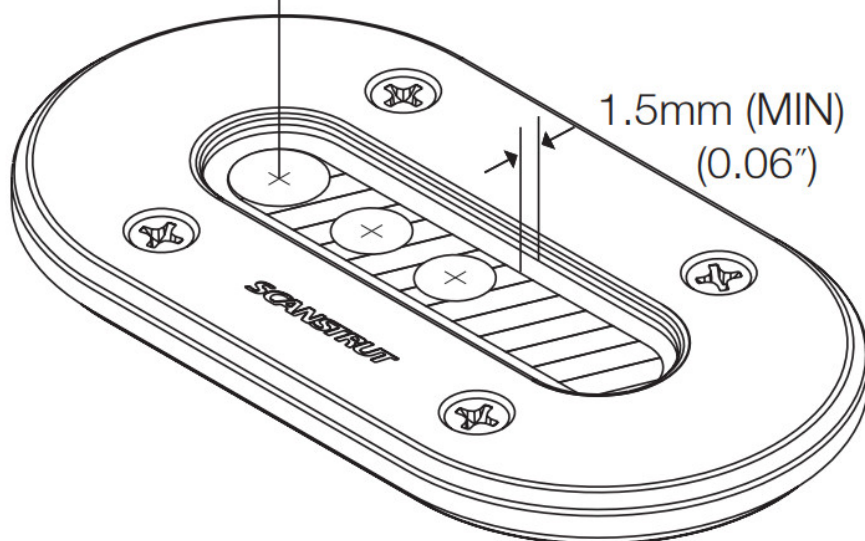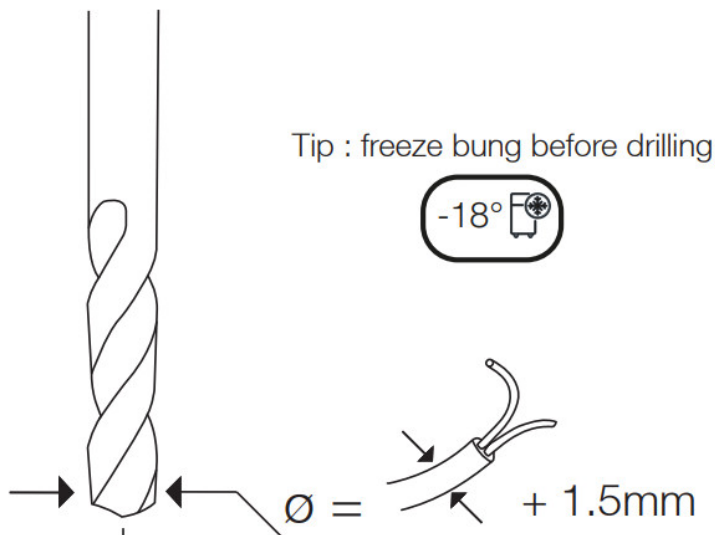

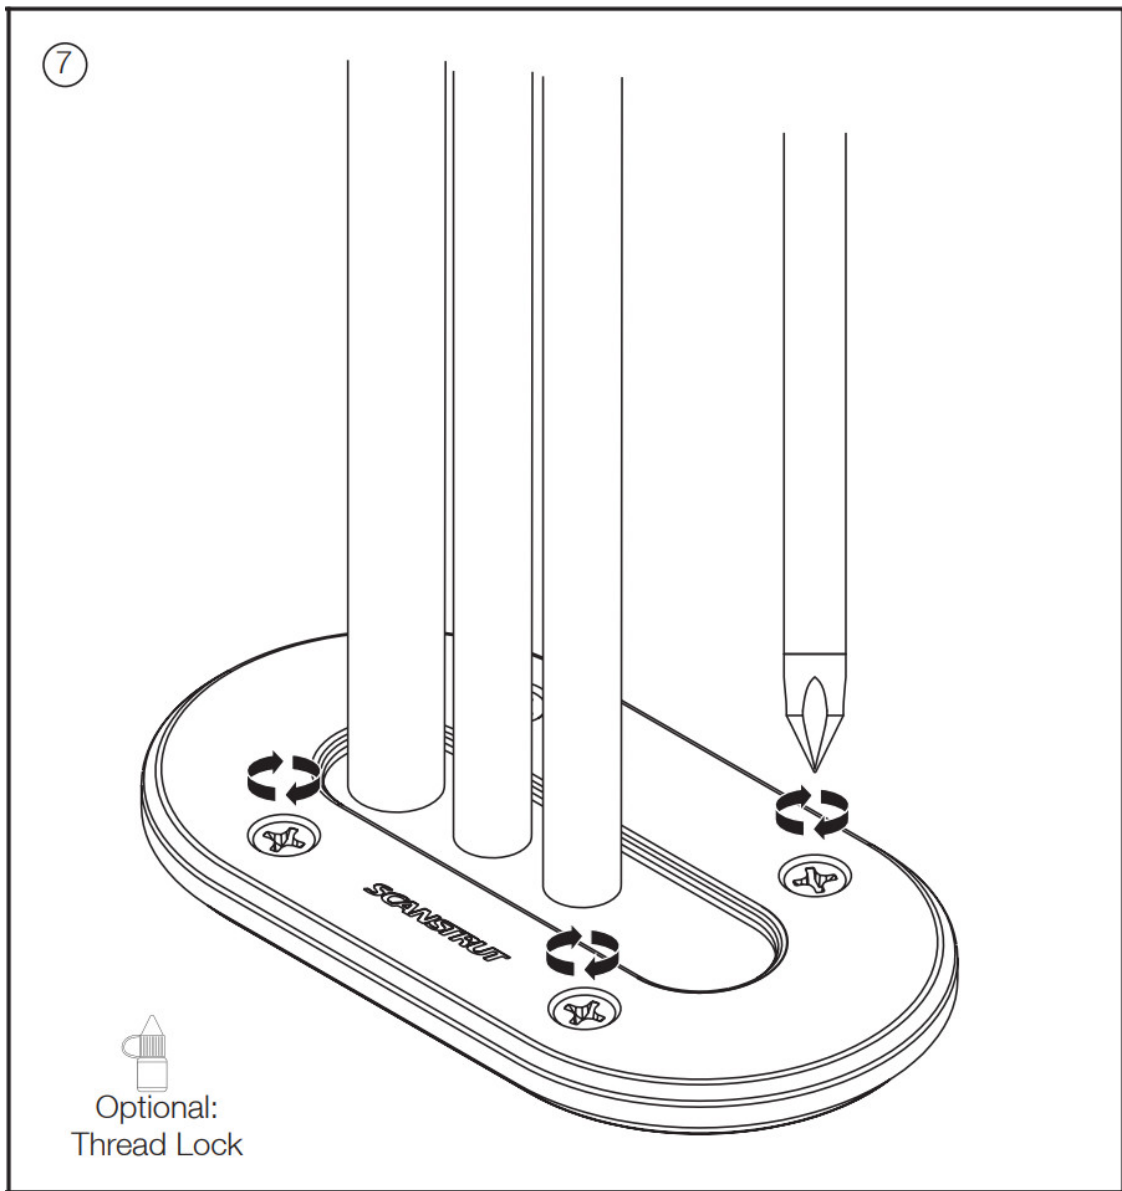

Cutting Template

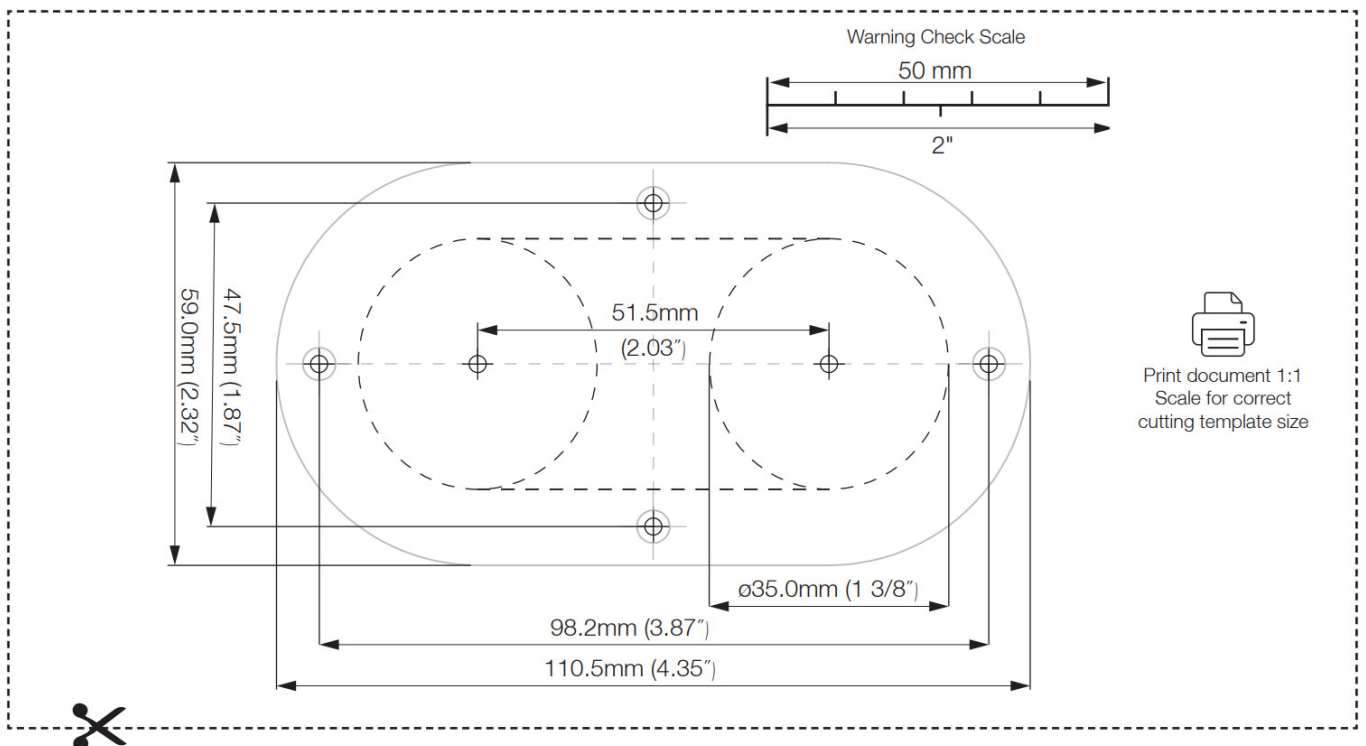

For further installation and warranty information please visit: www.scanstrut.com

SCANSTRUT®

UK & International

+44 (0)1392531280


sales@scanstrut.com

USA

+1 860 308 1416

usasales@scanstrut.com

Documents / Resources

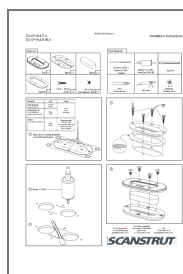

[SCANSTRUT DS-LP-MULTI-S Low Profile Multi Cable Seal](#) [pdf] Installation Guide
DS-LP-MULTI-S Low Profile Multi Cable Seal, DS-LP-MULTI-S, Low Profile Multi Cable Seal, Profile Multi Cable Seal, Multi Cable Seal, Cable Seal

References

- [User Manual](#)

[Manuals+](#)