Home » SCANSTRUT » SCANSTRUT DS-MULTI-P-BLK Deck Bushing Multi Bushing Installation Guide 🖺



# SCANSTRUT DS-MULTI-P-BLK Deck Bushing Multi Bushing **Installation Guide**

11-11-2022 (Issue 1)

# Contents

- 1 DS-MULTI-P-BLK
  - 1.1 Installation Instructions
    - 1.1.1 Parts List
    - 1.1.2 Tools Required
- 2 Documents / Resources
  - 2.1 References
- **3 Related Posts**

## **DS-MULTI-P-BLK**

## **Installation Instructions**


#### **Parts List**


Top x1	Base x1	Bung x1
Gasket x1	No.6 x 19mm Screw x4	Black M4 x 14mm Bolt x4

**Tools Required** 


Pozi Screwdriver	Silicone
ø2.5mm (3/32") ø3mm (1/8") Drill Bit	Required Cable Hole Drill Sizes Max. ø15mm (19/32")

Material	Drill	Fixing
Soft Material e.g. plywood	2.5mm (3/32 ")	No.6 Screw (Included)
Hard Material e.g. fiberglass, hardwoods, acry lics	3mm (1/8")	
Metal e.g. Steel, aluminium	4mm (1/8")	Recommended >M4 x 12mm Countersunk Bolt with washer and Nyloc (Not in cluded)

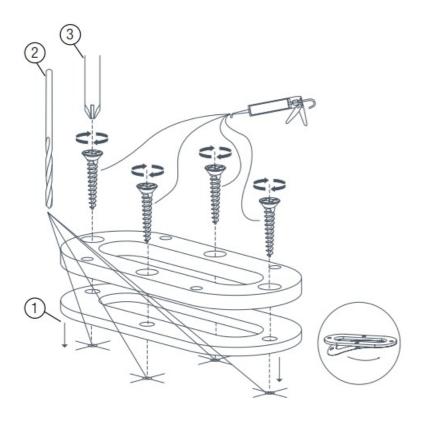

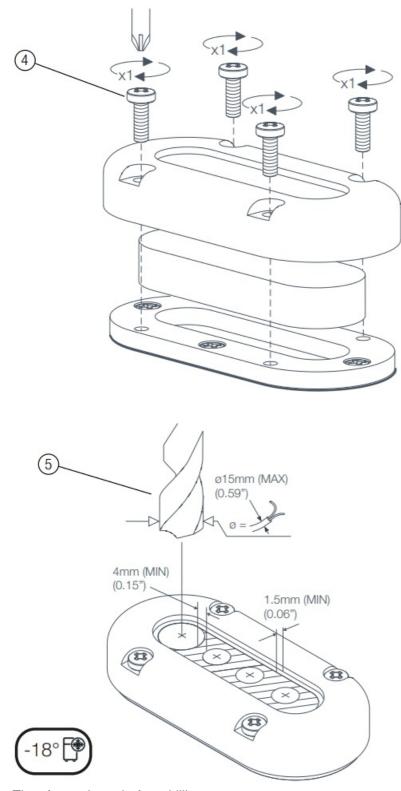

Tip – freeze bung before drilling

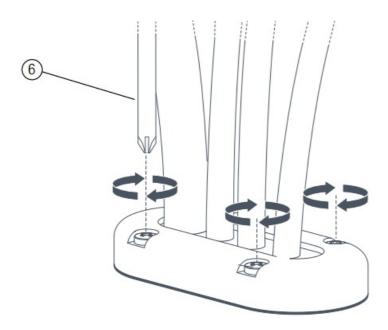

UK & International +44 (0)1392531280 sales@scanstrut.com

For further installation and warranty information please visit: www.scanstrut.com

USA +1 860 308 1416 usasales@scanstrut.com



## **Documents / Resources**



SCANSTRUT DS-MULTI-P-BLK Deck Bushing Multi Bushing [pdf] Installation Guide DS-MULTI-P-BLK, DS-MULTI-P-BLK Deck Bushing Multi Bushing, Deck Bushing Multi Bushing, Multi Bushing, Bushing Multi Bushing, Bushing

## References

• User Manual

#### Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.