



SCANSTRUT DS6-P / DS6-P-BLK Vertical Cable Seal Installation Guide

[Home](#) » [SCANSTRUT](#) » SCANSTRUT DS6-P / DS6-P-BLK Vertical Cable Seal Installation Guide 

Contents


- [1 SCANSTRUT DS6-P / DS6-P-BLK Vertical Cable Seal](#)
- [2 Parts List](#)
- [3 Tools Required](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)

SCANSTRUT®


SCANSTRUT DS6-P / DS6-P-BLK Vertical Cable Seal




Parts List

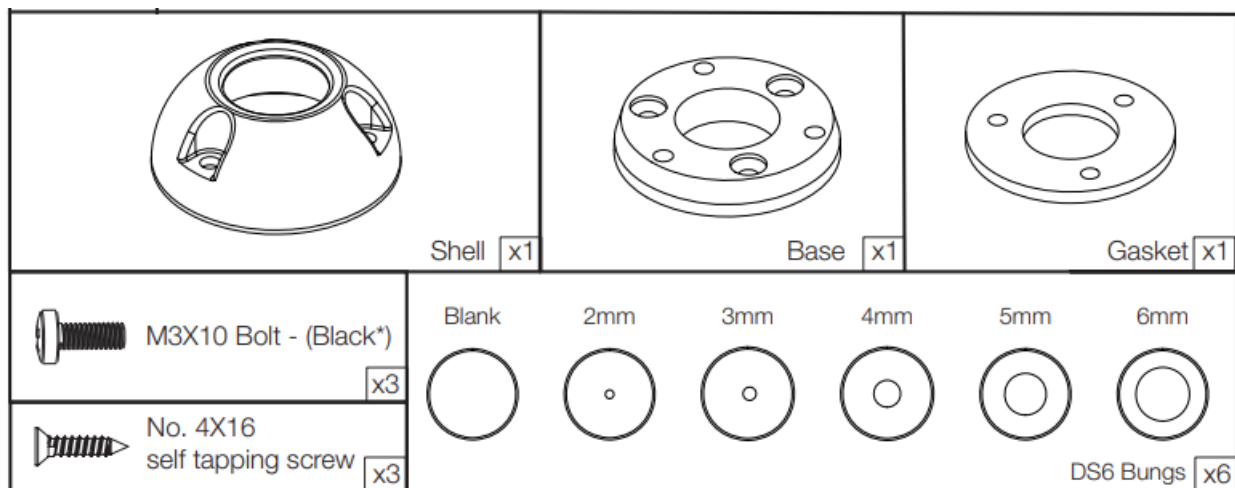


Tools Required

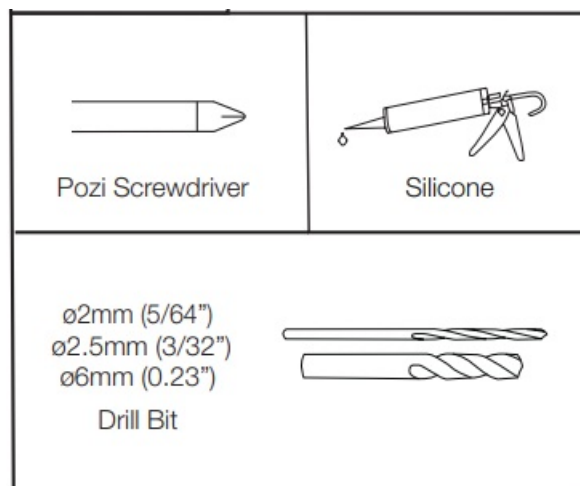


Choose bung closest to cable ø.

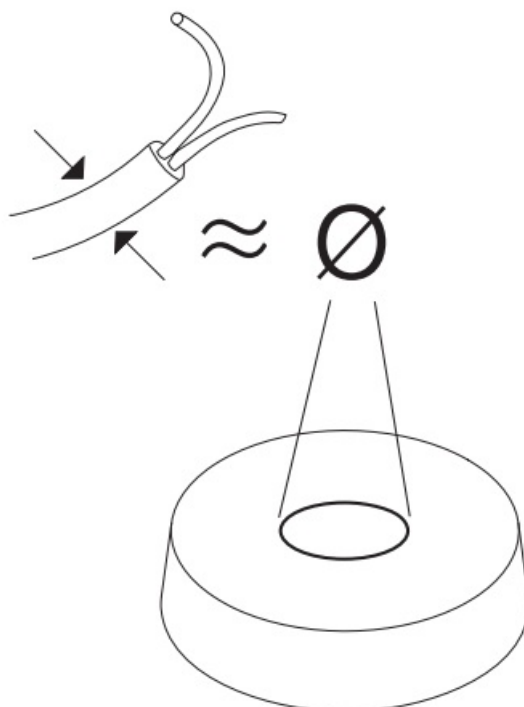

Material	No. 4 Screw
Soft Material e.g. plywood	2mm (5/64")
Hard Material acrylic, hardwoods	2.5mm (3/32")

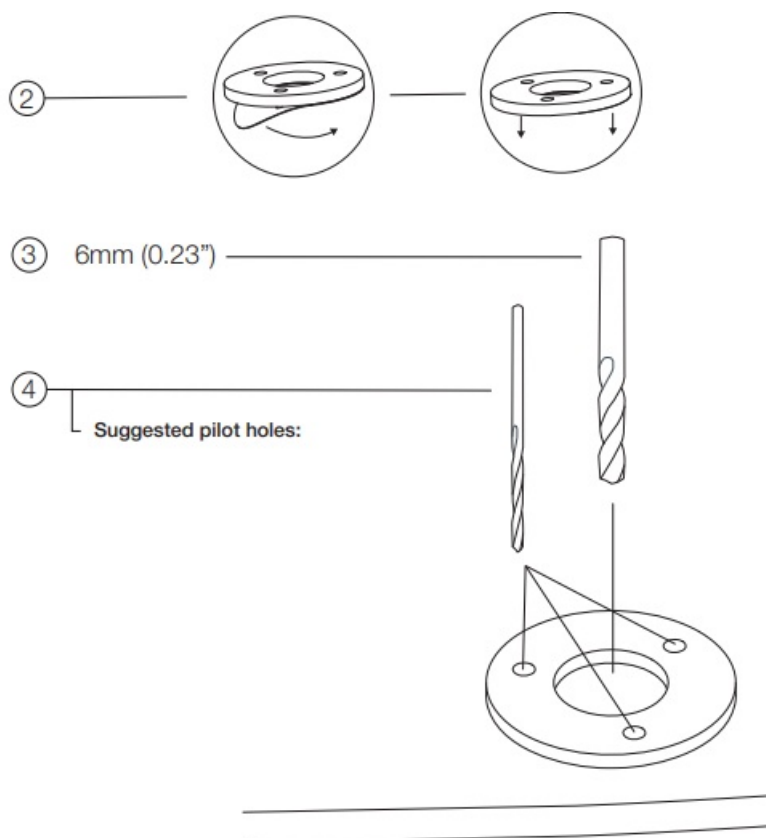

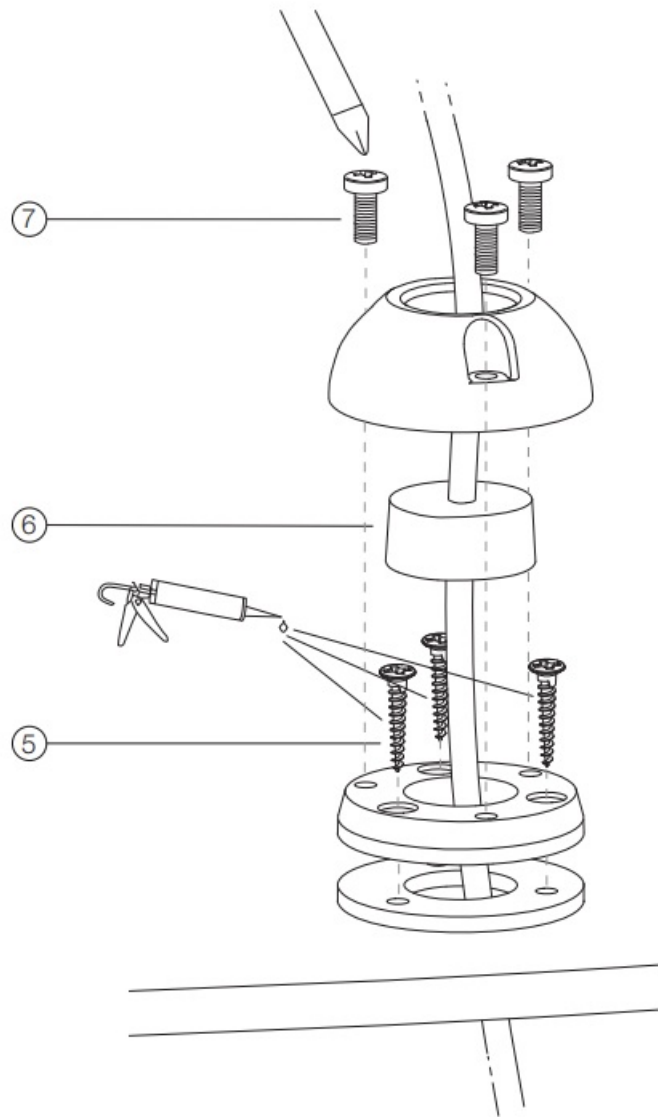

Share your installation with us.



@scanstrut

For further installation and warranty information please visit:

www.scanstrut.com

UK & International

+44 (0)1392 531280


sales@scanstrut.com

USA

+1 860 308 1416

usasales@scanstrut.com

Documents / Resources

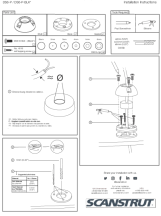

[SCANSTRUT DS6-P / DS6-P-BLK Vertical Cable Seal](#) [pdf] Installation Guide

DS6-P, DS6-P-BLK, Vertical Cable Seal, Cable Seal, Vertical Seal