



SCANSTRUT ROKK Wireless Sub SC-CW-07E Installation Guide


[Home](#) » [SCANSTRUT](#) » SCANSTRUT ROKK Wireless Sub SC-CW-07E Installation Guide 



17-09-20 Issue 2
Installation Instructions

ROKK Wireless Sub (SC-CW-07E)



Parts List

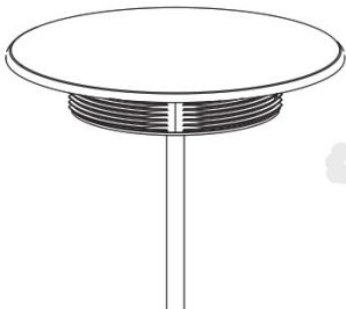	
Charger	Alcohol wipe

Technical Information

Input voltage range :	10-30V DC(12/24V system
Input currant max	1.5A
Output	5W (5V,1A)
Standby current draw	<0.03W
Certifications	Qi, CE,FCC, ROHS
Waterproof rating:	IPX6 front and back

Tools Required

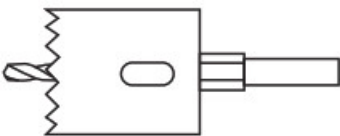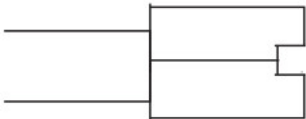
	Power drill
	64/65mm(2.5") Hole Saw)
	Straight router




READ THE IMPORTANT SAFETY INFORMATION LEAFLET BEFORE

INSTALLING

Install options and cut out dimensions

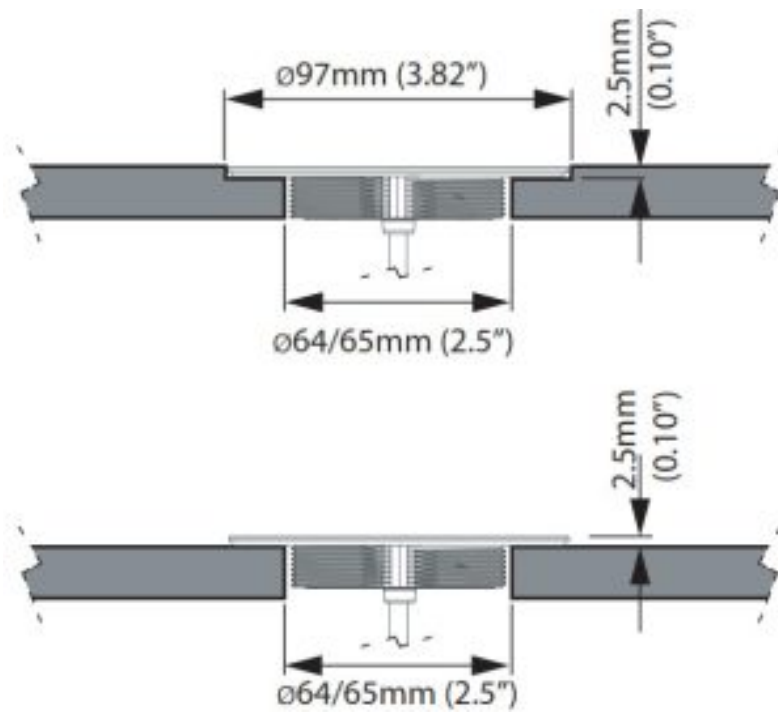


Remove self-adhesive backing

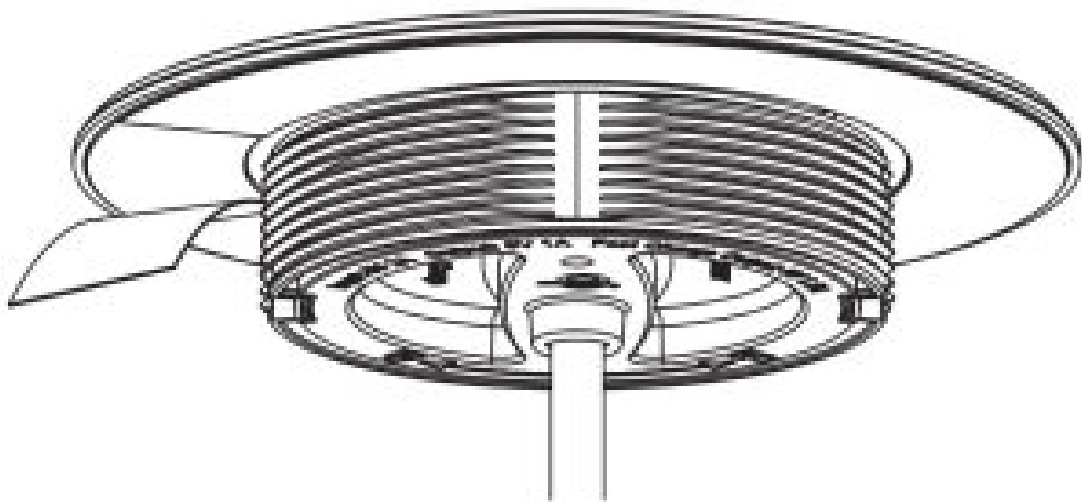


Optional threaded locking ring available separately if self-adhesive is not suitable for the mounting surface. Part #: SC-CW-LOCK-01


Use an alcohol wipe to ensure the surface is free from dirt or grease and insert into the hole.

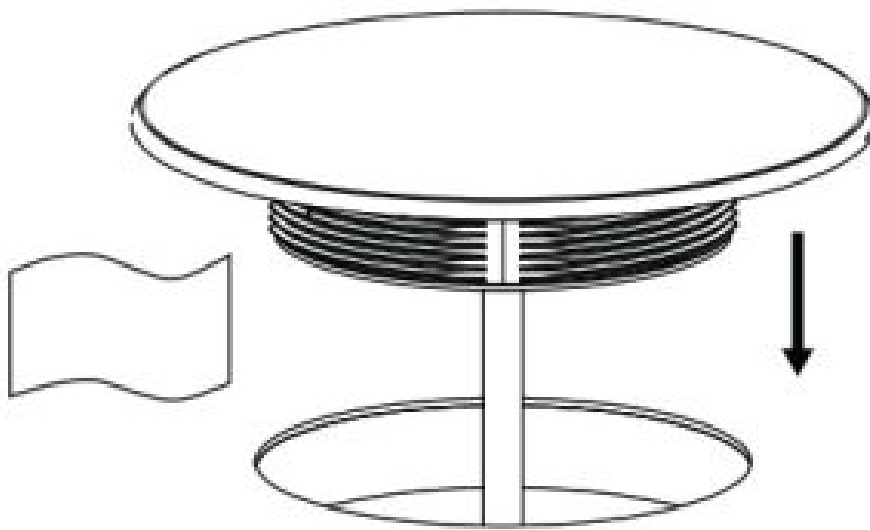

Overlay your choice of non-metallic surface, including wood, fabric, or marine traction surface. (Not provided). Maximum thickness $\leq 3\text{mm}$. Ensure the charging logo is concentric over the charger.

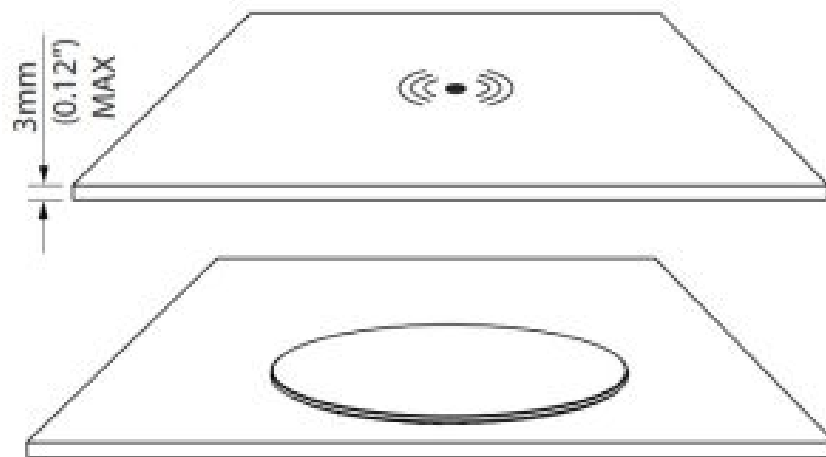

Connect wires to 12-24V supply, ensuring a waterproof connection. Fuse appropriately according to the input voltage and current, check the product is functioning correctly.

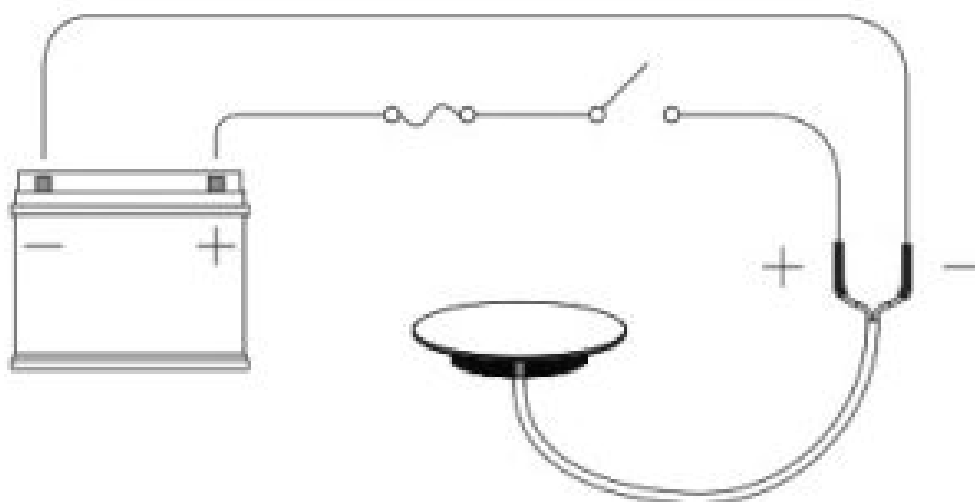

SCANSTRUT.


Contents

[1 Documents /](#)

[Resources](#)

[2 Related Posts](#)

Documents / Resources

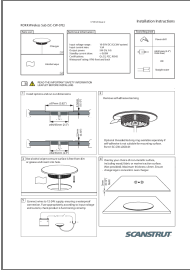	SCANSTRUT ROKK Wireless Sub SC-CW-07E [pdf] Installation Guide SCANSTRUT, ROKK, Wireless Sub, SC-CW-07E
---	--

[Manuals+.](#)