



SCANSTRUT SC-CW-01F ROKK WIRELESS CHARGE HIDDEN 10W Installation Guide

[Home](#) » [SCANSTRUT](#) » SCANSTRUT SC-CW-01F ROKK WIRELESS CHARGE HIDDEN 10W Installation Guide 



ROKK WIRELESS CHARGE HIDDEN 10W (SC-CW-01F) Installation Instructions

Contents


- 1 SC-CW-01F ROKK WIRELESS CHARGE HIDDEN 10W
- 2 Technical Information
- 3 Documents / Resources
 - 3.1 References
- 4 Related Posts

SC-CW-01F ROKK WIRELESS CHARGE HIDDEN 10W


Parts List		
	Locking Ring	 Magnet Installation Tool with x2 magnets
	Qty:3 No6 x 1/2" Self tapping screw	
	Charger	 Self Adhesive EPDM Rubber
		 Alcohol wipe

Tools Required		
		
Pozi Screwdriver	Straight Router	Silkaflex 292-i (Optional)


1. If the mounting surface is thinner than 3mm go to step

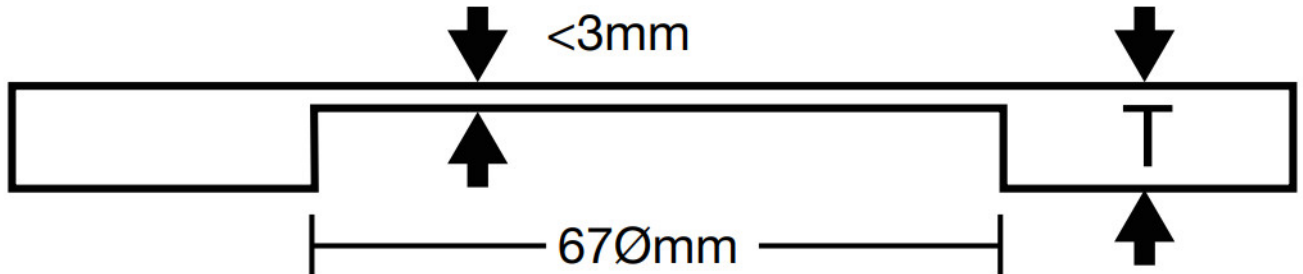


2. If greater than 3mm, rout a pocket 67mm (2.6") diameter till 3mm thickness is achieved. 2 Screw or bond locking ring in the correct orientation to the underside of the surface according to the measured material thickness (Sikaflex 292-i recommended).

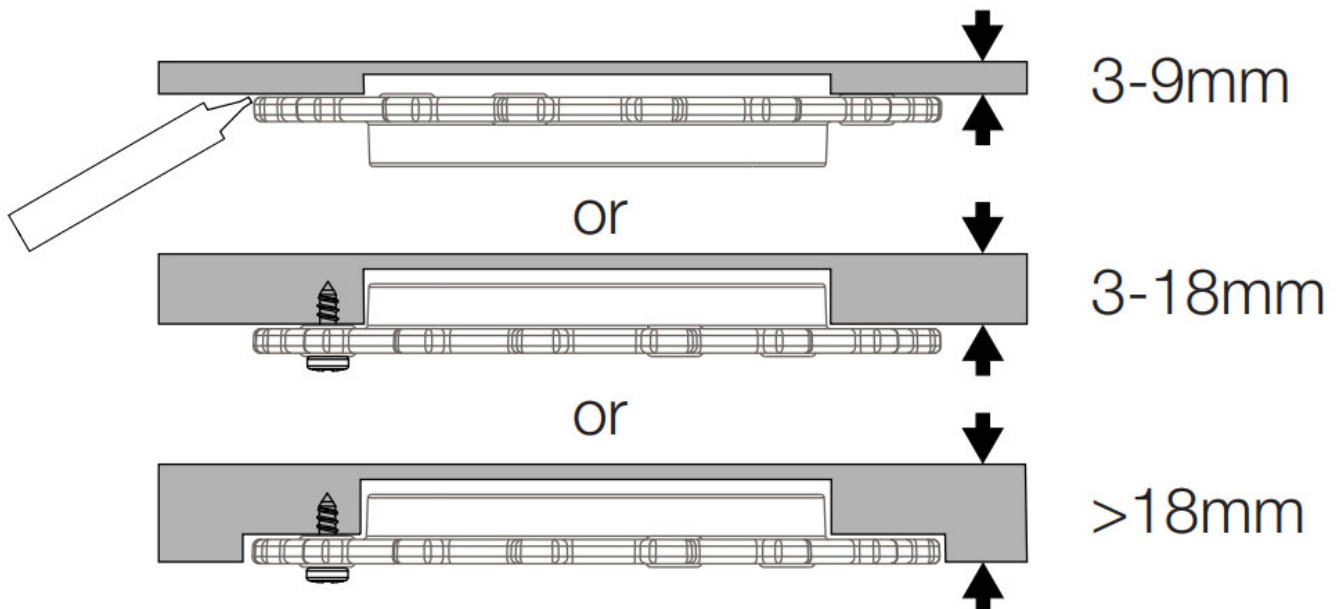


3. a Option 1 – CNC etches the logo onto the top surface. Do not exceed 0.5mm.

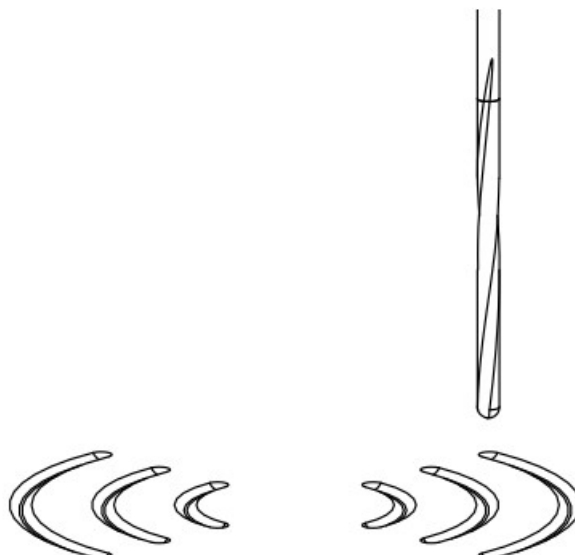


3b Option 2 – Use adhesive EPDM rubber and align with magnet tool provided. Use an Alcohol wipe to ensure the surface is free from dirt or grease

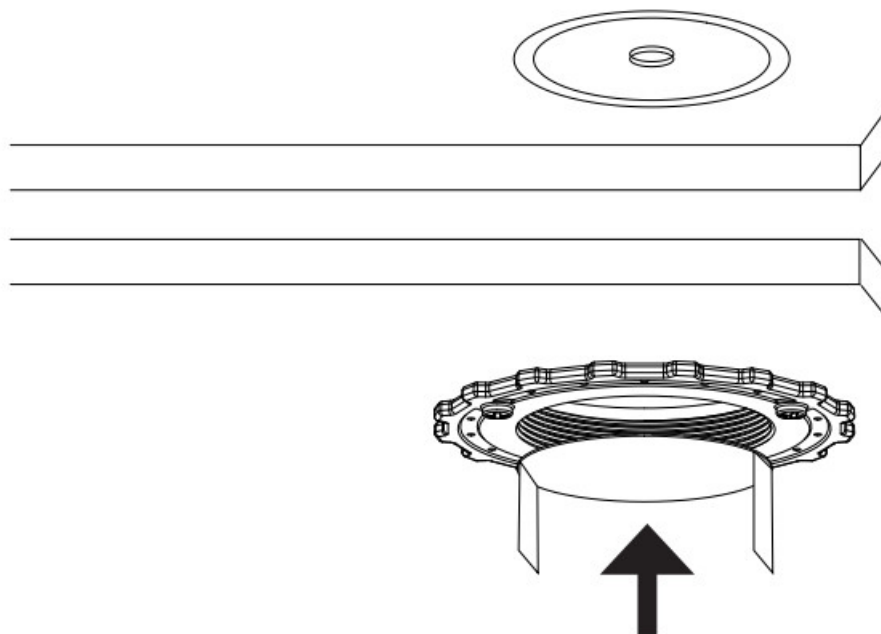


4. Screw in the charger until firm, do not over-tighten. Do not use tools.

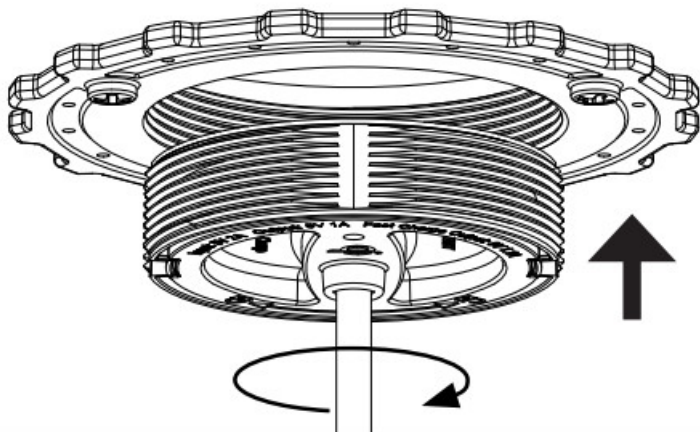

5. Connect wires to 12/24V supply, ensuring a waterproof connection. Fuse according to the input voltage and current.

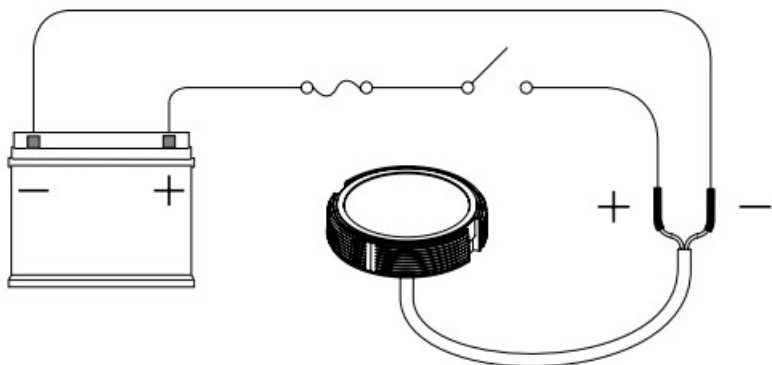

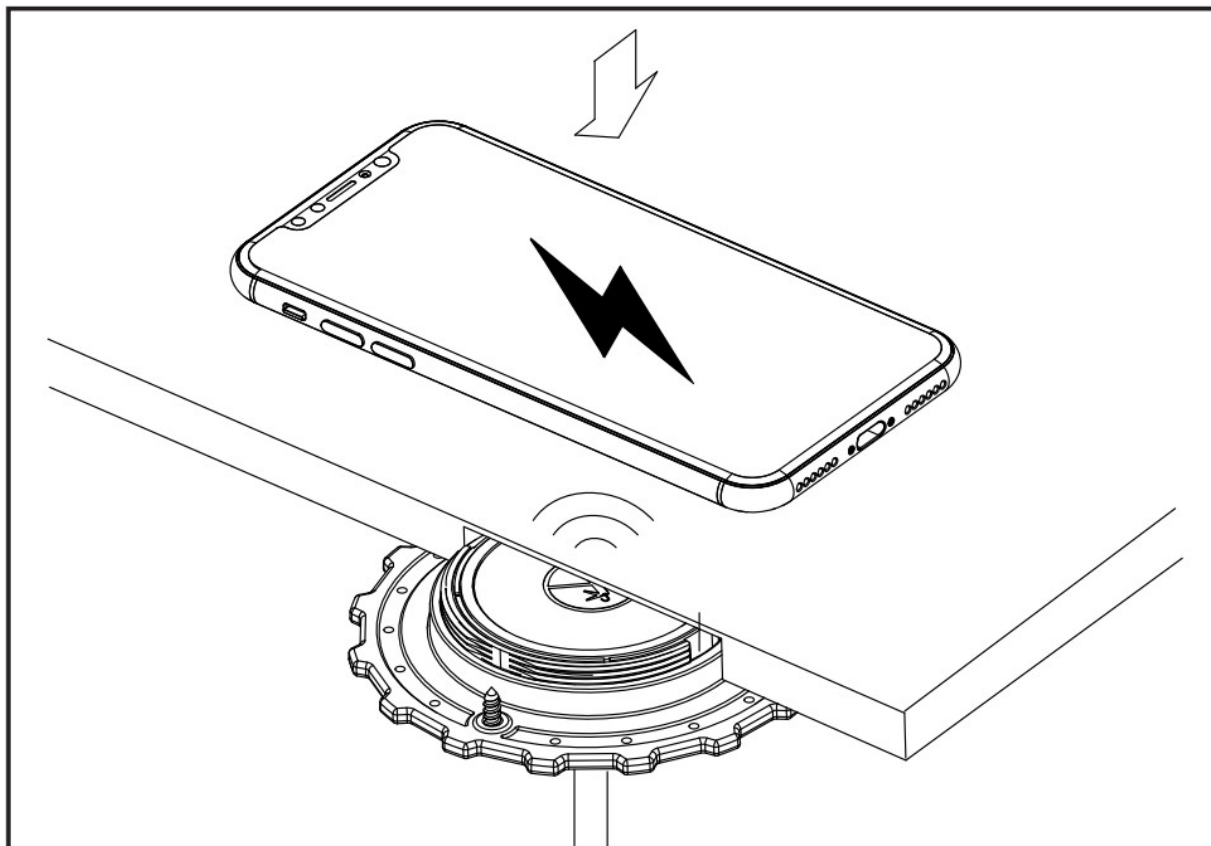

Share your installation with us.

Technical Information

Input voltage range	(110/230VAC system)
Input current max	2A
Output power	10W (9V, 1.1A)
Standby current draw	< 0.1W
Waterproof rating	IPX6 front and back
Certifications	Qi, CE, UKCA, FCC, ROHS, UNECE R10 E24, RCM



READ THE IMPORTANT SAFETY INFORMATION LEAFLET BEFORE INSTALLING



UK & International
+44 (0)1392531280

sales@scanstrut.com



For further installation and warranty information please visit: www.scanstrut.com

USA

+1 860 308 1416 usasales@scanstrut.com

SCANSTRUT

Documents / Resources

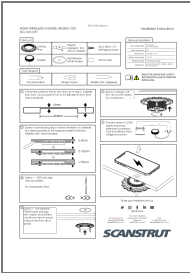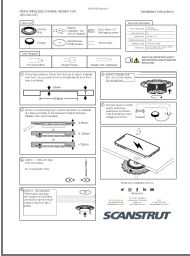	SCANSTRUT SC-CW-01F ROKK WIRELESS CHARGE HIDDEN 10W [pdf] Installation Guide SC-CW-01F, ROKK, WIRELESS CHARGE, 10W
	SCANSTRUT SC-CW-01F Rokk Wireless Charge Hidden 10W [pdf] Instructions SC-CW-01F, Rokk Wireless Charge Hidden 10W, Wireless Charge Hidden 10W, SC-CW-01F, Charge Hidden 10W

References

- [S Mounts, Waterproof Wireless Chargers, Cable Seals for Marine and Outdoor Technology | Scanstrut](#)