

## SECURE How to install static cling window film Instructions

[Home](#) » [SECURE](#) » SECURE How to install static cling window film Instructions 

### Contents

- [1 How to install static cling window film](#)
- [2 COMMODITY COMPOSITION](#)
- [3 TOOLS NEEDED](#)
  - [3.1 Preparation](#)
- [4 INSTALLATION STEPS](#)
- [5 TIPS](#)
- [6 FAQ](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)


### How to install static cling window film

#### COMMODITY COMPOSITION



The window film itself has various sizes and colors

#### TOOLS NEEDED

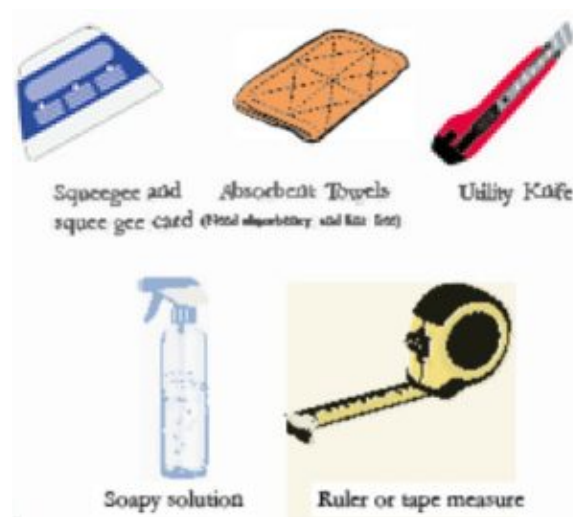

## Preparation



Soapy solution= 6 drops liquid soap + 16 oz. (500ml) water

## INSTALLATION STEPS

### 1. Clean window

Generously spray the window with the soapy solution, use a razor blade to remove stubborn dirt or paint.




### 2. Measure window

Measure width and height of the window



### 3. Cut the film

at least an inch bigger than the window on all (our sides. The excess will be trimmed once the film is applied.

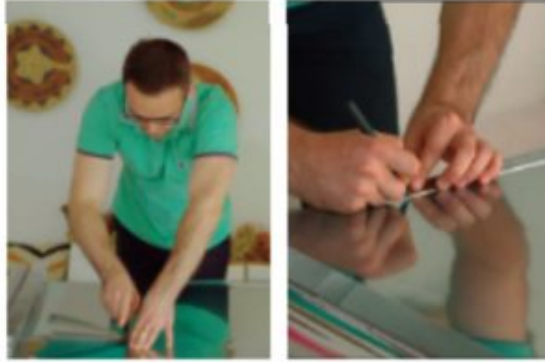

**4. Remove the backing liner & Wet window film**

Peel off the backing liner (transparent liner) from one corner, and then spray soapy solution, soaking both the window and drying side of the film.

**Hint:** Window film has 2 parts, the film & clear backing liner

Have a helper hold the film by the edges while you spray

A fully wet window and the film are the keys to installing lying successfully without bubbles.



**5. Apply the film to glass**

Hold the film so that the smooth side is tilting the window and apply to the glass. Use your hands to smooth the film out and position it so that the excess ' 1 inch is overlapping the 1 window on all four sides.



**6. Squeegee to remove bubbles**

Lightly squeegee the centerline of the film from top to bottom to set it in place. Begin smoothing the film, starting at the right side and working downward. Repeat the process for the left side.




#### 7. Trim extra film

Use the squeegee as a guide. trim the film around all four sides.



#### 8. Dry edges

Wipe frame edge dry.

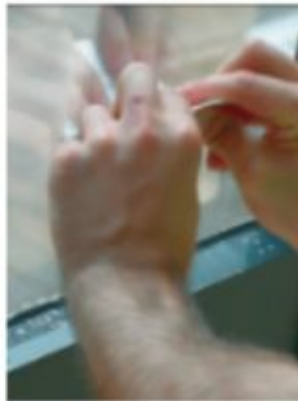

### TIPS

1. Keep the die window and film extremely wet during the installation process. If it becomes dry, re-wet it completely before applying the film.
2. When you squeegee out all bubbles, please use the cloth as a cushion between the squeegee and the film to avoid making scratches.
3. Application is easier with two people, especially on larger windows (3-4 feet wide).
4. Apply the film to cool shaded windows when glass temperature is between 45-90°F. For best rest, do not apply in direct sunlight or freezing weather.

### NOTICE

1. Do not apply any film to frosted, treated, etched, stained glass, or any otherwise flawed or defective glass.
2. Do not apply the film to motor vehicle windows.

3. Handle the film carefully while installing to avoid wrinkles or creases. which can't be removed.
4. If you notice imperfections such as air bubbles or debris between the film and the glass, simply peel the affected area of the film away from the glass and use the tip of your utility knife or squeegee to remove any debris or bubble.

## FAQ

1. Is the film difficult to apply to?

Anyone can install window film, but there may be a learning curve. It will be easier once you practice with a smaller window first

2. The film is not adhering. Why?

Window films come with a backing liner to protect the non-adhesive or static surface. The backing liner needs to be separated from the film first.

3. Is this applied inside or outside of the window?

Inside. All window films should be Stalled inside except for films that are specified as "EXTERIOR FILM!"

4. Which liquid soap should I use for the water solution?

Any type is fine, from dishwasher to hand soap. You may get the best result with baby shampoo.

5. How come I don't have privacy at night?


The privacy effect works when there is a difference in lighting. At night, if it is brighter inside than it is outside, the privacy effect will be reversed. This is why our privacy films are known as daytime privacy films.

6. Can I remove this film later?

Yes. A fabric steamer or a heat gun can heat up the film and loosen the adhesive.

• Keep privacy • Reduce UV rays • Block heat • Save energy • Environmental protection

## Documents / Resources

	<p><a href="#">SECURE How to install static cling window film</a> [pdf] Instructions SECURE, install, static, cling, window, film</p>
-------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------