



SECURE NoWasher Assembly Instructions

[Home](#) » [SECURE](#) » SECURE NoWasher Assembly Instructions 

SECURE NoWasher Assembly Instructions




Parts


Ax2
Side
Frame



Bx1
Upper Shelf

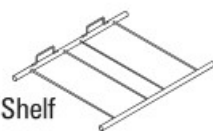

Cx6
Lower Shelf

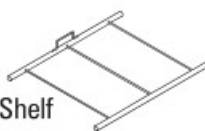


Dx1
Laminate
Top




Ex1
Top Scroll Frame



Fx2
Narrow Drawer

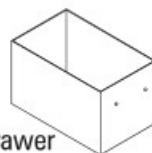

Gx6
Wide Drawer

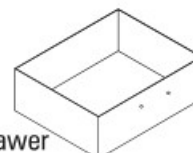

Hx32
Screw



Ix2
Narrow
Bottom Panel



Jx6
Wide
Bottom Panel



Kx8
Handle



Lx16
Screws





NOTE: Finger tighten screws until fully assembled, unless instructed to "tighten fully".

Assembly

1


NOTE: Assemble frames so the back slots face each other.

1. Lay 1 of the side frames (A) on its side and attach the 1 upper (B) and 6 lower shelf rails (C) and laminate top (D) using 16 screws (H), 2 screws in each.
2. Prop the remaining side frame (A) along the open end of the rails and attach it with the remaining 16 screws.

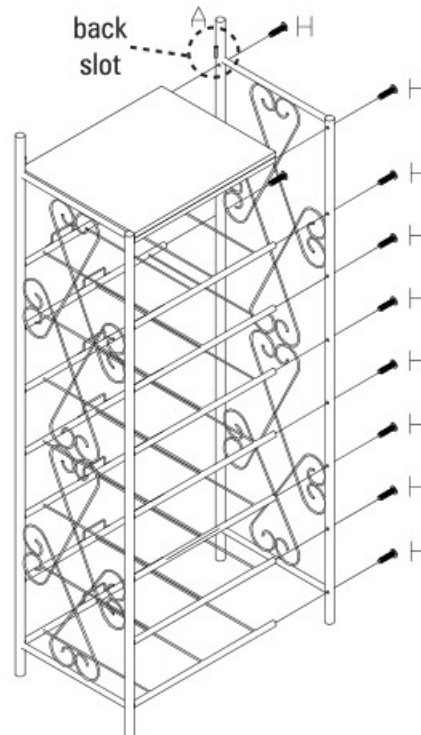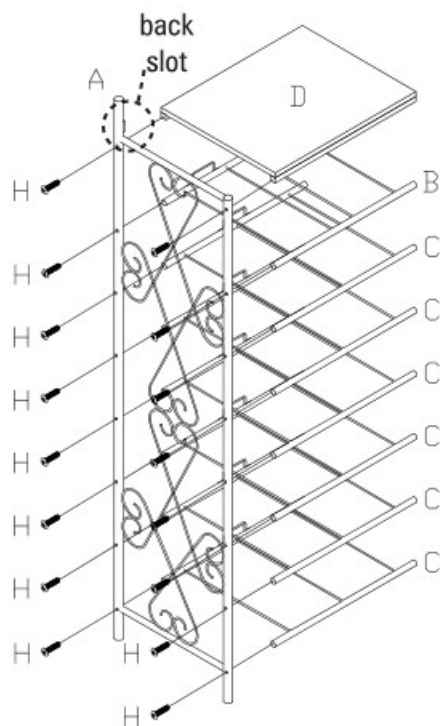


Assembly cont'd



- 2** Slide the top scroll frame (E) into the back slots of the side frame.

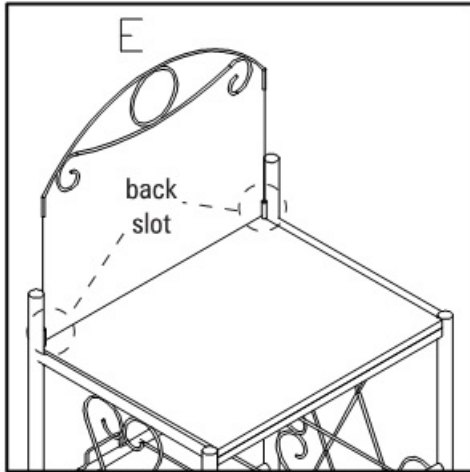

- 3**
1. Unfold the 2 narrow green drawers (F) and place bottom panel (I) into the bottom of the drawer.
 2. Unfold the remaining 6 drawers (G) and insert bottom panels (J) into the bottom of the drawers.
 3. Align the handles (K) with the front of the drawers. Pass a screw (L) through into the handle. Use a Phillips screw driver to tighten screw. Repeat for all handles.

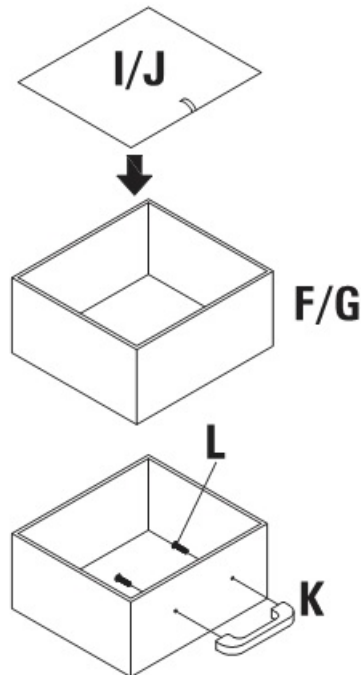

- 4** Slide assembled drawers into the frame. The 2 narrow green drawers (F) fit on the upper shelf rail (B).

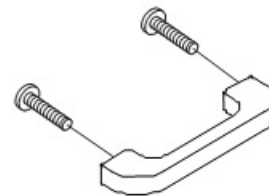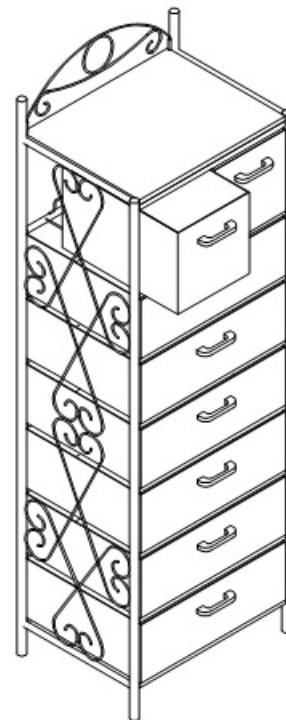

NOTE: Screws may already be screwed into handles.

Thank you for your order!

We appreciate your business. Additional information on your product may be available on our website.



Happy?



Not happy?

Wonderful! We are very glad.
Please share your experience with
us and others. It helps us know
what you like best!

- Missing parts?
- Having trouble with assembly?

WARNING

Attach the unit to the wall with the Tipping Restraint Kit hardware. Follow the instructions printed on restraint kit's bag to install.

Serious or fatal crushing injuries can occur from furniture's tipping over. To help prevent tipping:

- Avoid climbing on or hanging on product.
- Unless specifically designed to accommodate, do not set TVs or other heavy objects on top of this product.
- Place heaviest items in the lowest position possible.
- Secure product to the wall with tipping-restraint.

The use of tipping restraints may only reduce, not eliminate, the risk of tipping over.

Contents

[1 Documents / Resources](#)

[2 Related Posts](#)

Documents / Resources



[SECURE NoWasher Assembly](#) [pdf] Instructions
SECURE, NoWasher, Assembly

