




## SELECT HINGES SL11 Concealed Geared Continuous Hinges Installation Guide

[Home](#) » [SELECT HINGES](#) » SELECT HINGES SL11 Concealed Geared Continuous Hinges Installation Guide 

### SELECT HINGES SL11 Concealed Geared Continuous Hinges



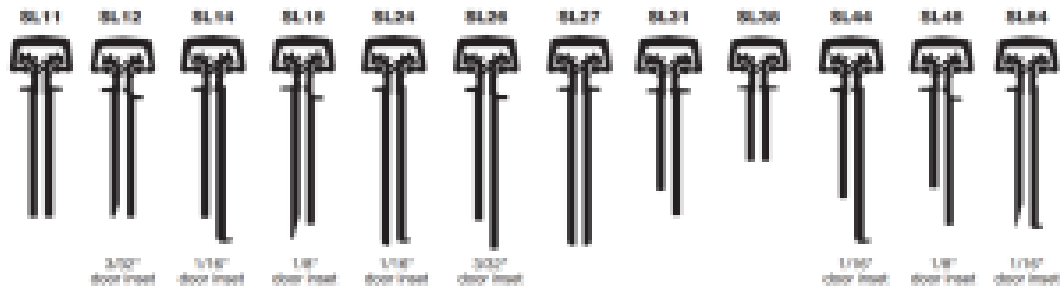

## Contents

- 1 Calculating Required Door Clearances
- 2 Tools Needed
- 3 Parts Supplied
  - 3.1 Optional Parts
- 4 How to Cut the Hinge to Fit
- 5 Reinforcing & Rivnuts®
- 6 Grouted/Slushed-in Frames
- 7 Fire-Rated Hinges
- 8 Documents / Resources
- 9 Related Posts

## Calculating Required Door Clearances

### For Square and Beveled-Edge Doors

**IMPORTANT:** All standard length SELECT hinges are supplied slightly shorter than nominal door height to avoid threshold or flooring clearance problems.



**IMPORTANT:** All uncut concealed hinges are non-handed and templated. Models SL11, SL27 and SL38 remain non-handed after cutting. All other concealed hinges become handed after cutting.

**IMPORTANT:** Refer to NFPA 80 manual for clearance requirements on fire-rated entrances.

### Important Warranty Information:

The following actions will void any warranty, expressed or implied:

- Failure to install the hinge according to manufacturer's specifications and requirements. (For more information, visit [selecthingerequirements.com](http://selecthingerequirements.com).)
- Use of fasteners other than those supplied with the hinge.
- Unauthorized field modifications, including alteration or removal of the factory-applied lubricant, altering the original finish or painting the hinge.

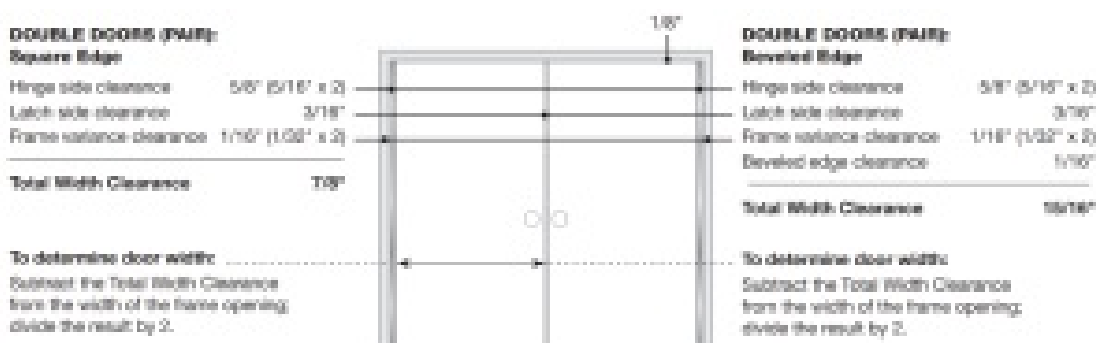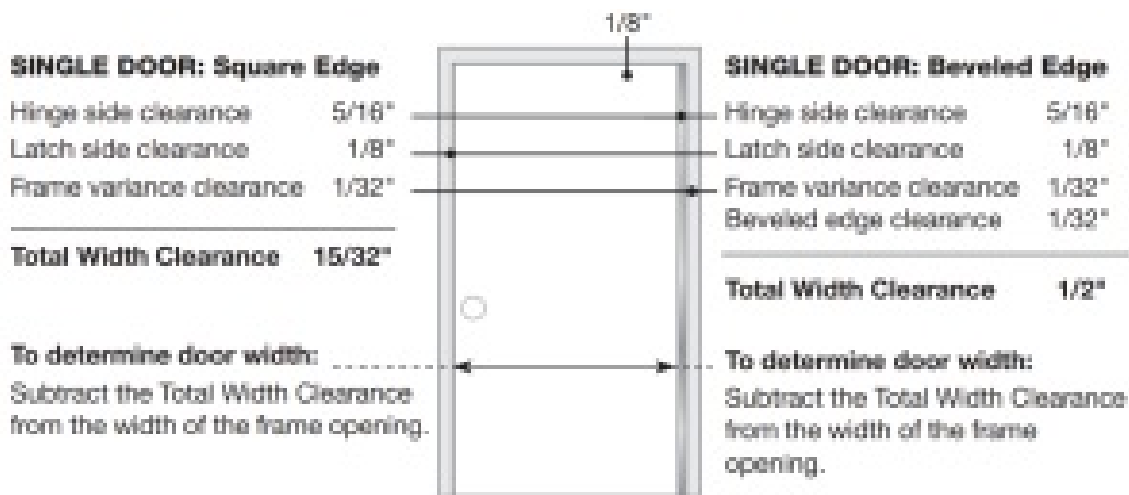

**NOTE:** For double-door entrances with a mullion between the pair of doors, calculate each door width using the Single Door clearances. For double-door entrances with a mullion behind the pair of doors, calculate each door width using the Double Doors clearances.

## Tools Needed

- Metal-cutting saw
- Tape measure
- #13 or 3/16" drill bit
- 5/32" drill bit (wood frames/doors)
- #3 Phillips drive
- Shims

## Parts Supplied


- #12-24 self-drilling, thread-forming (SDTF) 410 SS Phillips undercut flathead screws

#### Optional Parts

- #12 410 SS Phillips undercut flathead wood screws
- #12-24 thread-forming (TF) 410 SS Phillips undercut flathead screws
- Protective gloves are recommended

#### How to Cut the Hinge to Fit

**A.** Keep hinge in “door closed” position (**Fig. 1**).

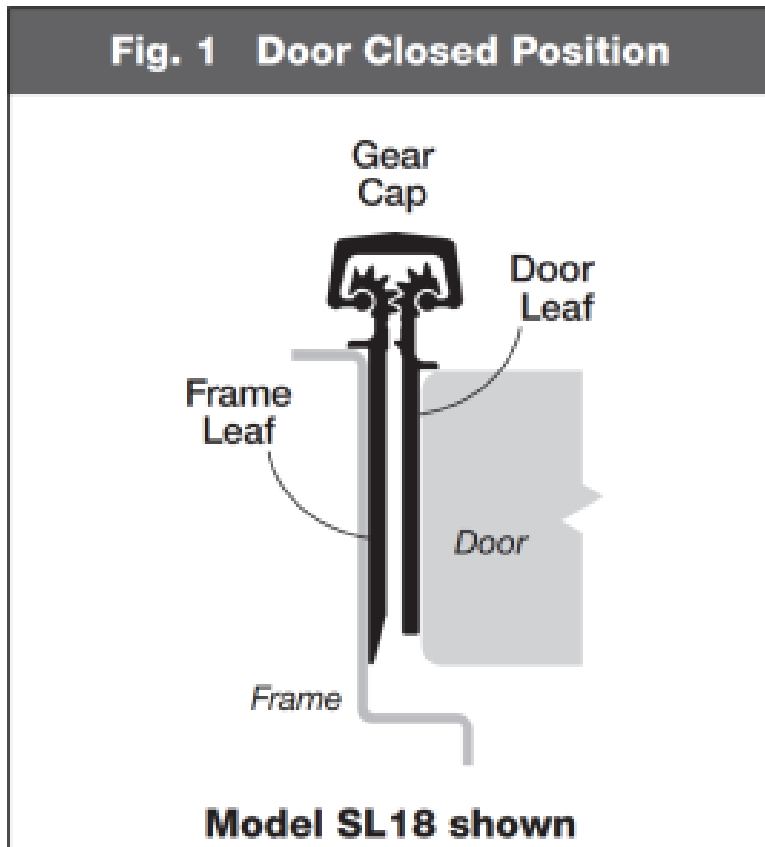

**B.** Determine whether this will be a right- hand or left-hand installation. **IMPORTANT:** Cut only one end of hinge. Cut end will be installed at the bottom. Keep original templated six-hole pattern at top end of hinge.

**NOTE:** SL11, SL27 and SL38 are non-handed and remain non-handed after cutting.


**C.** Using a metal-cutting saw, begin the cut through the gear cap first.

**NOTE:** DO NOT cut through a set screw bearing.

**D.** Reinstall any set screw bearing that may have been cut off.

#### A. Prepare Frame

1. Shim hinge to 1/8" below the header to allow for door clearance.
2. Hold hinge in “door open” position (**Fig. 2**), making sure frame leaf alignment flange is tight against frame face.

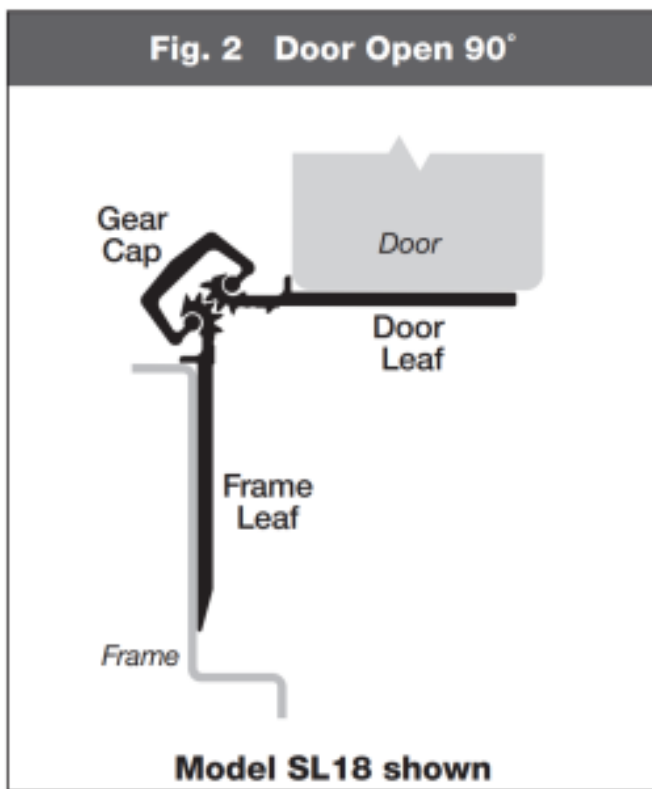

3. Mark (or centerpunch) hole locations.

**NOTE:** TF screws and wood screws require pilot holes at marked locations. SDTF screws do not require pilot holes.

4. If using SDTF screws, go to Step 5. If using TF or wood screws, drill holes at marked locations. DO NOT attach hinge to the frame at this time.

■ Metal frame: Use #13 (.185") bit or 3/16" (.188") bit

■ Wood frame: Use 5/32" (.156") bit


#### **B. Attach Door to Hinge**

5. Align the door leaf alignment flange or the door leaf lip along full length of door edge (even if door is slightly warped).

**IMPORTANT:** Top end of the hinge must be flush with the top of the door.

**IMPORTANT:** If installing hinge on a 90-minute fire-rated wood door, mark or centerpunch only one hole in each pair of holes at the top and bottom of the door leaf. DO NOT install remaining screws in the six-hole pattern on the door leaf.

See illustration below.

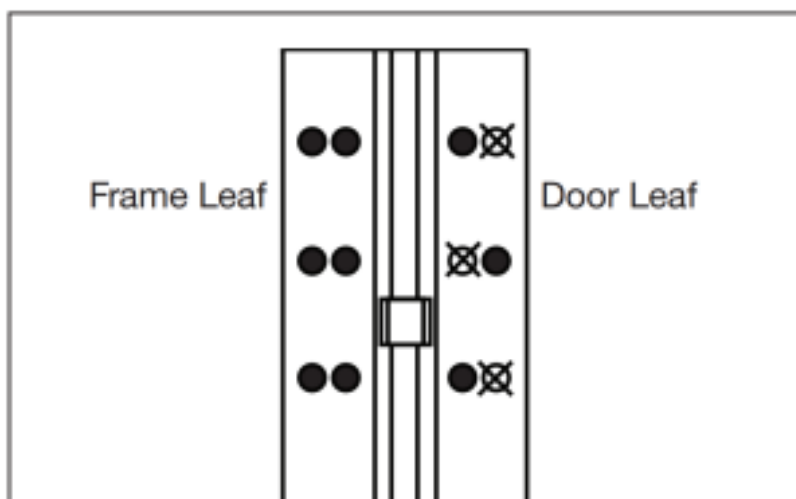


6. Mark (or centerpunch) holes. If using SDTF screws, go to Step 7. If using TF or wood screws, drill holes at

marked locations. Metal door: Use #13 (.185") bit or 3/16" (.188") bit Wood door: Use 5/32" (.156") bit

7. Fasten door leaf to door using #3 Phillips drive and fasteners provided.

### **C. Attach Door to Frame**

8. Position door at 90 degrees to the frame. Shim door to the proper height so the door aligns with the top screw holes.
9. Install two screws at the top of hinge. Remove shim and align remaining holes. Install screws in middle and bottom two holes.
10. Check door for proper swing and clearance before installing remaining screws.

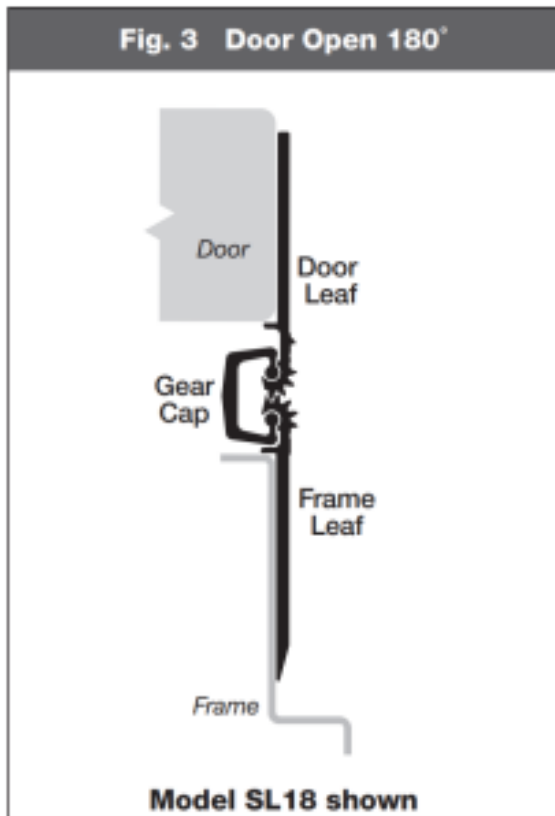

### **Reinforcing & Rivnuts®**

No hinge reinforcement is necessary except on extremely high-frequency, extremely heavy or extra-wide doors. Rivnuts are recommended for use in the frame when the door exceeds 450 lb. (max. 600 lb.).

**NOTE:** Only *SELECT* steel Rivnuts are to be used with fire-rated *SELECT* hinges.

### **Grouted/Slushed-in Frames**

For ease of installation, it is recommended some sort of mudguard be installed behind the frame. Do not use self-drilling, threadforming (SDTF) screws to drill into grouted frames. If mudguards have not been used, carefully drill pilot holes through frame and remove grout for screw clearance. Do not oversize holes in frame.


### **Fire-Rated Hinges**

All stock *SELECT* hinges are 90-minute UL-rated, without pins. Please contact *SELECT* for complete information about its fire-rated hinges.





## Documents / Resources

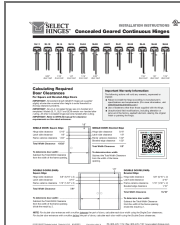

[SELECT HINGES SL11 Concealed Geared Continuous Hinges](#) [pdf] Installation Guide  
Concealed Geared Continuous Hinges, SL11, SL12, SL14, SL18, SL24, SL26