



# SHAD S0SL10RV Backrest Fitting Instruction Manual

[Home](#) » [SHAD](#) » SHAD S0SL10RV Backrest Fitting Instruction Manual 

# SHAD




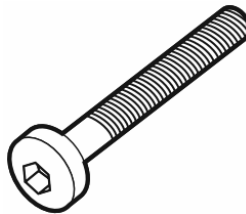
SILENCE S01'20  
KIT RESPALDO S0SL10RV




## Contents

- [1 S0SL10RV Backrest Fitting](#)
- [2 Documents / Resources](#)
- [3 Related Posts](#)

**S0SL10RV Backrest Fitting**

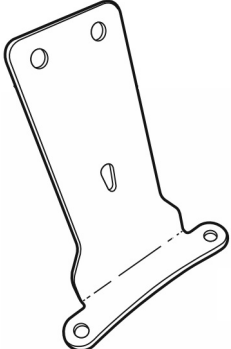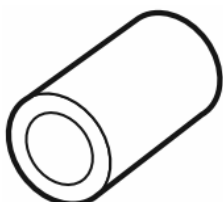
<b>1</b> <b>262961 x 1</b>	<b>2</b> <b>260213 x 2</b> <b>Ø16 Ø9 X 12</b>	<b>3</b> <b>303045 x 2</b> <b>Ø8</b>	<b>4</b> <b>304039 x 2</b> <b>M8x40 DIN 7380</b>
			

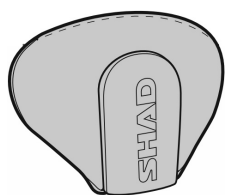

**! NOT INCLUDED**

**! WARNING!**

To complete the set, remember to purchase the backrest with your preferred color. Do not fully tighten Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

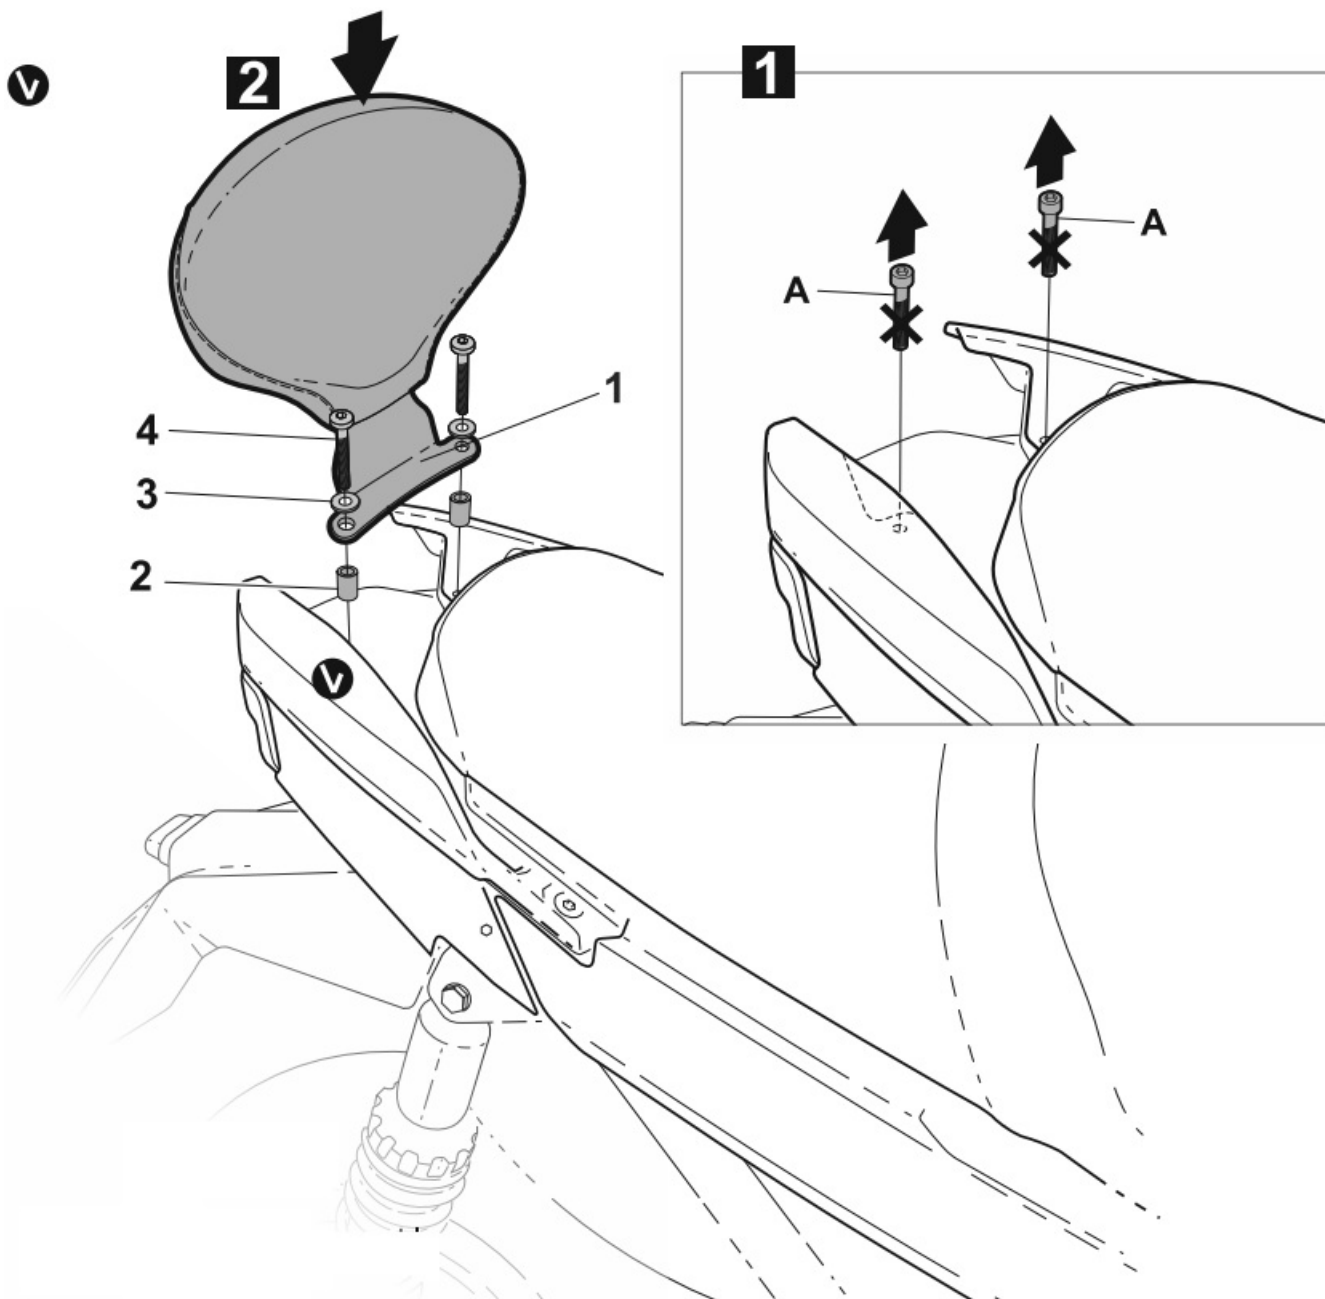


[WWW.SHAD.ES](http://WWW.SHAD.ES)

REF. 500479 Edition Ia

**IMPORTANT:** Based on European models.

For compatibility with models in other continen check [www.shad.es](http://www.shad.es)

## Documents / Resources

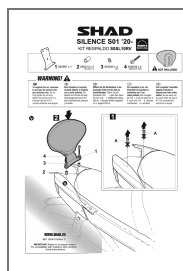

[SHAD S0SL10RV Backrest Fitting](#) [pdf] Instruction Manual  
S0SL10RV Backrest Fitting, S0SL10RV, Backrest Fitting