





SmartWings INS-102-C001 Zebra Shade Installation Guide

Home » SMARTWINGS » SmartWings INS-102-C001 Zebra Shade Installation Guide 🖫

Contents

- 1 SmartWings INS-102-C001 Zebra Shade
- **2 Product Information**
- 3 Product Usage Instructions
 - 3.1 Shade Installation
- **4 TYPES OF SHADES**
- **5 TYPES OF MOUNT**
- **6 Required Tools for Installation**
- 7 Included in the package
- 8 Shade Installation
 - 8.1 Inside Mount
 - **8.2 Outside Mount**
- 9 Shade Charging
 - 9.1 Battery-Powered Shades
 - 9.2 Hardwired Shade
- 10 Remote Holder Installation
- 11 ABOUT COMPANY
- 12 FAQ (Frequently Asked Questions)
- 13 Documents / Resources
- 13.1 References
- **14 Related Posts**





Product Information

Specifications:

• Product Name: Roller Shade Zebra Shade

Model: INS-102-C001Date: A-09 July 2024

Design: Deco Bar Square Cassette with Fabric Insert
Mounting Options: Inside Mount, Outside Mount

Product Usage Instructions

Preparation

Detailed instructions for installation vary. If you prefer an inside mount, proceed to Page 2. For an outside mount, go to Page 6. Before installing the shade, it is necessary to install the brackets on the shade and position them correctly to determine where the brackets will be mounted on the wall.

Shade Installation

Inside Mount

Top Mount

Step 1: Mark the position

After installing the brackets at the correct position on the shade, determine the position for the brackets on the wall and the shade, then mark it on them.

Note: The optimal position for the side caps on both sides of the center of the brackets is 10cm (4").

Step 2: Install the brackets

Detach the installation brackets from the Deco bar. Then install the brackets on the wall at the pre-

marked locations and secure them in place with screws.

Side Mount

Step 1: Install brackets

Determine the position for the extension brackets on the wall and install the extended brackets on both sides of the wall. Then fix the installation brackets and extension brackets with screws.

Note: To prevent light leakage at the top of the shades after installation, ensure that the extended brackets are installed as close to the top of the window frame as possible. Also, ensure that the brackets on both the left and right sides are positioned horizontally.


Wall Mount

• Step 1: Mark the position


After installing the brackets at the correct position on the shade, place the shade above the window frame. Use a level to check if the shade is horizontally aligned. Finally, mark on the wall the position where the brackets will be installed.

Note: The optimal position for the side caps on both sides of the center of the brackets is 10cm (4").


TYPES OF SHADES

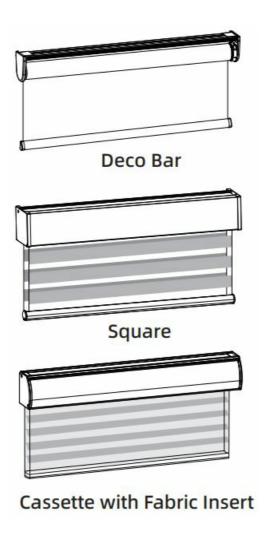


TYPES OF MOUNT

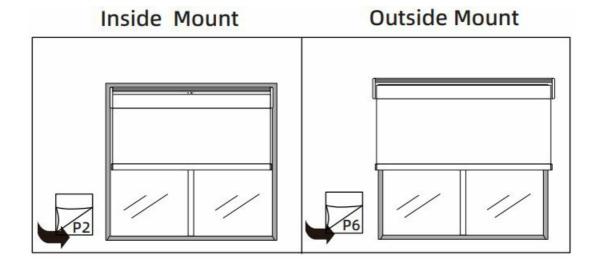

Required Tools for Installation

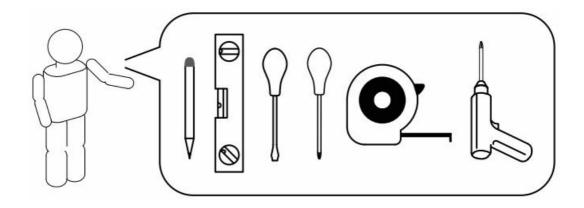


Included in the package

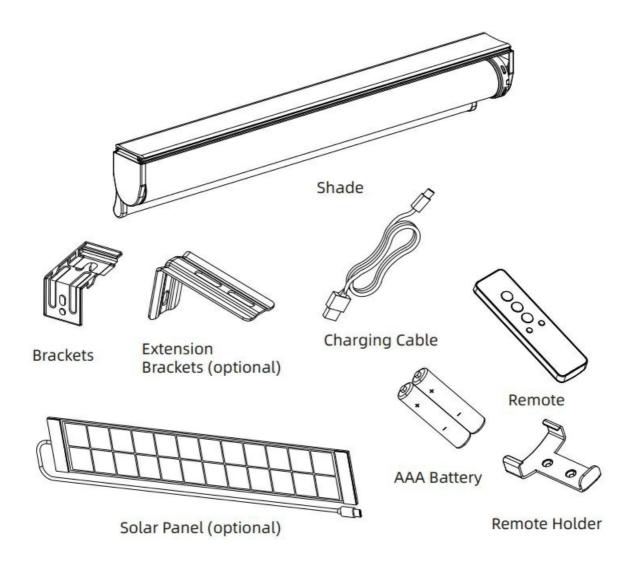

Shade Installation

Detailed instructions for installation vary. If you prefer an inside mount, proceed to Page 2. For an outside mount, go to Page 6. Before installing the shade, it is necessary to install the brackets on the shade and position them correctly to determine where the brackets will be mounted on the wall.

Inside Mount

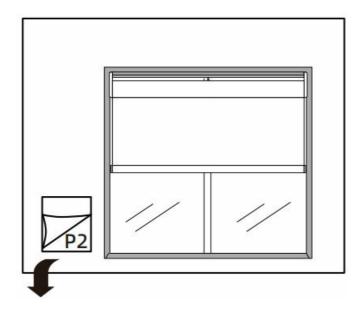


Top Mount


If you opt for an inside mount and your window frame width allows, top mounting is the optimal choice.

• Step 1: Mark the position

After installing the brackets at the correct position on the shade determine the position for the brackets on the wall and the shade, then mark it on them.

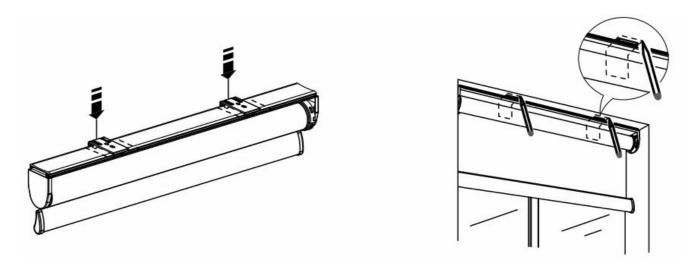


Note: The optimal position for the side caps on both sides of the center of the brackets is 10cm(4").

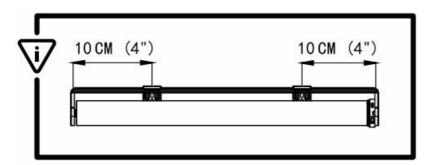


• Step 2: Install the brackets.

Detach the installation brackets from the Deco bar. Then install the brackets on the wall at the pre-marked locations and secure them in place with screws.

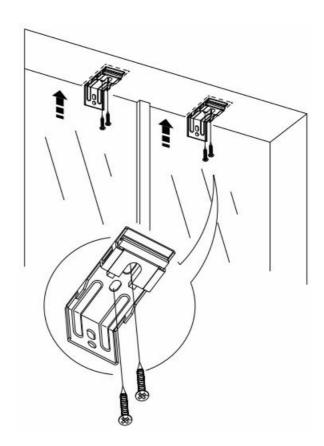

• Step 3: Install the shade.

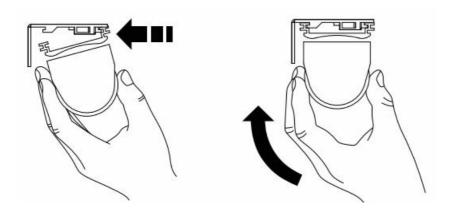


Side Mount

If you choose an inside mount but find that the window frame depth is insufficient for bracket installation, consider opting for a side mount.


• Step 1: Install brackets

Determine the position for the extension brackets on the wall and install the extended brackets on both sides of the wall. Then fixed the installation brackets and extension brackets with screws.

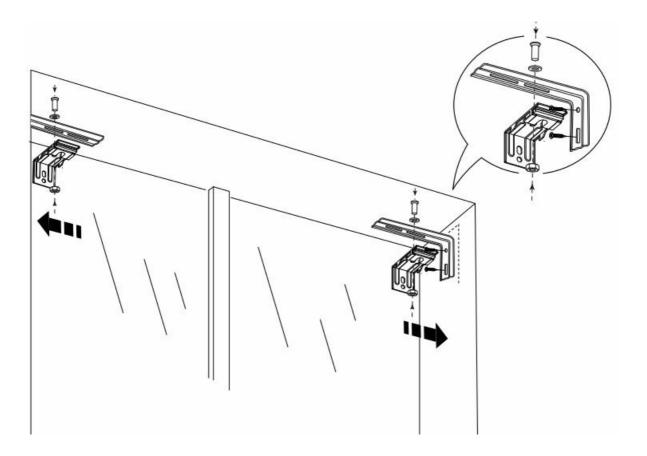


Note: To prevent light leakage at the top of the shades after installation, ensure that the extended brackets are installed as close to the top of the window frame as possible. Also, ensure that the brackets on both the left and right sides are positioned horizontally.

• Step 2: Install the shade.

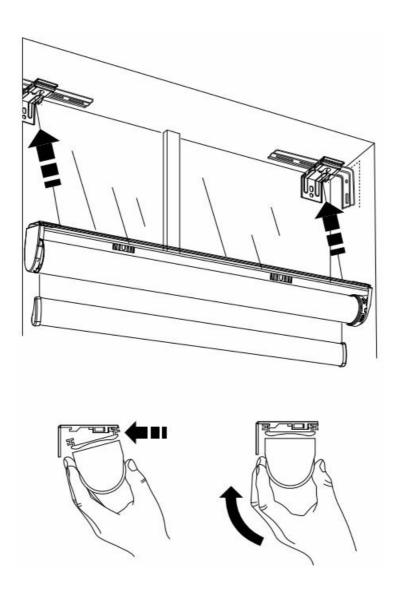


Outside Mount

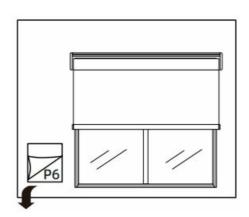

Wall Mount


If you opt for an outside mount and the space allows, top mounting is the optimal choice.

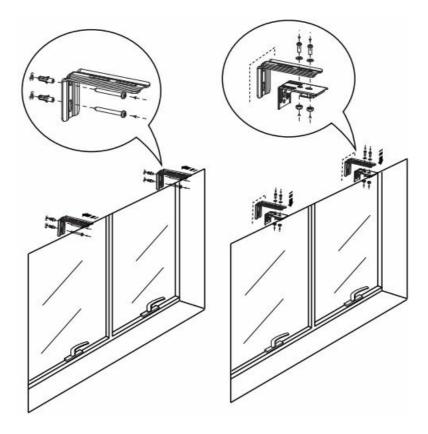


Note: If your window has handles or other special features, you may need to use extension brackets.

• Step 1: Mark the position

After installing the brackets at the correct position on the shade, place the shade above the window frame. Use a level to check if the shade is horizontally aligned. Finally, mark on the wall the position where the brackets will be installed.

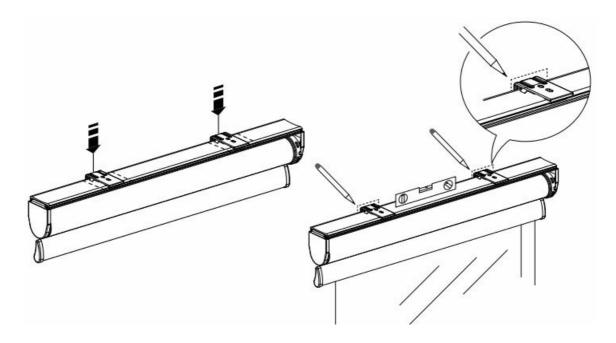


Note: The optimal position for the side caps on both sides of the center of the brackets is 10cm(4").




• Step 2: Install the brackets on the wall.

Remove the brackets on the Deco bar and secure them in place using screws at the marked locations before.

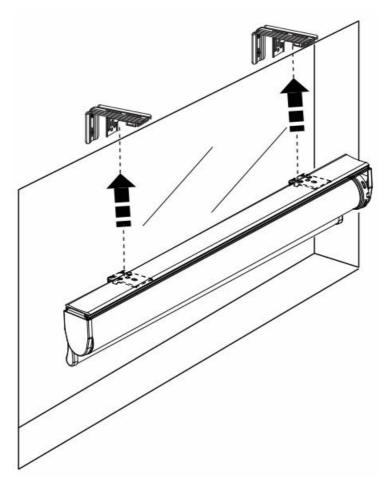

• Step 3: Install the shade

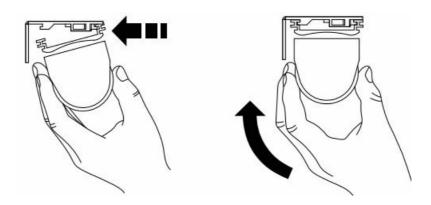


Ceiling mount

If you opt for an outside mount and the space is insufficient for bracket installation, top mounting is the optimal choice.


• Step 1: Mark the position

After installing the brackets at the correct position on the shade place the shade on the ceiling. mark on the ceiling the position where the brackets will be installed.

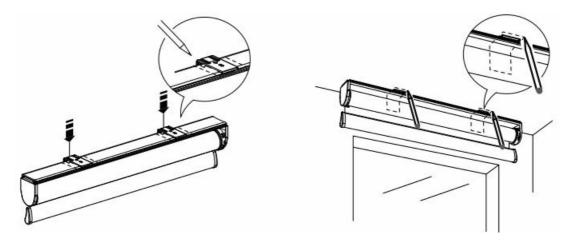


• Step 2: Install the bracket.

Install the brackets at the locations marked on the wall.

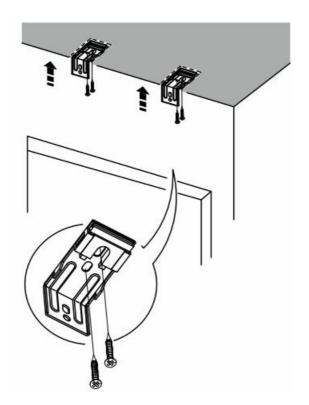


• Step 3: Install the Shade

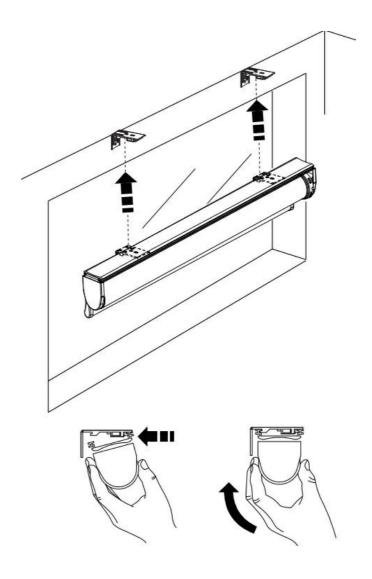


Shade Charging

Battery-Powered Shades


Option 1 USB-C Charging Cable

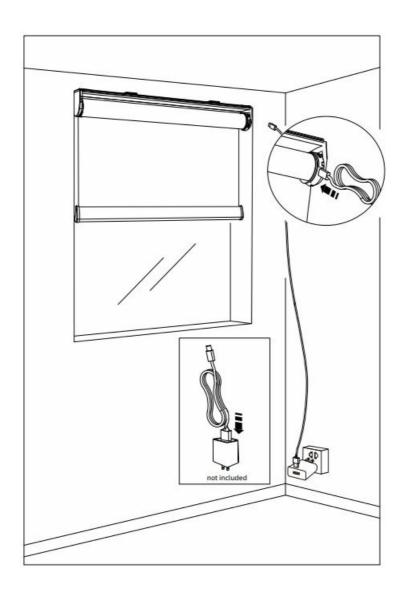

Option 2 Solar Panel

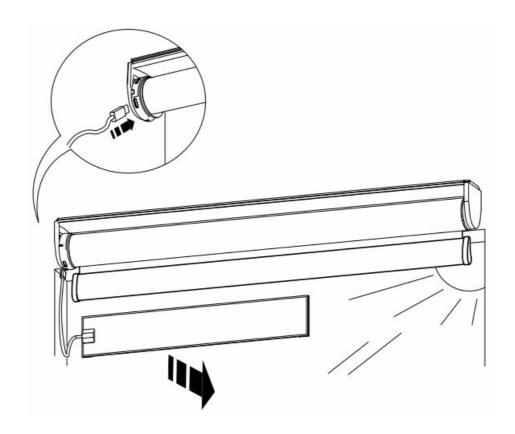


Option 3 Power Bank

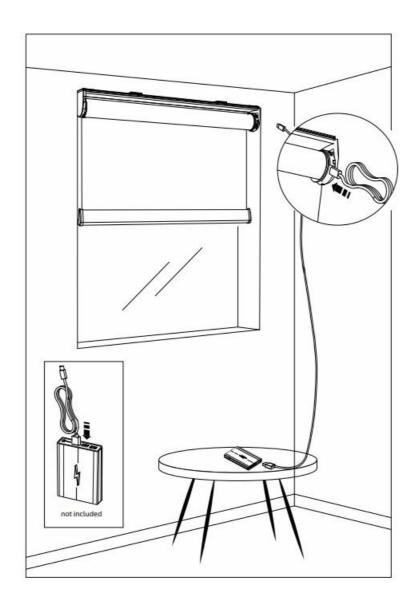


Hardwired Shade

Option 1 Hardwired Shade

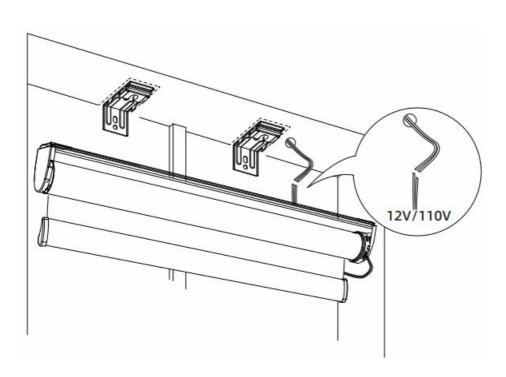


* Attention: Please confirm 12V or 110V wiring.

Option 2 Hardwired Shade

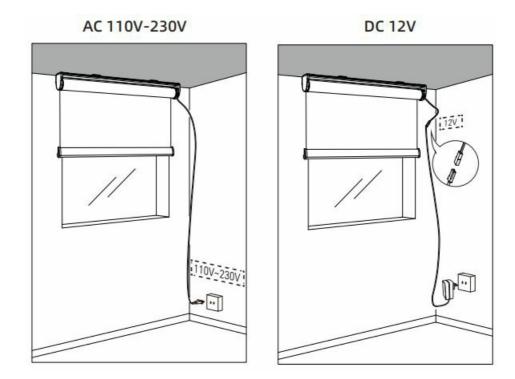

Remote Holder Installation

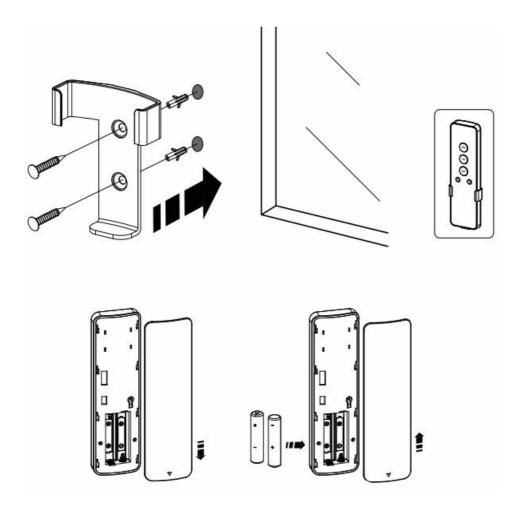

ABOUT COMPANY

- T + 1 877 762 7861
- www.smartwingshome.com

• support@smartwingshome.com

FAQ (Frequently Asked Questions)

What tools are required for installation?

The tools required for installation include Shade, Brackets, Extension Brackets (optional), Charging Cable, Remote, Solar Panel (optional), and AA Battery Remote Holder.

Documents / Resources



SmartWings INS-102-C001 Zebra Shade [pdf] Installation Guide INS-102-C001, INS-102-C001 Zebra Shade, INS-102-C001, Zebra Shade, Shade

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.