

 **SPYDER**  
CCO15 Projector  
Headlights



# SPYDER CCO15 Projector Headlights Installation Guide

[Home](#) » [SPYDER](#) » SPYDER CCO15 Projector Headlights Installation Guide 

## Contents

- [1 SPYDER CCO15 Projector Headlights](#)
- [2 INSTALLATION GUIDE](#)
- [3 Frequently Asked Questions](#)
- [4 Documents / Resources](#)
  - [4.1 References](#)



**SPYDER CCO15 Projector Headlights**



## INSTALLATION GUIDE


### Tools Needed




- 1/4" ratchet
- 7, 8 and 10mm socket
- T15 Torx
- Panel popper

### Installation Steps

1. Remove (6x) T15 torx screws securing the grill.
2. Remove (3x) T15 torx screws securing the fender liner.

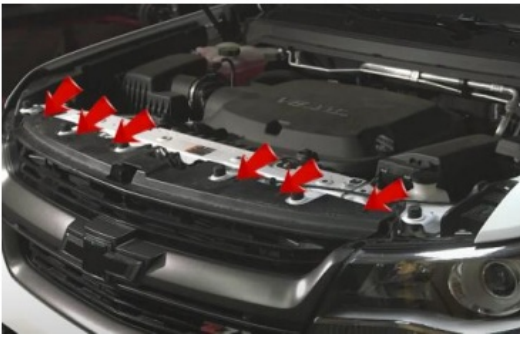

3. Pull back the fender liner and remove (3x) 7mm bolts securing the bumper fascia.
4. Remove (6x) 8mm bolts below the bumper fascia.

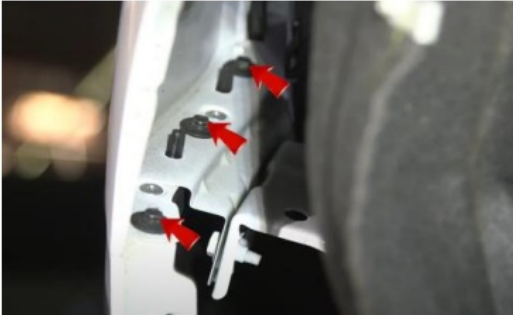

5. Remove (2x) 10mm bolts holding the bumper in place.
6. Unseat bumper fascia.



7. Disconnect the fog light harness and set the bumper aside.
8. Remove (4x) 7mm bolts securing the headlight.



9. Unseat headlight.
10. Disconnect the headlight harness.




11. Connect Spyder headlight harness.
12. Disconnect the headlight and turn the signal harness.




13. Reinstall (4x) 7mm bolts securing the headlight.
14. Reconnect the fog light harness.



15. Seat front bumper fascia.
16. Reinstall (2x) 10mm bolts.

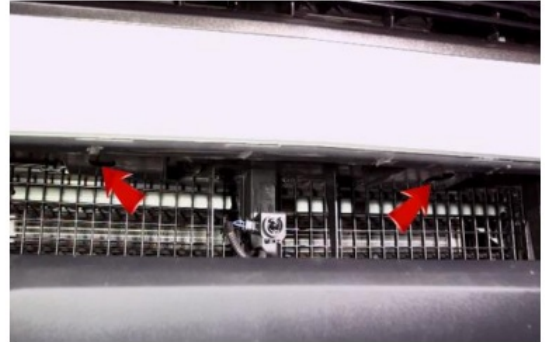


17. Reinstall (3x) 7mm bolts on the corner of the bumper.
18. Install (3x) T15 torx screws securing the fender liner.

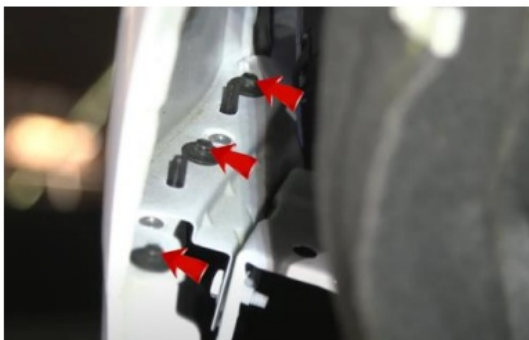

19. Reinstall (6x) T15 screws securing the grill.
20. Reinstall (6x) 8mm bolts securing the bottom of the bumper fascia.



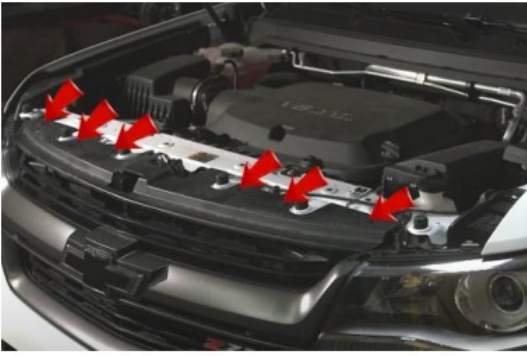

21. Turn on lights and confirm all functions are working properly. You have successfully completed the install of your new Spyder Headlights.



For further help with installation, please watch our installation video. Follow the direct link below to our YouTube channel for more information: <http://www.youtube.com/watch>

#### **DISCLAIMER**

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to reduce installation time. We have no responsibility for improper installation. If you do not know how to install, please have a professional install it.

- [WWW.SPYDERAUTO.COM](http://www.spyderauto.com)

#### **Frequently Asked Questions**

**Q: Is professional installation recommended?**

A: The manufacturer recommends professional installation to avoid improper installation that may lead to damages or safety hazards. If you are unsure, it is best to seek professional help.

**Q: Are these headlights compatible with all vehicle models?**

A: These headlights are specifically designed for [mention specific vehicle make/model]. Please ensure compatibility before purchase and installation.

**Q: What should I do if some functions are not working after installation?**

A: If you encounter any issues with the functionality of the headlights after installation, please double-check all connections and wiring. If problems persist, contact customer support for assistance.

#### **Documents / Resources**



INSTALLATION GUIDE:  
PRO-YD-CCO15-LBDRL (J01)



## [SPYDER CCO15 Projector Headlights](#) [pdf] Installation Guide PRO-YD-CCO15-LBDRL, CCO15 Projector Headlights, CCO15, Projector Headlights, Headlight S

### References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.