

# **STREET AERO ACM Side Splitters Instructions**

Home » STREET AERO » STREET AERO ACM Side Splitters Instructions





### **INSTRUCTIONS ACM Side Splitters**

#### **Contents**

1 ACM Side Splitters

2 Documents /

Resources

2.1 References

**3 Related Posts** 

## **ACM Side Splitters**

Includes: Screws (16x)

#### STEP: 1

Position the jack stand near the back and front of the side skirt Position the Side Splitter to the side skirt Street Aero Logo towards the rear bumper Side Splitter should reach from one end to the other

#### STEP: 2

Pre-drill the side skirt and Side Splitter with 3/32" or smaller bit size See the chart below for the recommended spacing of the screws

Side Sp	litter Size
---------	-------------

60-70 inches

71-75 inches

76-80 inches

81-86 inches


#### **Screw Spacing**

8 inches

8.5 inches


9.25 inches

9.8 inches

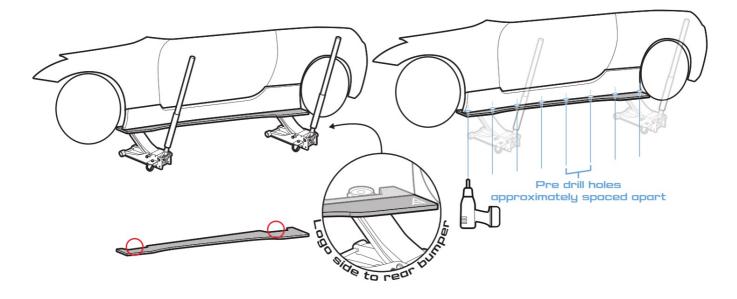

**NOTE:** Position the jack stand at the Side Splitter's pinch welds

STEP: 3
Secure the Side Splitter to the side skirt with provided screws Starting from the center outwards Use extra hardware if needed

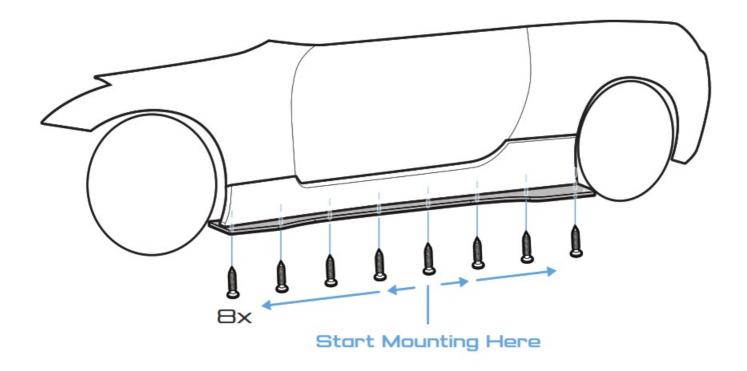



www.streetaero.com info@streetaero.com



# STREET AERO ACM Side Splitters [pdf] Instructions

ACM Side Splitters, ACM, Side Splitters

#### References

≜ Street Aero

Manuals+, home privacy