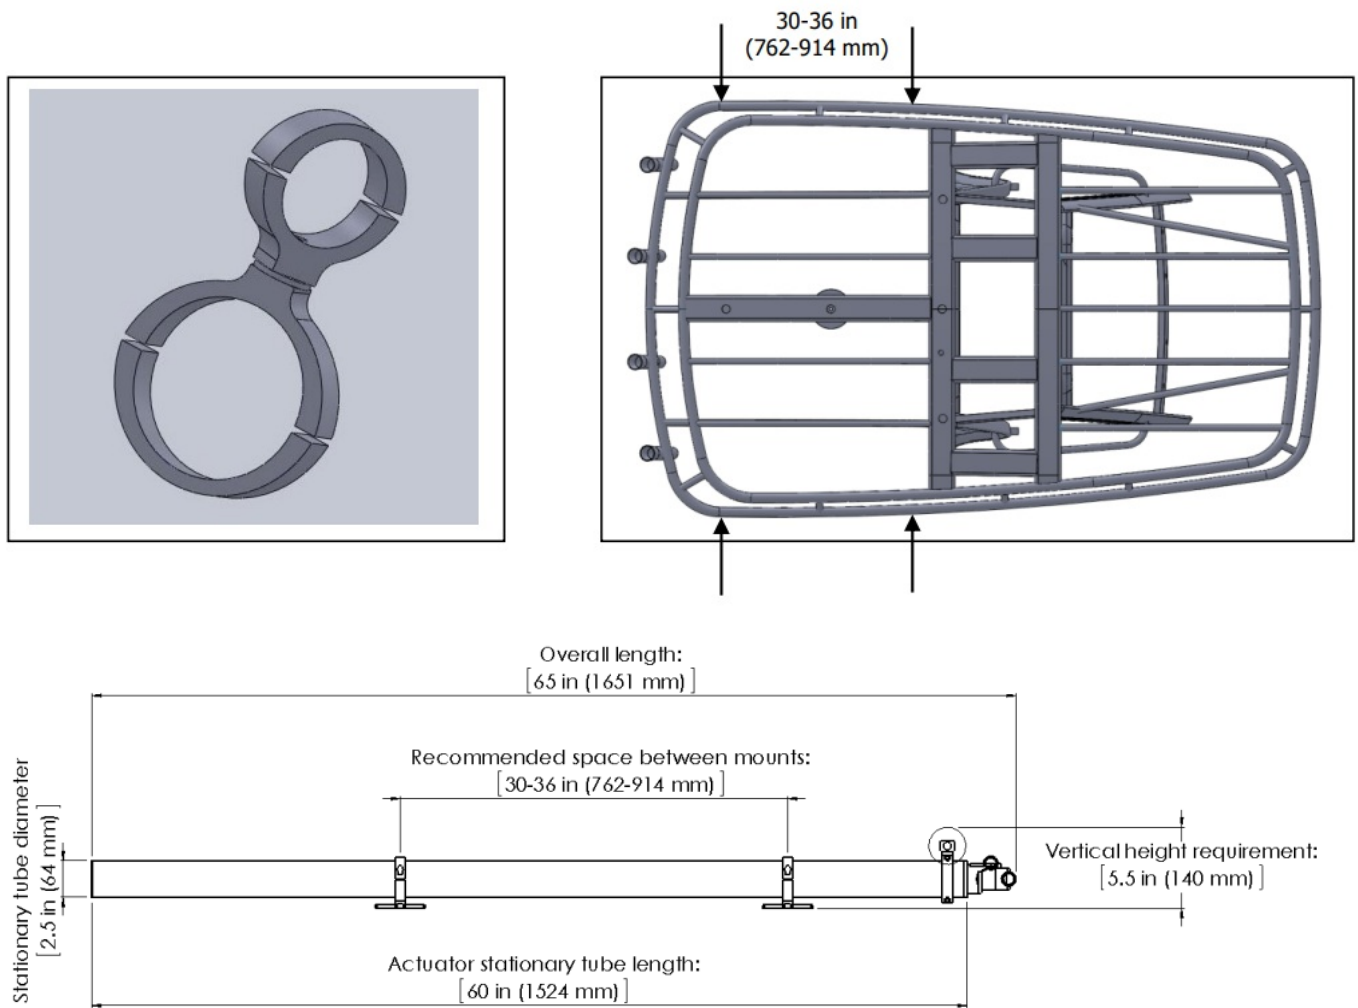🌿 Manuals+

☰

SURE**SHADE**®

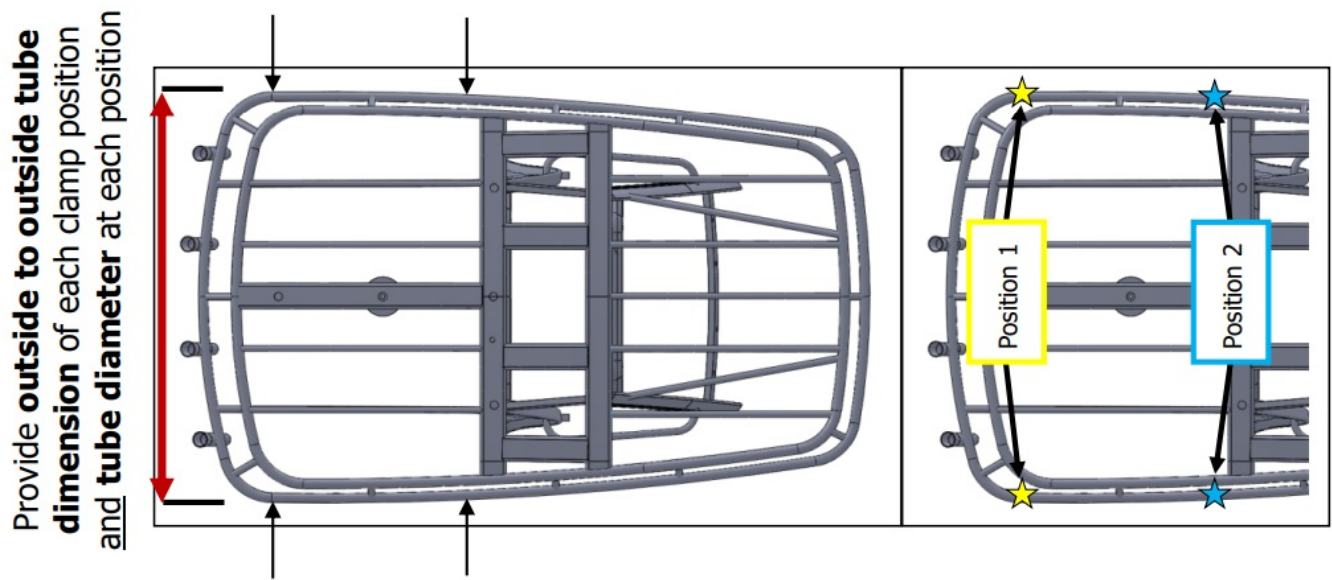## SURESHADE CCD-0009188 MTF T-Top Shade

SureShade MTF Measuring Instructions for T-Top

STEP 1: DETERMINE MOUNTING AREA (underside or topside) based on MTF shade space requirements. An extension length of 6 FT (1829 mm) is available for the MTF shade. Each extension length has unique stationary tube length dimensions, found below. Shade width is customized to client specification.

On a T-Top frame, the MTF shade is mounted to the frame with two figure 8 clamps on each side spaced 30-36 in (762-914 mm) apart. Determine which two tubes to mount the shade to. The shade can be mounted on the top or the bottom of the frame.

STEP 2: DETERMINE SHADE WIDTH. MTF framework (stationary actuator) and mounting clamps an obstruction-free area shown below.

MTF shade width is specified by the "outside to outside" tube dimension – outside of PORT actuator to outside of STBD actuator. The maximum possible width for an MTF shade is 96"

Once mounting area is determined for shade framework, measure and provide the OUTSIDE to OUTSIDE width dimension of both tubes the shade will be mounted to. Also measure and provide the diameter of both tubes.

MOUNT DIAMETER SIZES AVAILABLE

- 1.375″
- 1.50″
- 2.00″
- 2.25″
- 2.50″
- 3.00″

MTF T-Top Shade Specifications

Customer Name		
Email Address & Phone Number		
Commercial Ship to Address		
Preferred Payment Method (Check, Wire Transfer, Credit Card)		
Boat YEAR/MAKE/MODEL		
Quantity		
Placement	Tube Mount	
Mounting Component	Figure 8 Clamp	
Canvas Color		
Position 1	Outside-to-Outside Tube Width (inches or mm)	
	Tube Diameter (inches or mm)	
Position 2	Outside to Outside Tube Width (inches or mm)	
	Tube Diameter (inches or mm)	

If you have any questions please call 877-333-8323 or 215-673-2307

DISCLAIMER: All shades are made to custom specifications. Ensure all measurements are accurate before sending them to your customer service representative. Any errors made by the customer are the customer's responsibility.

FAQ

- **Q: How do I determine the mounting area for the MTF shade on a T-Top?**
  A: The mounting area can be either on the underside or topside of the frame based on shade space requirements. Use two figure 8 clamps on each side spaced 30-36 in (762-914 mm) apart.
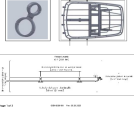- **Q: What should I do if I need assistance with measurements?**
  A: If you have any questions or need help with measurements, please call 877-333-

8323 or [215-673-2307](#) for assistance.

- **Q: Are the shades customizable?**

  A: Yes, all shades are made to custom specifications, including shade width and mounting components. Ensure accurate measurements before sending them to your customer service representative.

Documents / Resources

	[SURESHADE CCD-0009188 MTF T-Top Shade](#) [[pdf](#)] Installation Guide CCD-0009188 MTF T-Top Shade, CCD-0009188, MTF T-Top Shade, Top Shade

References

- [User Manual](#)

🏷 CCD-0009188, CCD-0009188 MTF T-Top Shade, MTF T-Top Shade, SURESHADE, Top
📁 SURESHADE   Shade

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

| e.g. whirlpool wrf535swhz | **Search** |