



TAC TB-D12N Arrow Side Steps Running Boards Installation Guide

[Home](#) » [TAC](#) » TAC TB-D12N Arrow Side Steps Running Boards Installation Guide 

TAC TB-D12N Arrow Side Steps Running Boards



FITS: 2019-Up Dodge RAM 1500 Quad Cab (Exclude 2019-2024 RAM 1500 Classic Quad Cab)

Contents

- [1 Torque & Tools](#)
- [2 BEFORE INSTALLATION](#)
- [3 Part List](#)
- [4 INSTALLATION INSTRUCTION](#)
- [5 CUSTOMERS SUPPORT](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

Torque & Tools

- 60-120 min


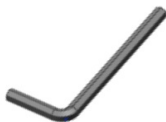


- Cutting Not Required



- Drilling Not Required




Fastener Size	Tightening Torque (ft-lbs)	Wrench Required		Allen Wrench Required	
■ 6mm	■ 7-8.5		■ 10mm		□ 4mm
■ 8mm	■ 18-20		■ 13mm		□ 5mm
□ 10mm	□ 35-40		□ 16mm		□ 6mm
□ 12mm	□ 60-70		□ 18mm		□ 8mm

BEFORE INSTALLATION

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. ASSISTANCE IS RECOMMENDED.

Part List

- #1: Front/Rear Lower Mounting Bracket x 4
- #2: Front/Rear Upper Mounting Bracket x 4
- #3: Center Mounting Bracket x 2
- #4: Center Support Bracket x 2

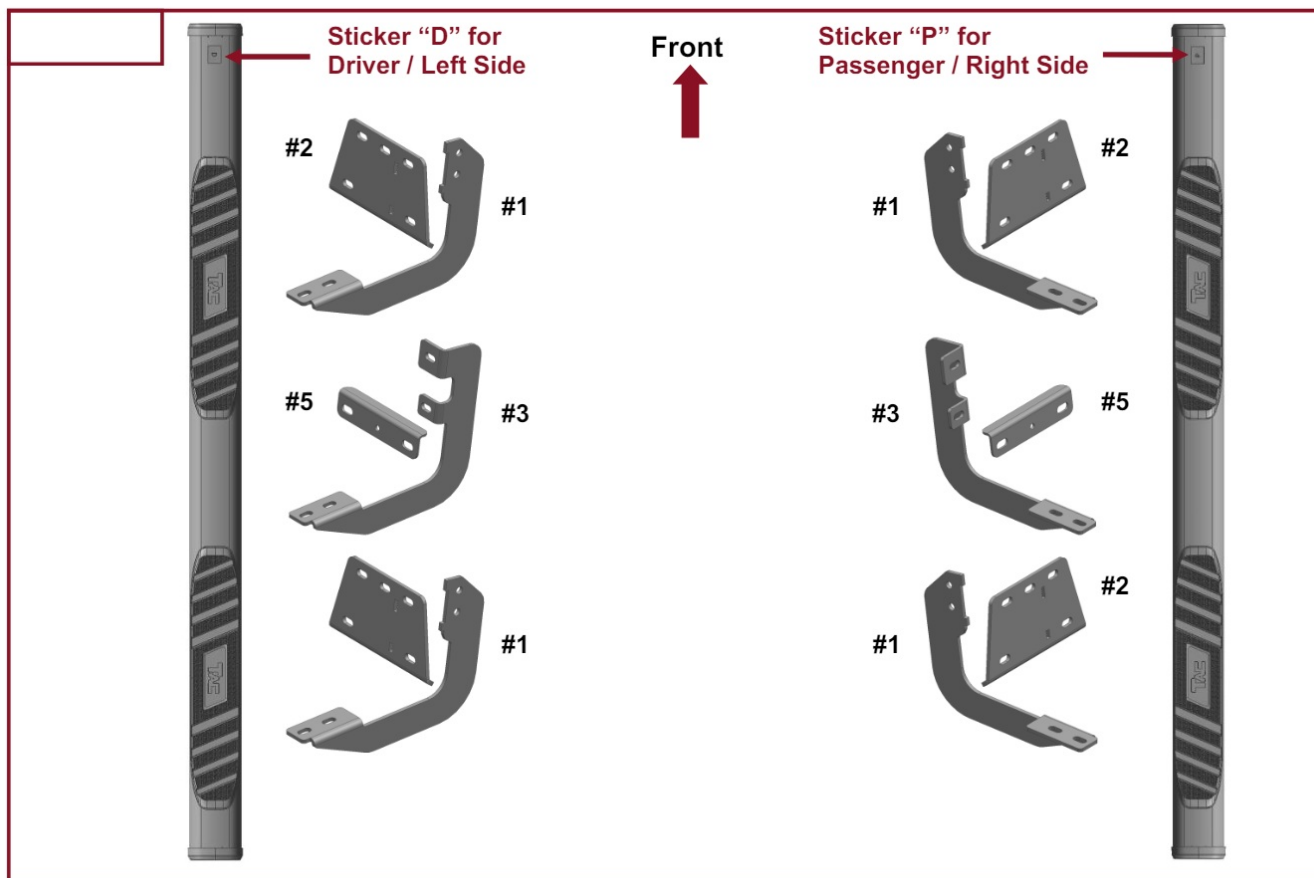

- 8mm x 25mm Hex Bolt



x8

- 8mm x 16mm Flat Washer




x16

- 8mm x 24mm Flat Washer



x20

- 8mm Nylon Lock Nut

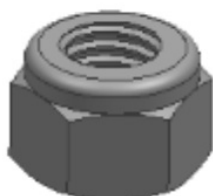

x28

- 6mm x 20mm T-Bolt



- 6mm x 22mm Flat Washer



- 6mm Lock Washer



- 6mm Hex Nut




INSTALLATION INSTRUCTION

PLEASE NOTE THAT THE FOLLOWING PICTURES ARE BASED ON THE DRIVER SIDE INSTALLATION

STEP 1

Start the installation under the Driver/Left side of the vehicle. Locate the front (3) factory studs along the inner side of the body panel, (Fig 1).

FIG 1

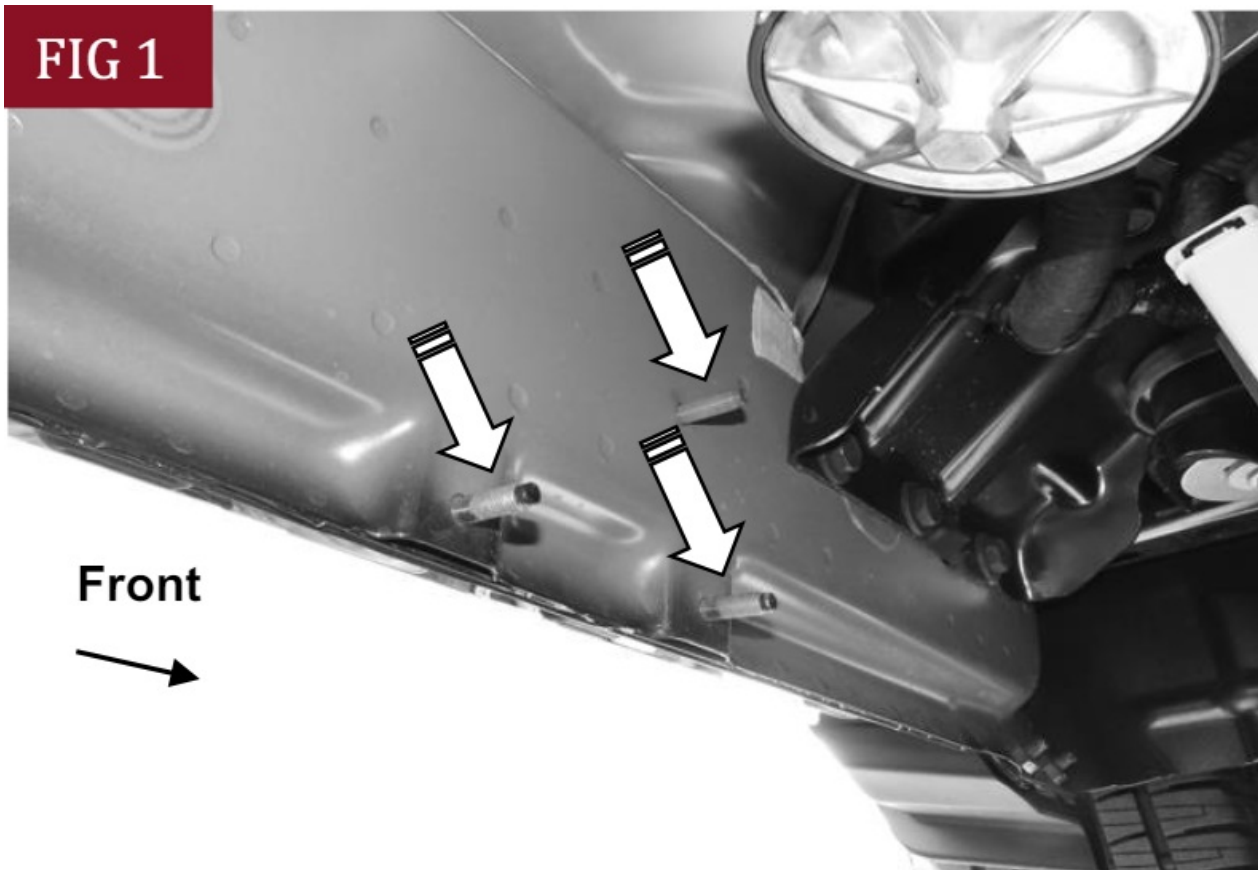

(Fig 1) Driver/Left Front mounting location


STEP 2

Select (1) Front/Rear Upper Mounting Bracket (**#2**), Attach the Mounting Bracket to the (3) factory studs with (3) 8mm x 24mm Flat Washers and (3) 8mm Nylon Lock Nuts, (Fig 2). Do not tighten hardware.

FIG 2

(3) 8mm x **24mm** Flat Washers
(3) 8mm Nylon Lock Nuts

Front

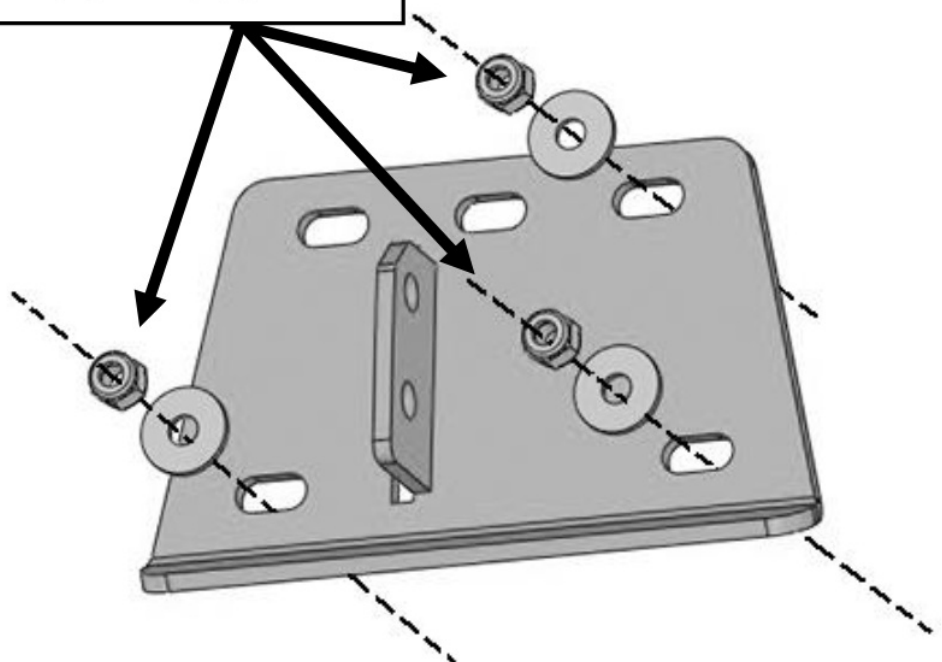


(Fig 2) Attach (1) Front/Rear Upper Mounting Bracket (#2) to the threaded studs

STEP 3

Attach (1) Front/Rear Lower Mounting Bracket (#1) to the welded plate on the back of the Front Upper Bracket (#2) with (2) 8mm Hex Bolts, (4) 8mm x 16mm Flat Washer, and (2) 8mm Nylon Lock Nuts (Fig 3).

FIG 3

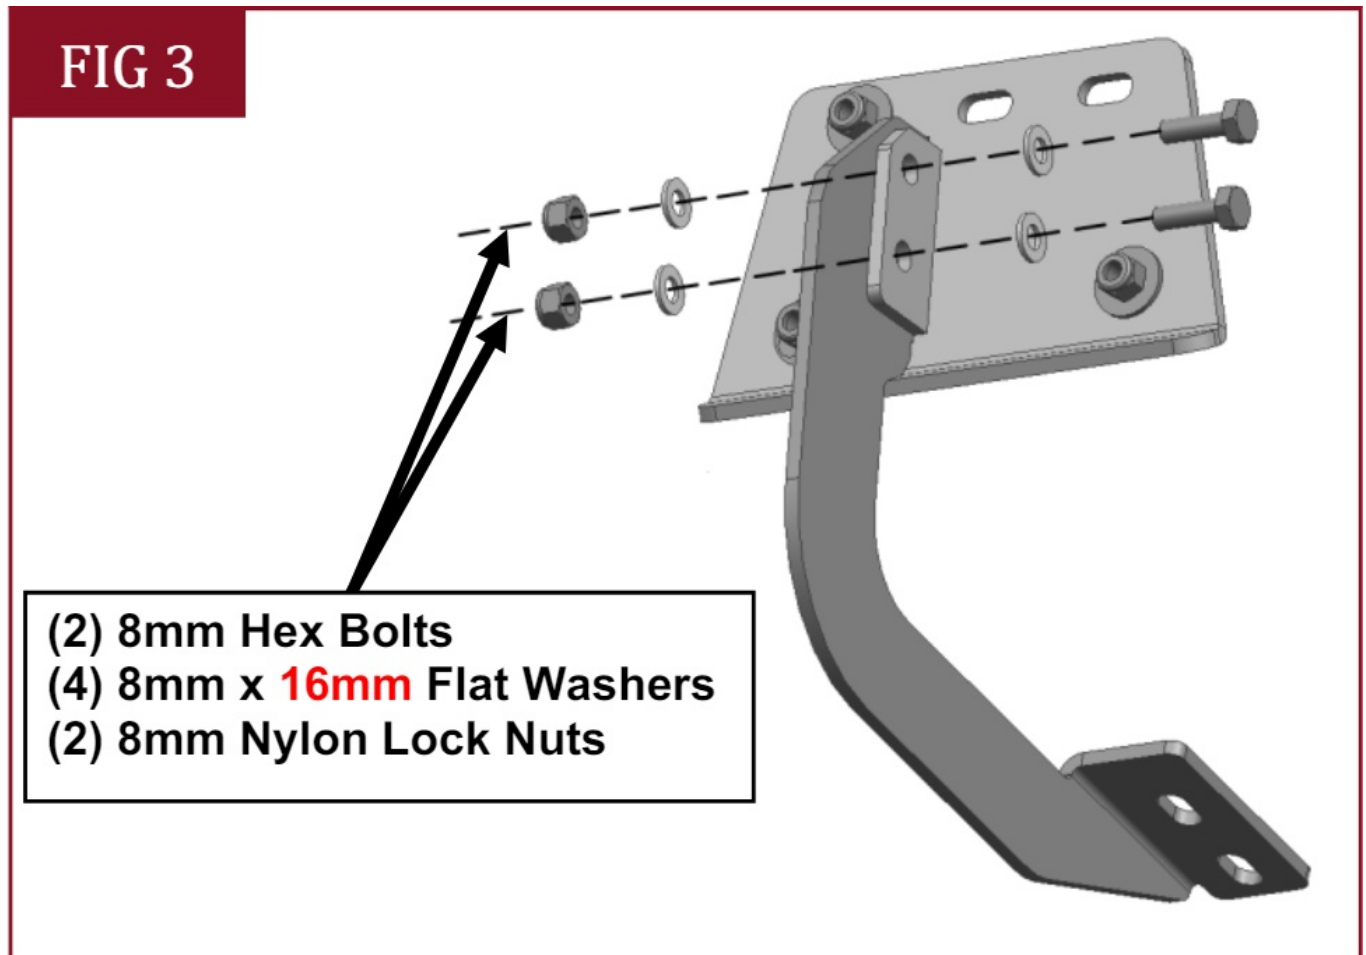


(Fig 3) Driver/Left Front mounting location

STEP 4

Move to the center location, (Fig 4). Select (1) Center Support Bracket (#4), attach the Support Bracket to the lower (2) factory studs with (2) 8mm x 24mm Flat Washers and (2) 8mm Nylon Lock Nuts, (Fig5).


FIG 4

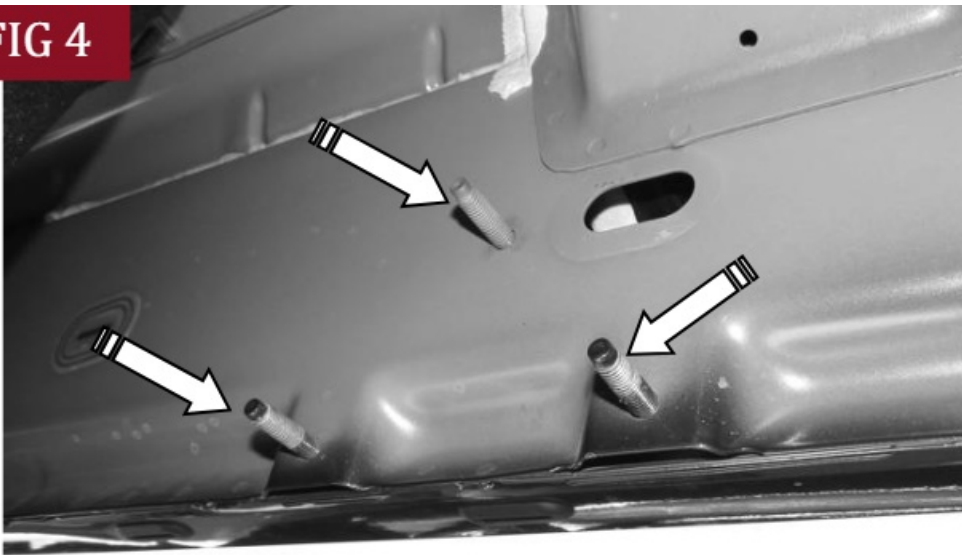

→
Front

(Fig 4) Driver/Left Center mounting location

FIG 5

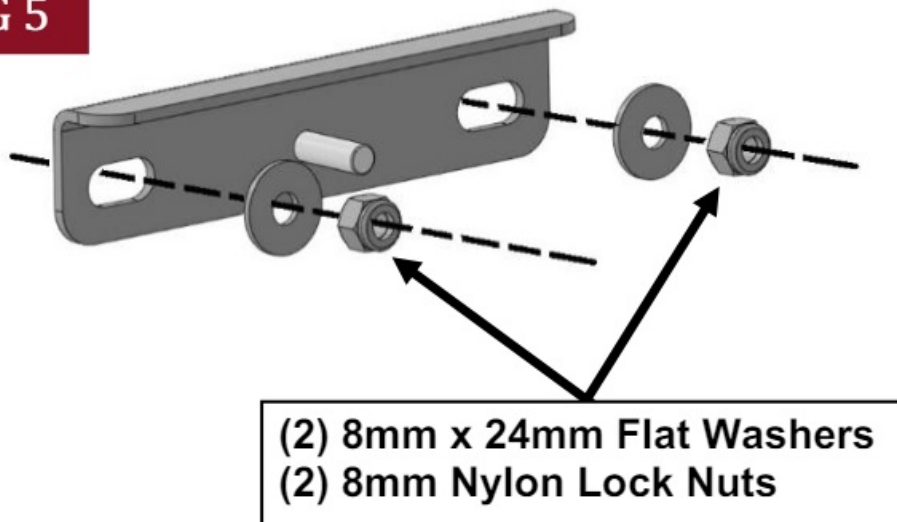


(Fig 5) Attach (1) Center Support Bracket (#4) to the lower (2) threaded studs on the mounting location

STEP 5

Select (1) Center Mounting Bracket (**#3**) and attach to the Support Bracket and upper threaded stud with (2) 8mm x 24mm Flat Washers and (2) 8mm Nylon Lock Nuts, (**Fig 6**). Do not tighten hardware.


FIG 6

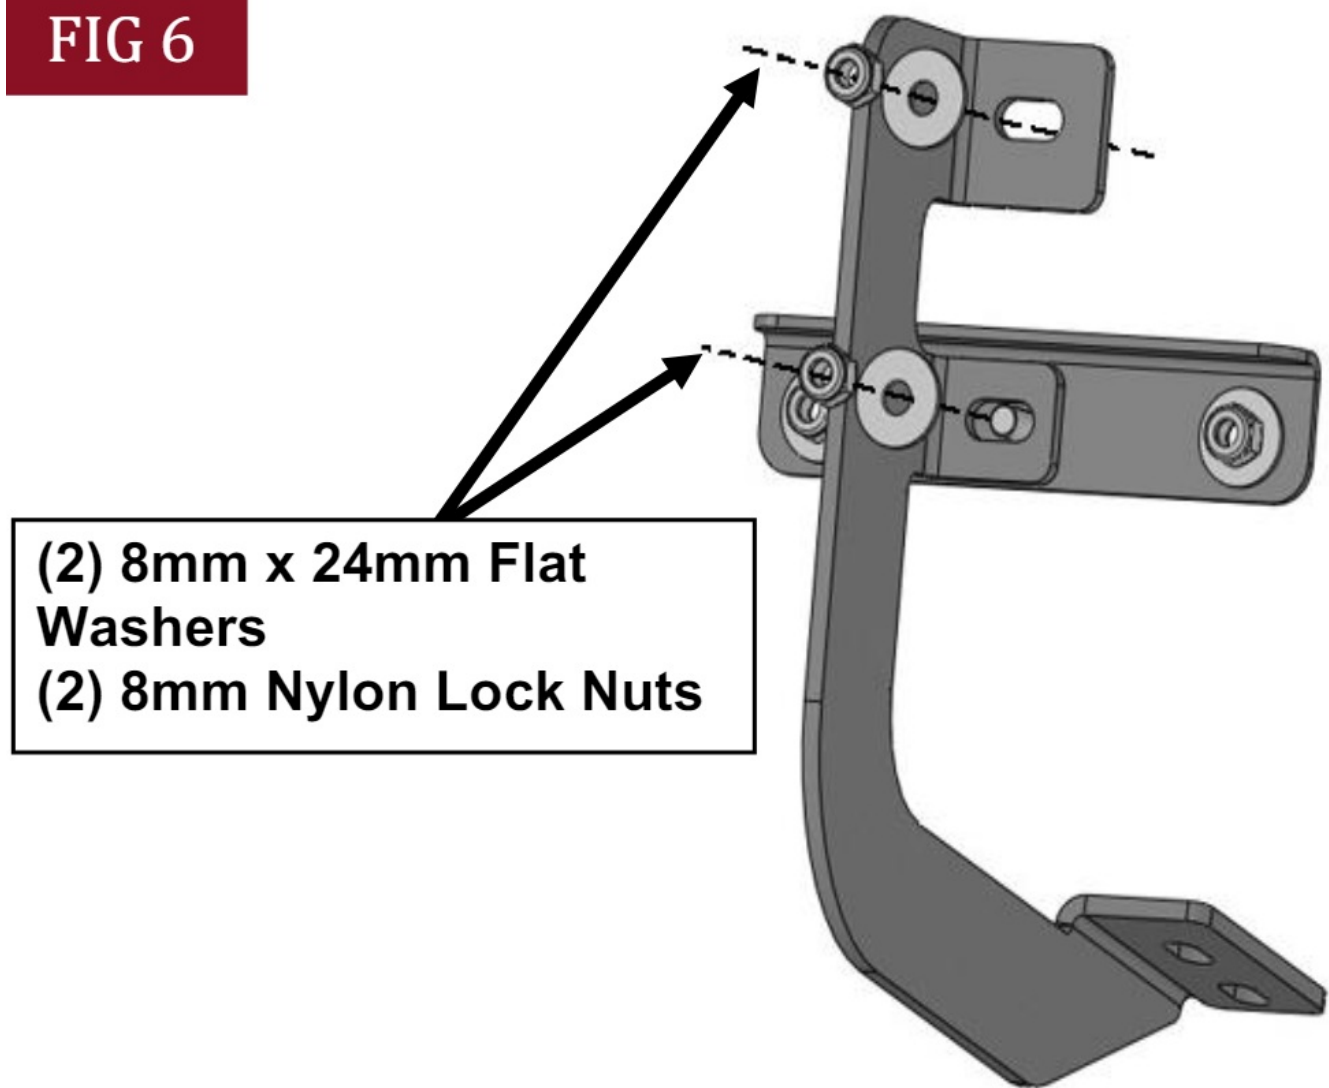

(Fig 6) Attach Mounting Bracket to the upper mounting stud and Support Bracket

STEP 6

Repeat Steps 2 & 3 to attach (1) Front/Rear Upper Mounting Bracket (#2) and (1) Front/Rear Lower Mounting Bracket (#1) to the rear mounting locations along the body panel, (Fig 7). Do not tighten hardware.

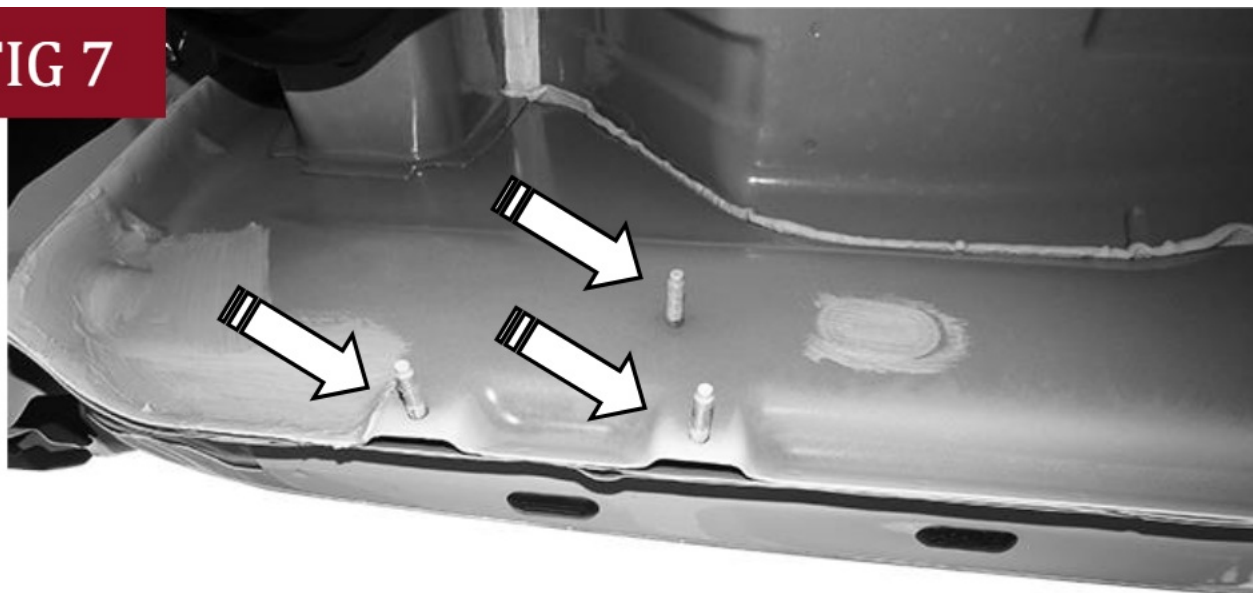
FIG 7

←
Rear

(Fig 7) Driver/Left Rear mounting location


STEP 7

Select the Driver/Left Side Step. Insert (6) 6mm T Bolts into the slots underneath the Side Step (Fig 8). **NOTE:** The Driver/Left Side Step will have a Sticker "D" on the front. **IMPORTANT:** Do not slide the Side Step front to back or damage to the finish may result. Attach the Side Step to the (3) Mounting Brackets with (6) 6mm Flat Washers, (6) 6mm Lock Washers, and (6) 6mm Hex Nuts (Fig 9). Do not tighten hardware.

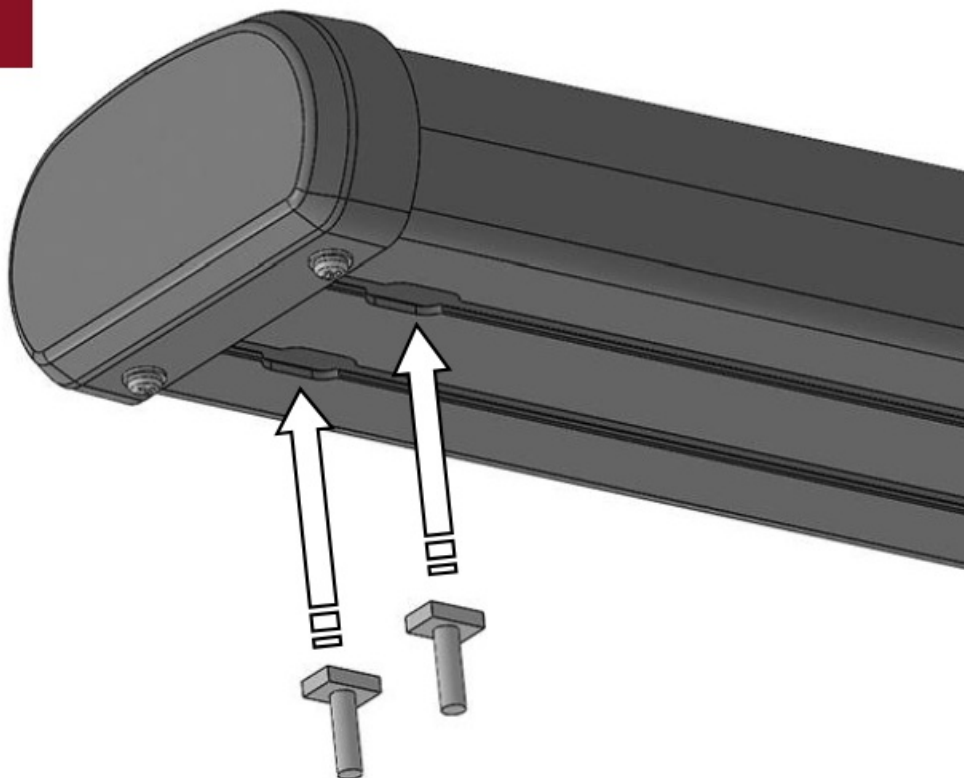FIG 8

(Fig 8) Insert (6) 6mm T-Bolts into the slot underneath the Side Step

FIG 9

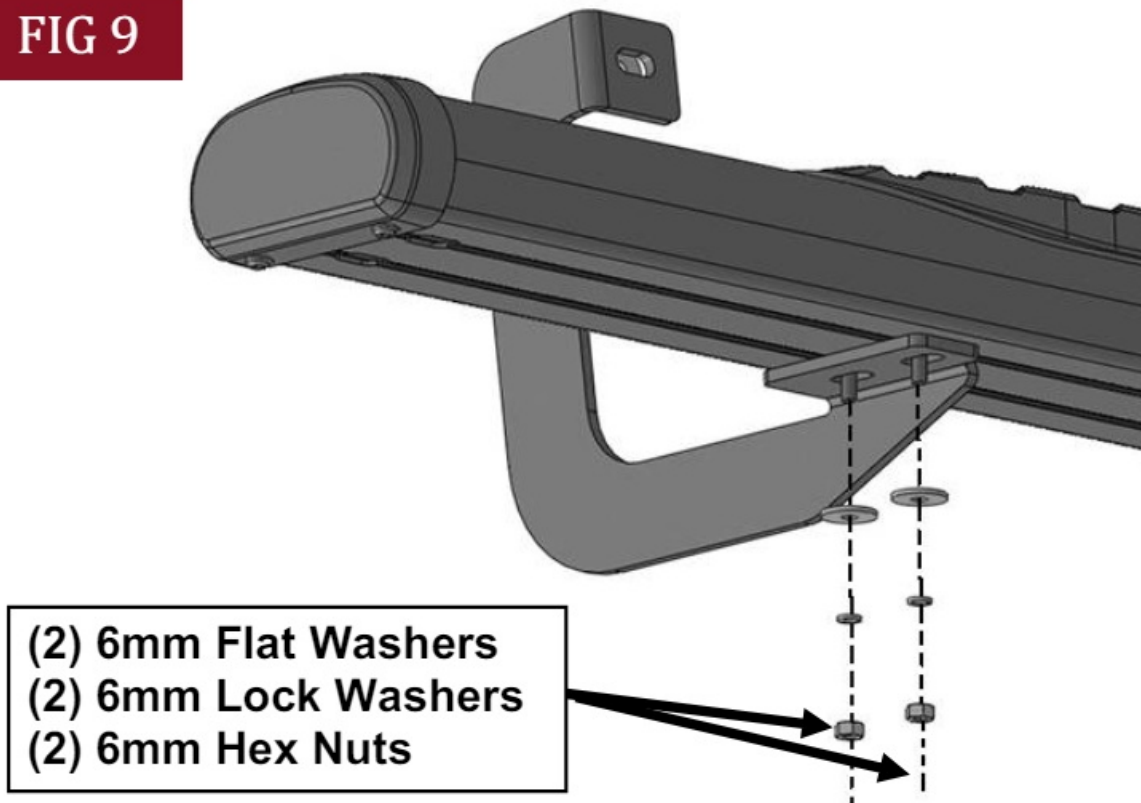

(Fig 9) Attach Side Step to the Mounting Brackets

STEP 8

Level and adjust the Side Step as necessary and fully tighten all hardware.

STEP 9

Repeat Steps 1-8 to attach the Passenger/Right Side Step to the vehicle.

STEP 10

Do periodic inspections to the installation to make sure that all hardware is secure and tight.

Attention

To protect your investment, do not use any type of polish or wax that may contain abrasives that could damage the finish.

Mild soap may be used also to clean the Side Steps.


CUSTOMERS SUPPORT

www.tacautoparts.com

Rev. 10/18/22 (NL)



Documents / Resources

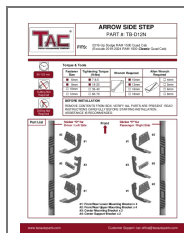

[TAC TB-D12N Arrow Side Steps Running Boards](#) [pdf] Installation Guide
TB-D12N, TB-D12N Arrow Side Steps Running Boards, Arrow Side Steps Running Boards, Side Steps Running Boards, Steps Running Boards, Running Boards, Boards

References

- [TAC TACUSA](#)
- [TAC TACUSA](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.