




## TECHmatte S22U Ultra Screen Protector Installation Guide

[Home](#) » [TECHmatte](#) » TECHmatte S22U Ultra Screen Protector Installation Guide 

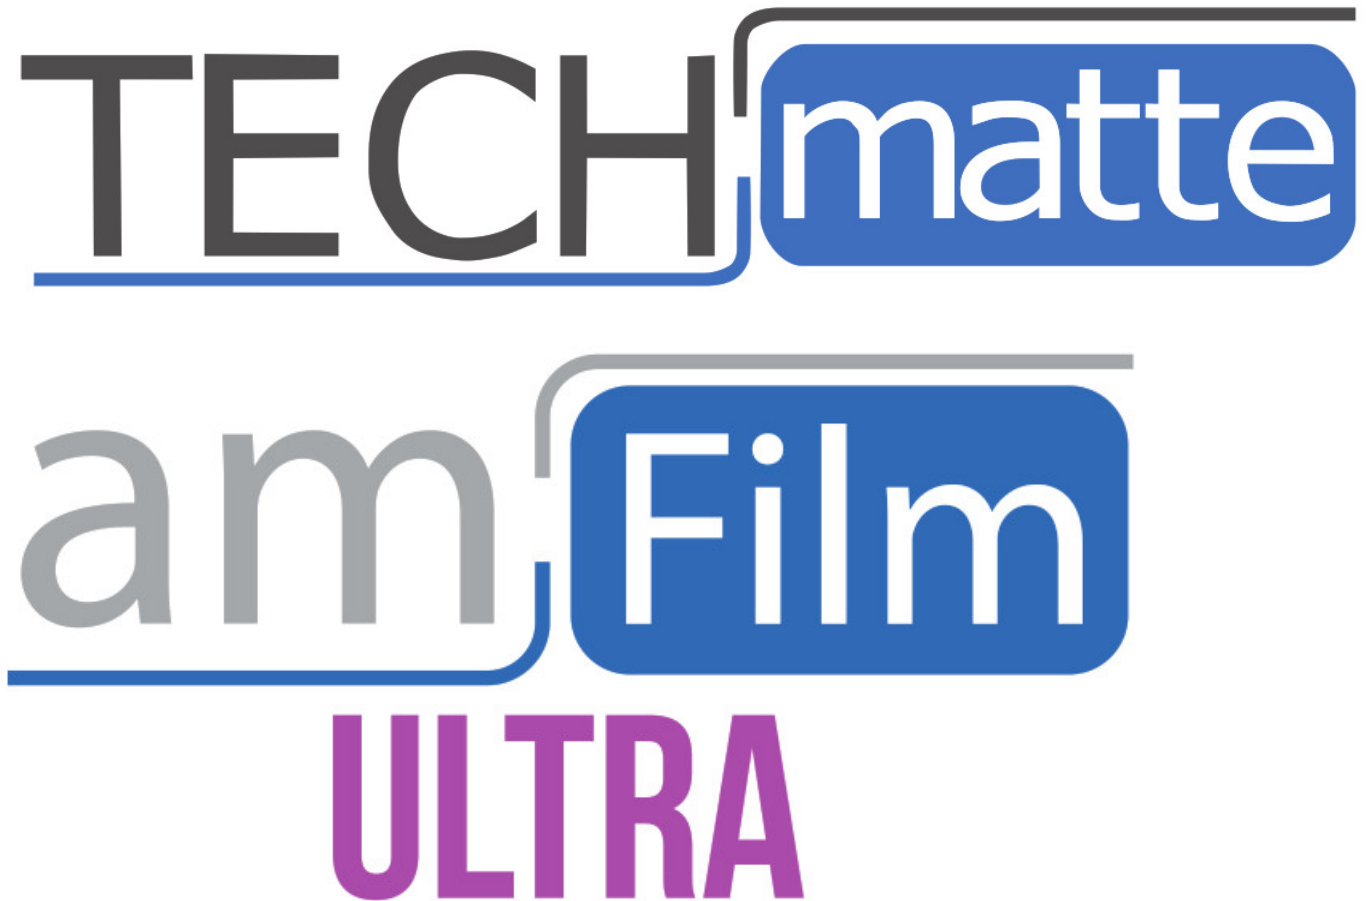

Installation Guide

## Contents

[1 S22U Ultra Screen Protector](#)

[2 Q&A](#)

[3 Documents / Resources](#)

[4 Related Posts](#)

## S22U Ultra Screen Protector

### Watch Demo



<http://www.TechMatte.com/install/S22U-UV3>


1. Plug in and turn on the UV Light to check if it works properly .  
Then turn it off.




2. Turn off your phone and clean the screen with the wet wipe and cleaning cloth.




3. Use the Screen-Prep Cloth to wipe the phone screen a few times. Then use the Cleaning Cloth to clean the screen again. This helps to prevent the bubbles during application.

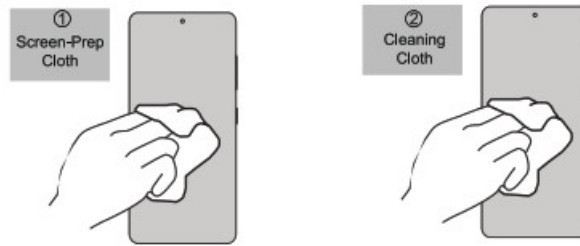


4. Place your phone into the application tray. Make sure to align the top of the phone with the side labeled **“TOP”**. Press firmly into place. Rotate the green Lock Pin to secure the phone.

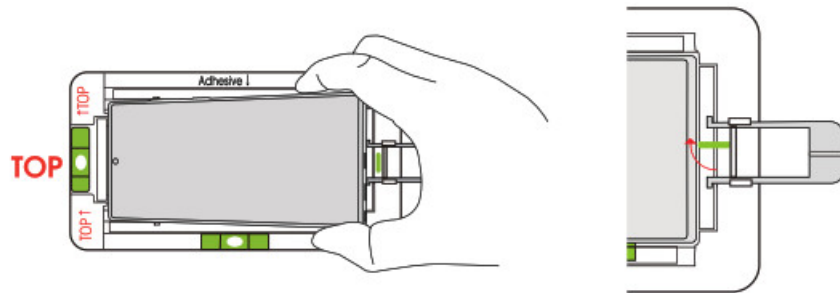


5. Insert the Pin into the slot at the end of the application tray.

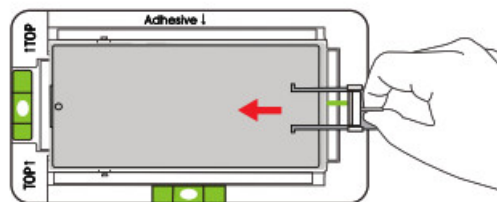


6. Use the Dust Removal Sticker to clean the screen, if there is any dust.

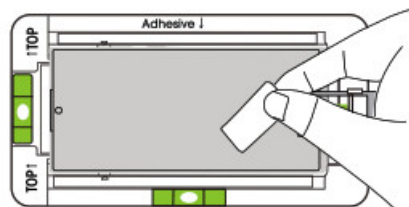


7. Adjust the application tray to make sure the 2 bubbles are in the center of each bubble level.

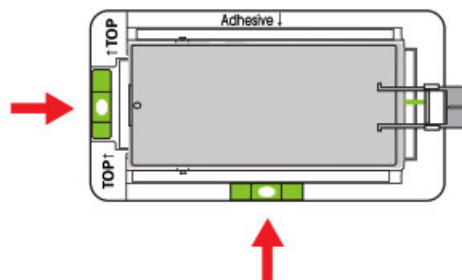

8. Pull off the YELLOW cap of the adhesive tube. Then remove the tip too pen the tube.

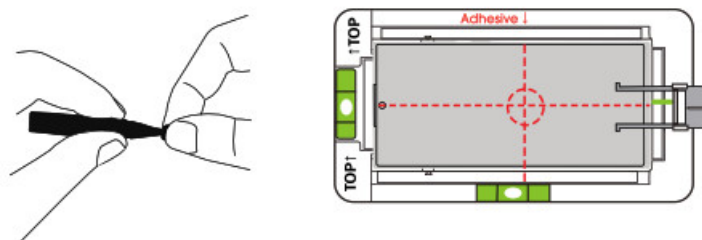


9. Hold the tube over the indicated position with the opened end facing down. Unscrew the black cap to release the adhesive from the tube.

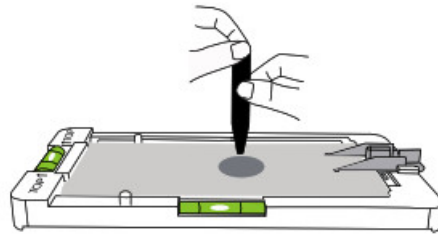


Please follow the direction of the arrow, and drip the adhesive to the center of the screen.


10. Peel off the mask film of the screen protector, and set it within the tray, resting one end on your phone screen and the other end on the pin.

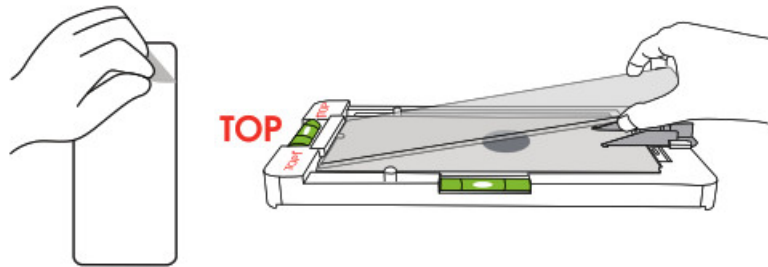


11. SLOWLY pull the pin outward to allow the protector to lower onto the adhesive. Once the protector touches the adhesive puddle, pull the pin out the rest of the way.

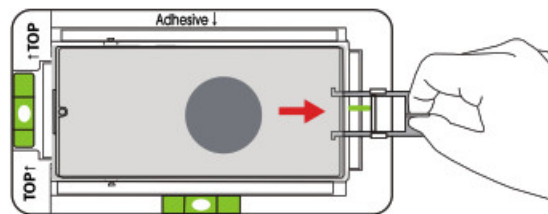


12. Wait for the adhesive to fully spread to all edges of the phone screen. It could take 3-5 minutes.  
DO NOT TOUCH the screen protector during this time.

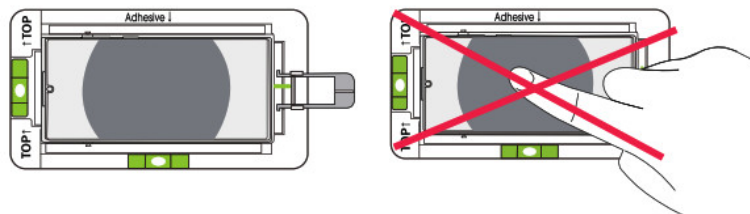

13. Plug the UV Light in and prop it up on its legs. Then turn it on and place it over the phone. Slowly move the UV Light to cure the whole screen until the UV light is turned off automatically. This process takes about 90 seconds. Once complete, repeat this process once more.

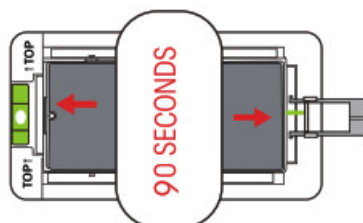


14. Rotate the green Lock Pin and remove the phone from the application tray.

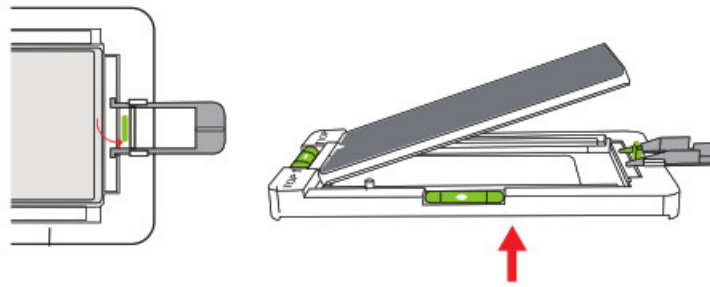

15. Turn on the UV Light and place it over the phone again .

Slowly move the UV Light to cure the whole screen until the UV Light turns off automatically. This process will take 90 seconds. Once complete, repeat the process.

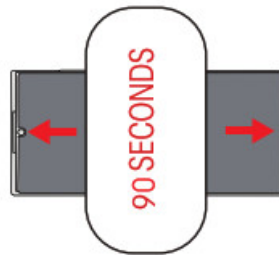

16. Rescan your fingerprints in to the phone system if needed, and enjoy the screen protector!



## Q&A

**Q: | got an air bubble during installation. What now?**

– A: If the Screen Protector is already on the phone with the adhesive spread, you will need a replacement Protector. Cure the Protector with the UV light, then remove it and discard, Please send us an email for a free replacement.

**Q: The Gel didn't spread evenly during application, and it's been more than 3 minutes. What do | do?**

– A: Tilt the phone in the direction that the Gel needs to go. DO NOT TOUCH THE PROTECTOR.

**Q: How do | reset my fingerprint after installing the screen protector?**

– A: Navigate: Settings > Lock screen > Looking for something else? > Fingerprints > Add Fingerprint

**Q: How do | remove the Screen Protector?**

– A: Once the UV gel is cured, it becomes a solid adhesive gel. You can peel the screen protector off, starting with one corner and carefully lifting up.

**Q: The adhesive came out of the tube, but a small amount splashed into its own puddle.**

– A: Tilt the phone so the larger pool will absorb the smaller one, and then tilt so the adhesive will return to center. Or, use the adhesive tube to drag the small puddle into the larger one.



**Damaged or Arrived Broken?**

Try our 1-Click Warranty Claim

Go to [TechMatte.com/WarrantyClaim](https://TechMatte.com/WarrantyClaim)

Scan the QR Code Below.

**Want More Coverage?**

Unlock our **Lifetime Warranty**

Go to [TechMatte.com/Register](https://TechMatte.com/Register)



24/7 Customer Support




[support@techmatte.com](mailto:support@techmatte.com)

[www.techmatte.com](https://www.techmatte.com)

STAY CONNECTED

Documents / Resources

	<p><a href="#">TECHmatte S22U Ultra Screen Protector</a> [pdf] Installation Guide S22U Ultra Screen Protector, S22U, Ultra Screen Protector, Screen Protector, Protector</p>
---	--

[Manuals+](#)