



TECHNI MOBILi RTA-B018 Rolling Laptop Cart with Storage Installation Guide


[Home](#) » [TECHNI MOBILi](#) » [TECHNI MOBILi RTA-B018 Rolling Laptop Cart with Storage Installation Guide](#) 

Contents

- [1 TECHNI MOBILi RTA-B018 Rolling Laptop Cart with Storage Assembly Instructions](#)
 - [1.1 MAIN PARTS LIST](#)
 - [1.2 LIST OF HARDWARE](#)
 - [1.3 MAIN PARTS LAYOUT \(FOR REFERENCE\):](#)
 - [1.4 ASSEMBLY STEPS](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)
- [3 Related Posts](#)

TECHNI MOBILi RTA-B018 Rolling Laptop Cart with Storage Assembly Instructions



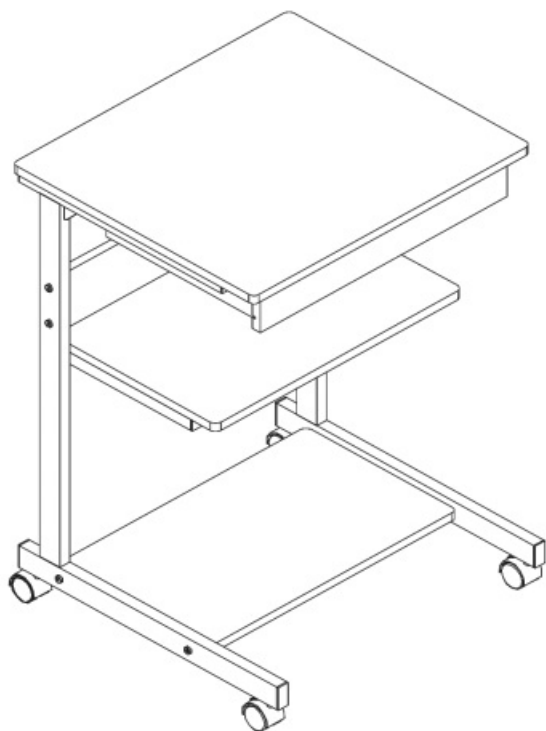

REV.032021-2



- Please read carefully the assembly instructions before the installation.









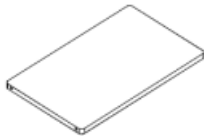
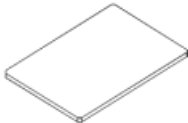
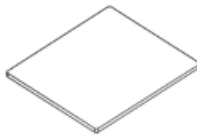



- Do not discard this manual or any of the packaging material until the unit has been completely assembled.



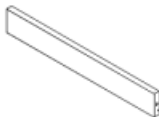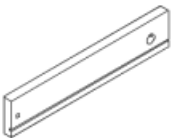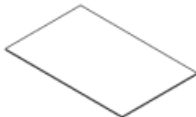








- Might require two people.


MAIN PARTS LIST

1 x1 Drawer back panel 	2 x1 Drawer right panel 	3 x1 Drawer bottom panel 	4 x1 Drawer left panel 
5 x1 Drawer front panel 	6 x1 Left frame 	7 x1 Right frame 	8 x1 Back panel 
9 x1 Bottom panel 	10 x1 Middle panel 	11 x1 Main panel 	12 x2 Slider 


LIST OF HARDWARE

PART	QTY	ITEM	
A	10	M5x60	
B	2	Cam Lock	
C	2	Cam Bolt	
D	2	Caster	
E	2	Caster W/Lock	
F	8	M6x30	
G	4	ST4x12	
H	4	M4x8	
		Tools	


MAIN PARTS LAYOUT (FOR REFERENCE):

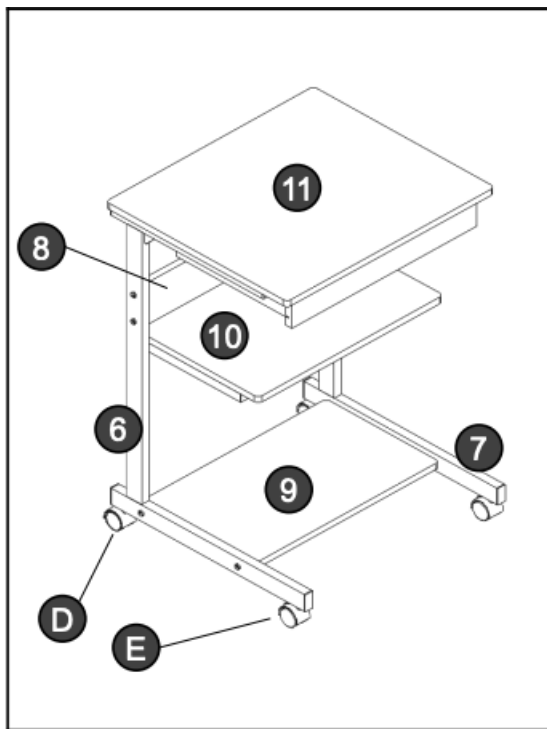



▼ This unit uses cam bolts and locks. The following explains how to use them. This is not an assembly step; it is a guide for when you are actually doing the assembly using this kind of hardware.

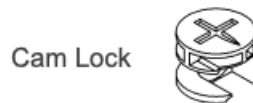

1. Screw the bolt into the corresponding panel.


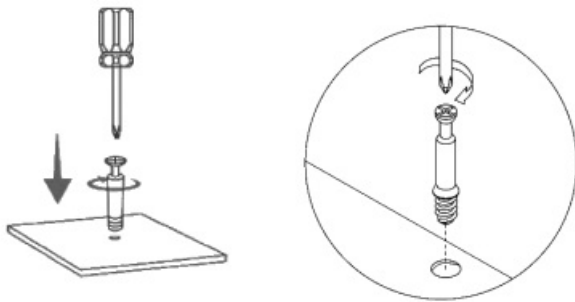


2. Place the other panel over the panel with the bolt, then insert the cam lock to join the bolt's head. If the cam lock does not want to enter, check its proper alignment. There might be a very small gap between the panels which is normal.

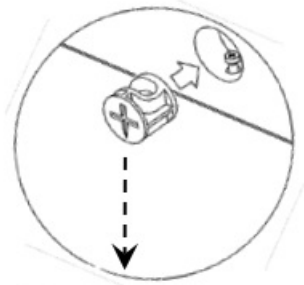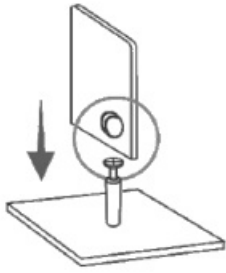

Alignment: The cross points towards the panel with the bolt.

3. Turn the cam lock clockwise. This will lock the parts together and will close any gaps.

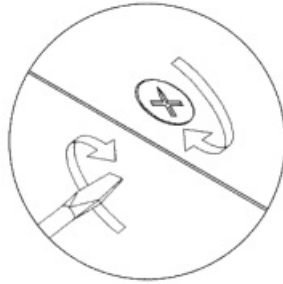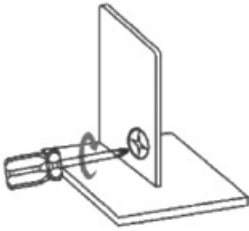

BEFORE YOU START THE ASSEMBLY, PLEASE READ THE FOLLOWING TIPS AND WARNINGS.

1. Do a quick inventory to make sure the package contains all the parts and hardware listed in the assembly instructions.



2. Missing, damaged and defective parts can be replaced at no cost to you. Please refer to the last pages on this manual.



3. The replacement parts service is limited to the continental United States. If you reside in Hawaii, Puerto Rico, U.S. Dependencies or other countries, please contact the supplier from where the unit was purchased.




4. If during assembly you find an issue or need clarification, please contact our Customer Service for assistance. Please refer to the last pages on this manual.




5. On each step read the instructions and analyze the illustrations thoroughly before proceeding to do the assembly.




6. Make sure you understand which hardware will be used on each step. Using the wrong size of screw, bolt or pin might strip the threads or cause damage to the part in which it is being used.

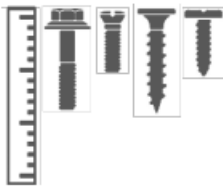

7. To avoid misalignments, always leave the screws loose and tighten them until all pieces are positioned correctly.

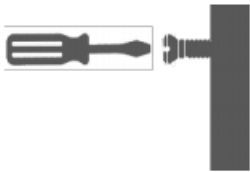

8. Do not overtighten or force the screws as they might break, strip, damage the threads of the holes or get stuck inside the part.

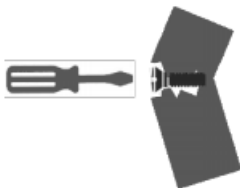




9. Sometimes the laminate might cover partially or entirely the hole on a panel. If there is no visible hole for the screw, pass and press the tip of your finger over the area where the hole should be located to feel the indentation, and once found, carefully pierce the laminate to reveal the hole underneath.




10. If the hole seems too small for the screw, first make sure you are using the correct size of screw and that it's been installed in the correct hole. If the hole still appears to be too small, carefully pierce the laminate to reveal the hole's actual size.







ASSEMBLY STEPS

STEP 1		
Screws/Tools:		
A	 M5x60	2 Pcs
B	 Cam Lock	2 Pcs
C	 Cam Bolt	2 Pcs



Insert the bolts **C** into panel **5**, then join it to panels **2** and **4**. Insert the cam locks **B** and turn them to lock the panels as shown and as explained in page 3. Then insert the panel **3** through the grooves of all the panels, and finally, assemble the back panel **1** to the side panels **2** and **4** with screws **A** as shown.

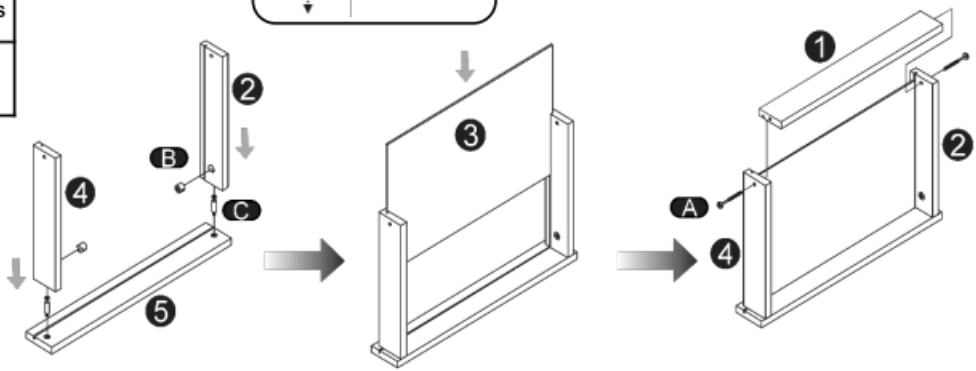
 Cam lock alignment




STEP 2		
Screws/Tools:		
D	 Non-Locking	2 Pcs
E	 Locking	2 Pcs
H	 M4x8	4 pcs

Open the sliders **12** and attach them to the top bars of the left frame **6** and the right frame **7** with screws **H** from the inside. Then assemble the casters to the bottom of the frame, making sure the non-locking casters **D** go at the **back**, and the locking casters **E** go at the **front** of the unit.

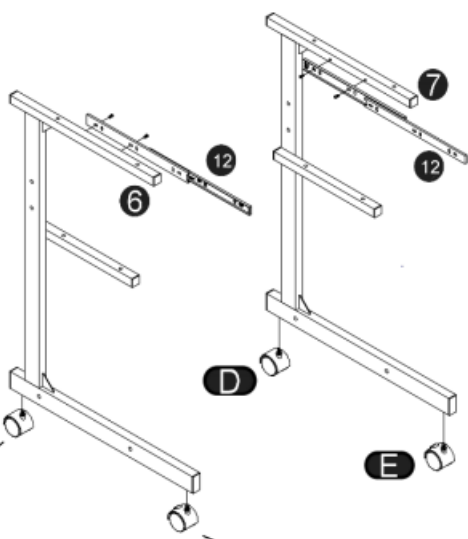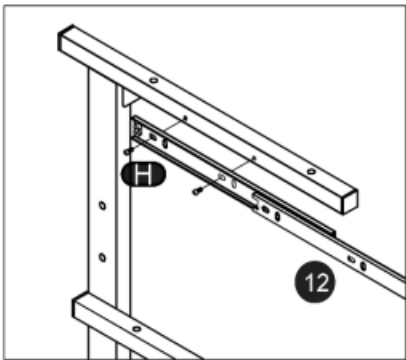



 **D** NON-LOCKING AT BACK


 **E** LOCKING AT FRONT

STEP 3**Screws/Tools:****A**
M5x608
Pcs

Assemble the back panel **8** and the bottom panel **9** to both frames with screws **A** from the outside as shown.

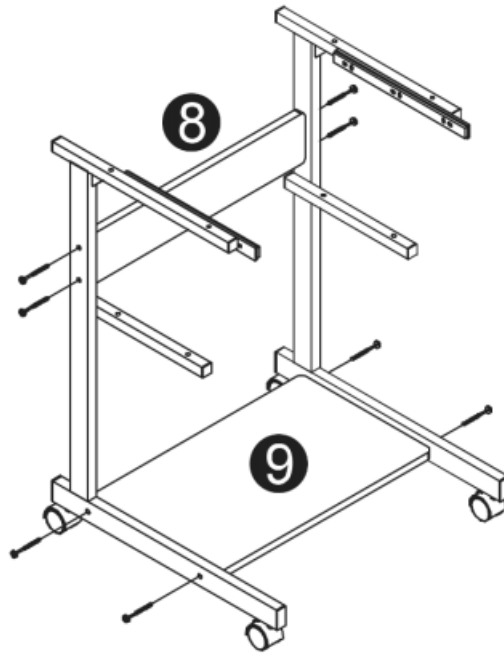**STEP 4****Screws/Tools:****F**
M6x304
Pcs

Attach the middle panel **10** to the middle bars on the frames with screws **F** from underneath.

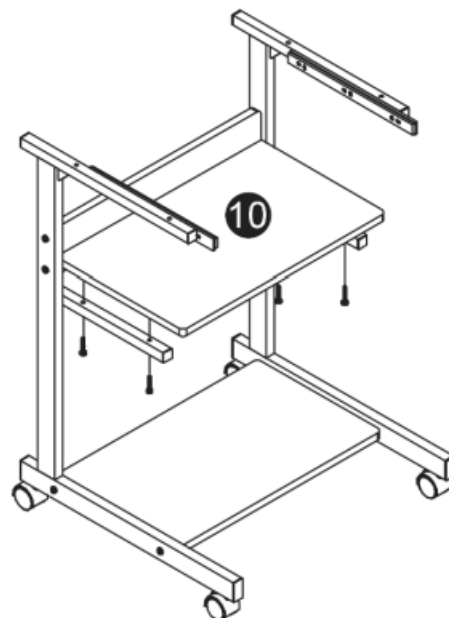


STEP 5**Screws/Tools:****F**

M6x30

4
Pcs


Place the main panel **11** over the frames and secure it with screws **F** from underneath.

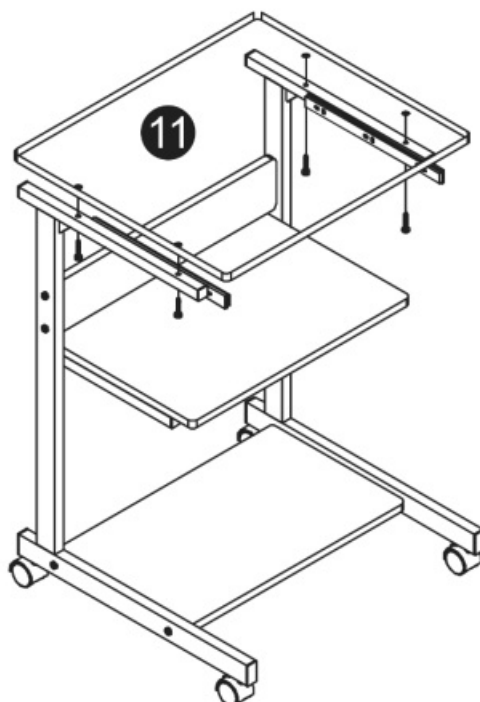**STEP 6****Screws/Tools:****G**


ST4x12

4
Pcs

Pull out the sliders and attach to them the utility drawer with screws **G**.

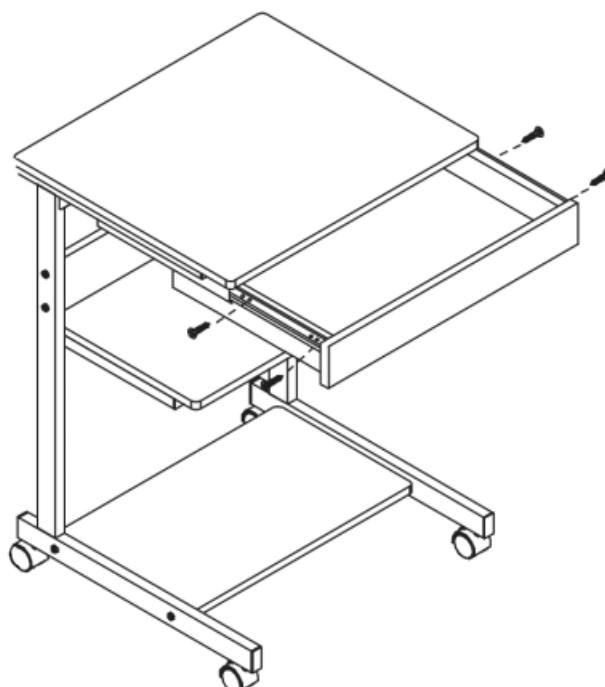
**ALL DONE!**

Give yourself a nice pat on the back. You did a great job!

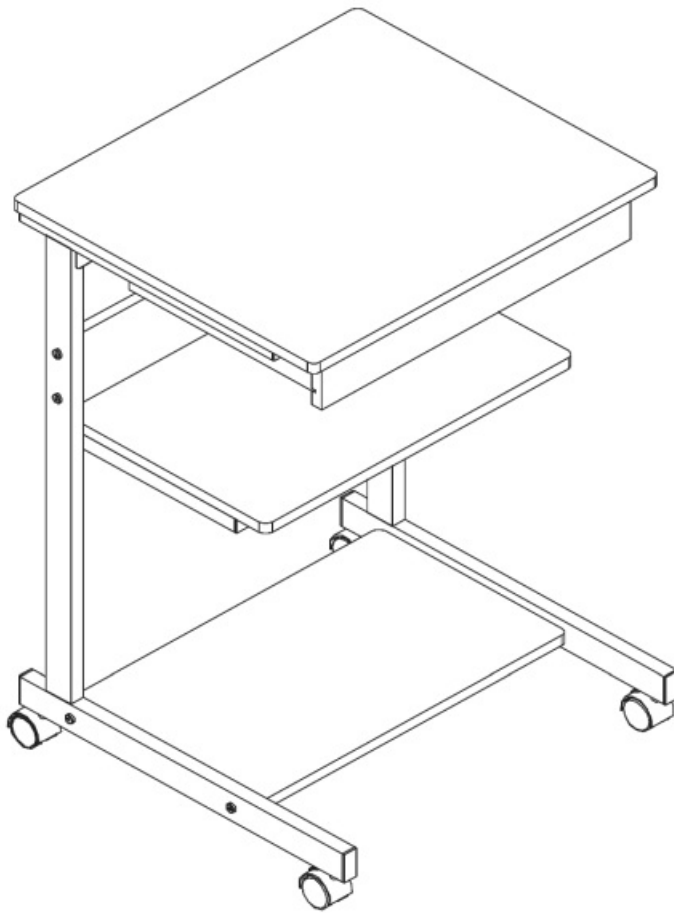

AFTER THE ASSEMBLY IS DONE, PLEASE READ CAREFULLY THE FOLLOWING CARE AND MAINTENANCE WARNINGS:

WEIGHT LIMITS

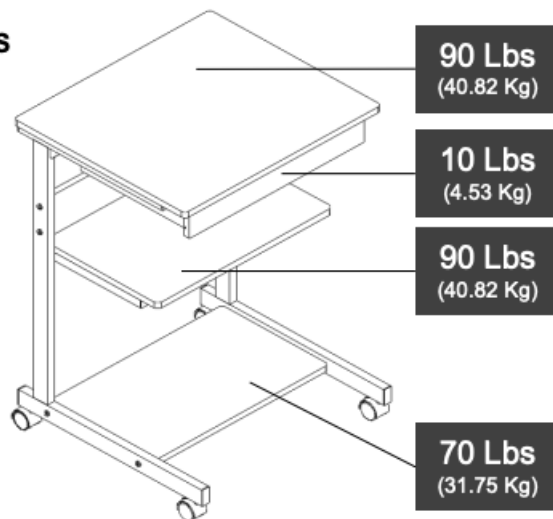

- Do not exceed the indicated weight limits.
- Do not expose the surfaces to direct sunlight or to extreme environmental conditions.
- Clean the surfaces preferable with a clean cloth damped in a solution of mild soap and water, then dry with a clean towel.
- Do not use solvents or abrasive materials to clean the unit.
- If you decide to use a cleaning agent, test first on an area hidden from view such as underneath the tabletop.
- Do not sit on the unit or lean against it.

- Do not allow small children to play under or over the unit, nor use it as a moving vehicle.
- Keep the unit with the front casters locked.
- Before moving the unit, make sure to unlock the front casters, and secure or remove any object that might fall off.
- When lifting the unit, use both hands and bend your knees, not your backs.
- When transporting the unit to places far away, lock the front casters and protect and secure the unit to avoid damage in transit.
- Shall any part of the unit become defective during the warranty period, replacement parts might be available to you at no charge. Please refer to the last pages on this manual.
- The warranty does not extend to regular wear and tear, nor the manufacturer assumes liability for damages or consequences due to accidents, incorrect assembly, negligence, improper use, modifications, or not heeding the above warnings.

FOR SEVERAL HELP OPTIONS INCLUDING REPLACEMENT PARTS ORDERS


VISIT: WWW.TECHNIMOBILI.COM CLICK ON SUPPORT TAB



Scan QR Code to order replacement parts

OR EMAIL US: SUPPORT@RTAPRODUCTS.COM

Documents / Resources

 <p>MODEL RTA-B018 ASSEMBLY INSTRUCTIONS</p>	<p>TECHNI MOBILi RTA-B018 Rolling Laptop Cart with Storage [pdf] Installation Guide RTA-B018, Rolling Laptop Cart with Storage</p>
---	--

References

- [Techni Mobili Home and Office Furniture](#)