

N350RT Quick Installation Guide


Contents

- [1 N350RT Quick Installation Guide](#)
- [2 Installation Diagram](#)
- [3 Interface](#)
- [4 DiagramMethod One: login via tablet/Cellphone](#)
- [5 Method Two: login via PC](#)
- [6 DOWNLOAD](#)
- [7 Related Posts](#)


N350RT Quick Installation Guide

It is suitable for: **N350RT**

Installation Diagram

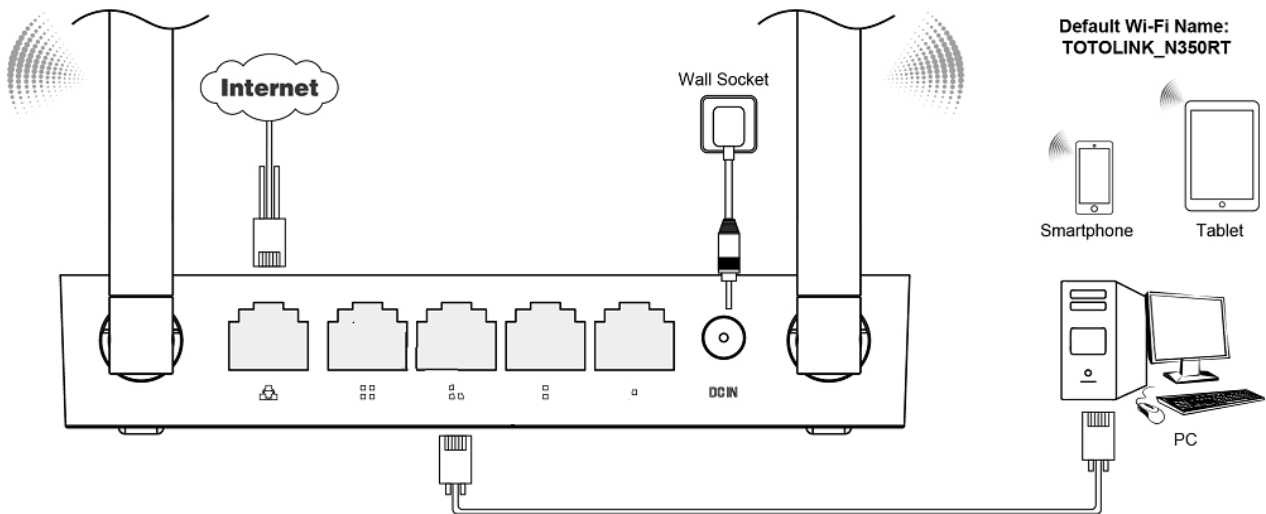


Interface

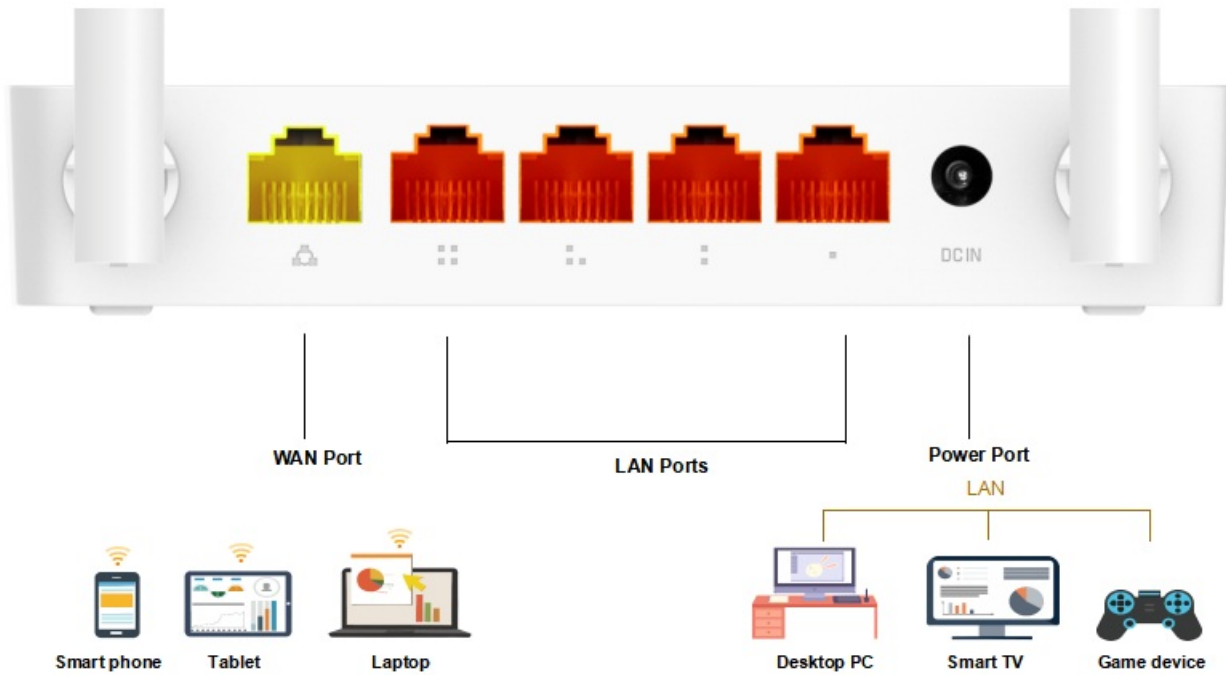

DiagramMethod One: login via tablet/Cellphone


STEP-1:

Activate the WLAN function on your Phone and connect to TOTOLINK_N350RT. Then run any Web browser and enter <http://itotolink.net> in the address bar.

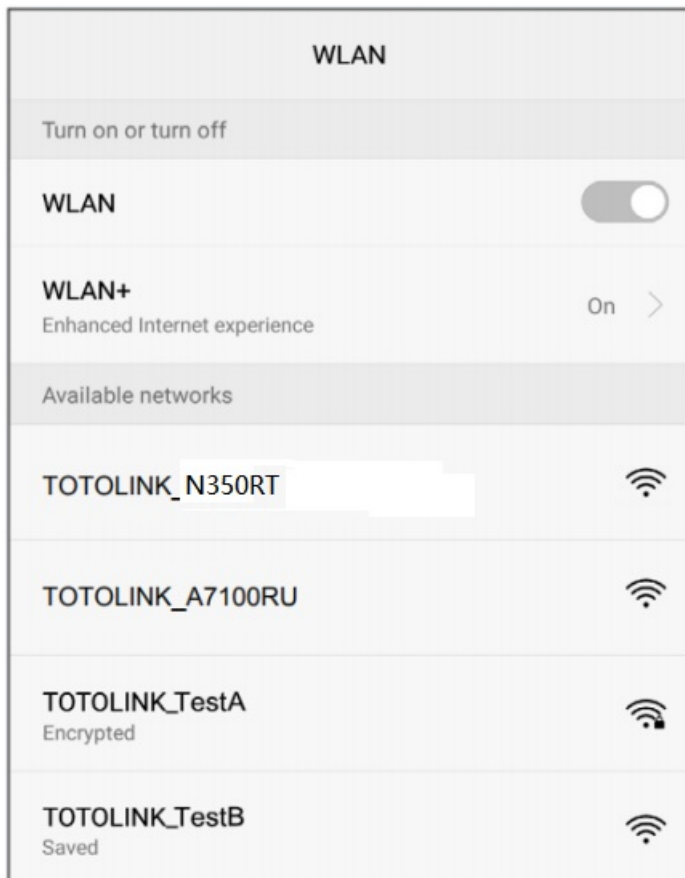

STEP-2:


Enter admin for the password and then click LOGIN.

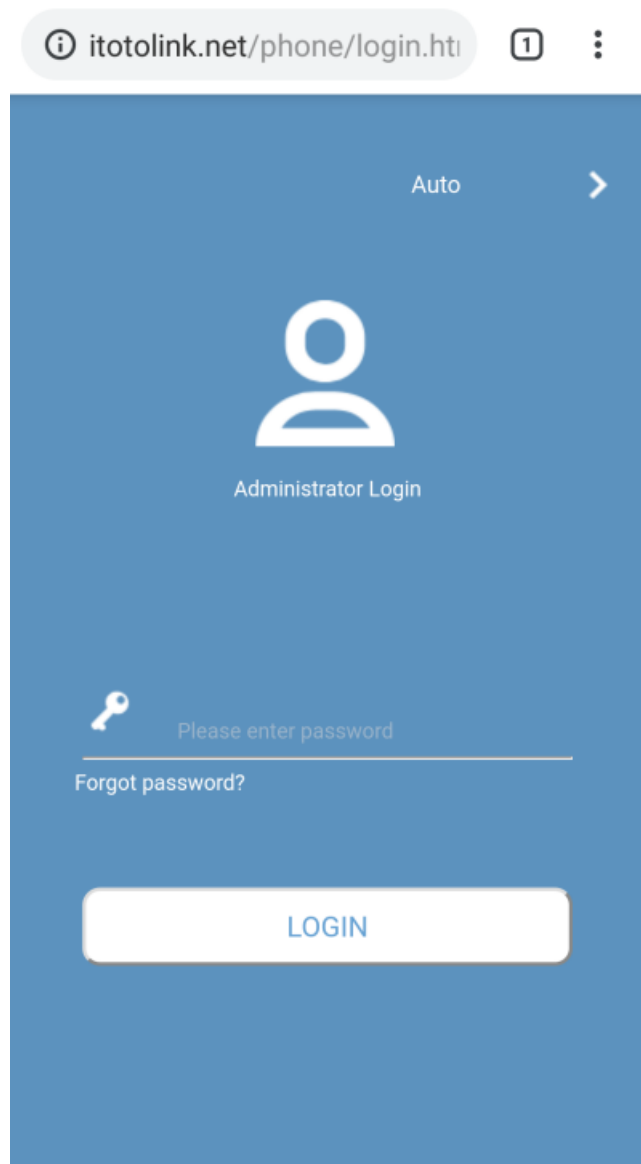

The screenshot shows a web browser address bar with the URL "itotolink.net/phone/login.hti". The page has a blue background. At the top right, there is a label "Auto" and a right-pointing arrow. In the center, there is a white icon of a person and the text "Administrator Login". Below this, there is a key icon and the text "Please enter password" followed by a horizontal input line. Under the input line, there is a link "Forgot password?". At the bottom, there is a white rounded rectangular button with the text "LOGIN".


STEP-3:

Click Quick Setup.

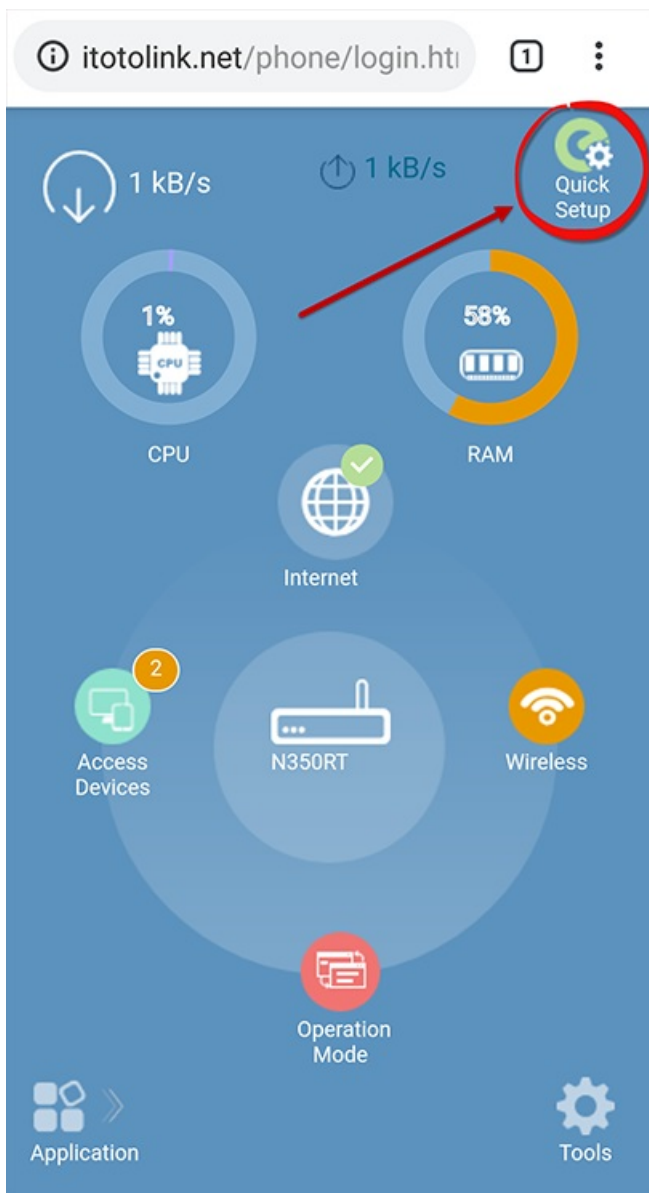


STEP-4:

Time Zone setting. According to your location, please click the Time Zone to choose a correct one from the list, then click Next.

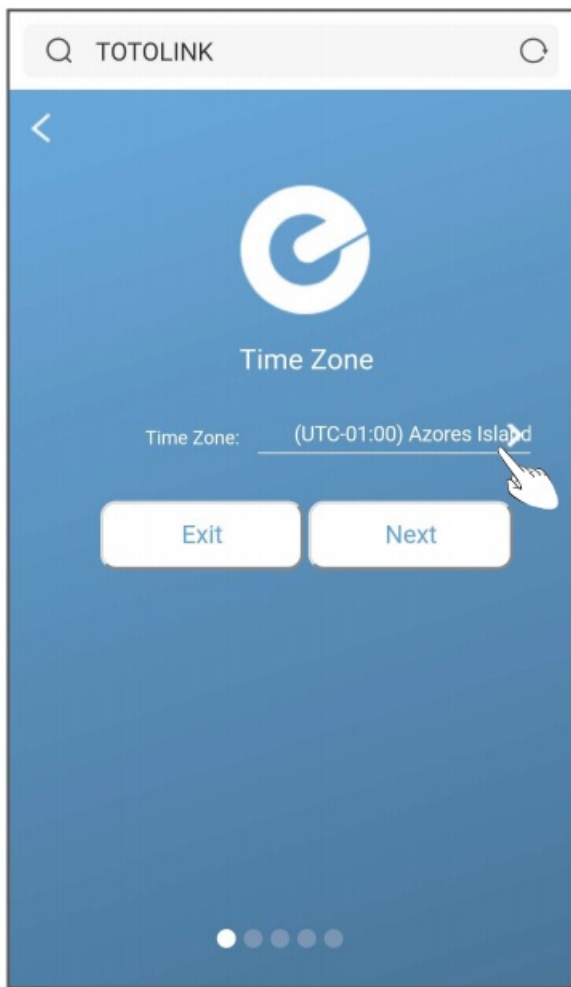

STEP-5:

Internet Setting. Choose a suitable connection type from the list and fill in the information required, then click Next.

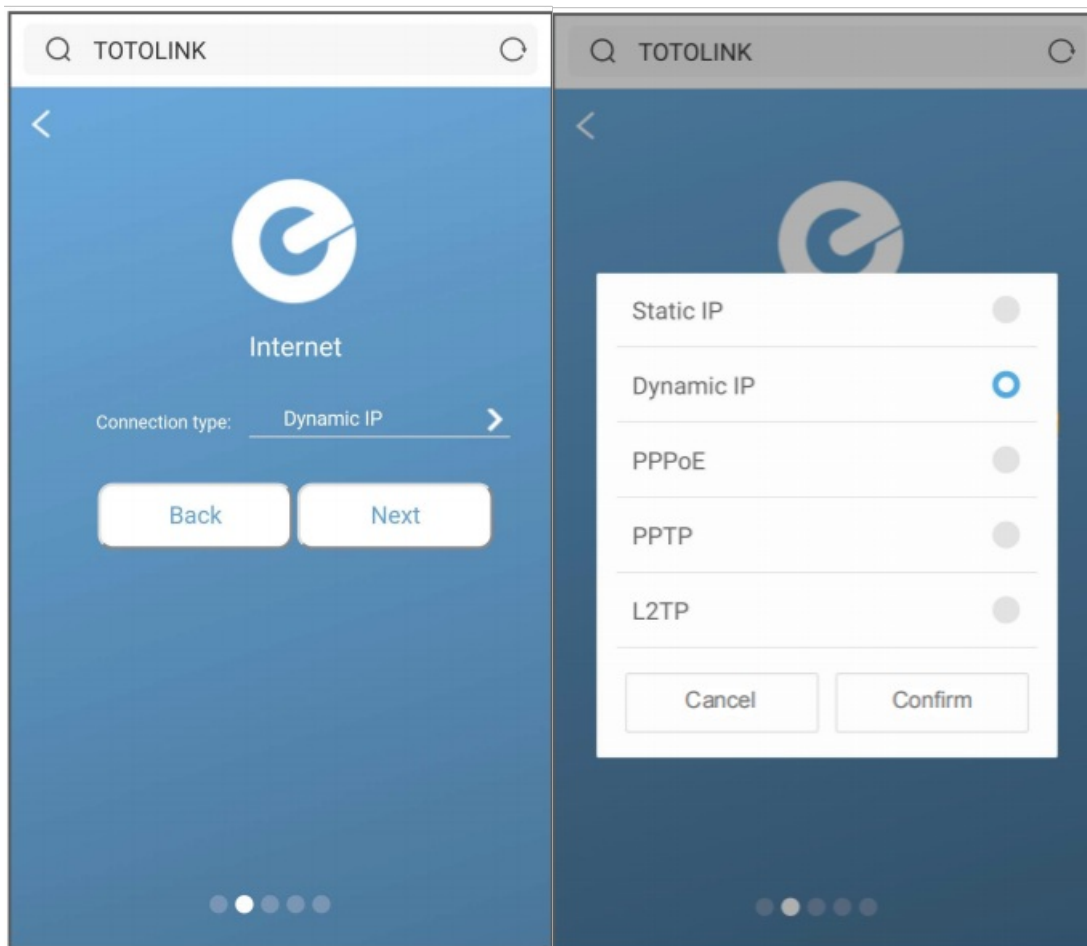

STEP-6:

Wireless Setting. Create passwords for 2.4G and 5G Wi-Fi (Here users could also revise the default Wi-Fi name) and then click Next.

itotolink.net/phone/login.htm 1

<



Wireless

Radio On/Off 2.4GHz: ☒

Network name(SSID): TOTOLINK_N350RT

Password:


Hide SSID: ☐

Back Next

● ● ● ●


STEP-7:

For security, please create a new Login Password for your router, then click Next.

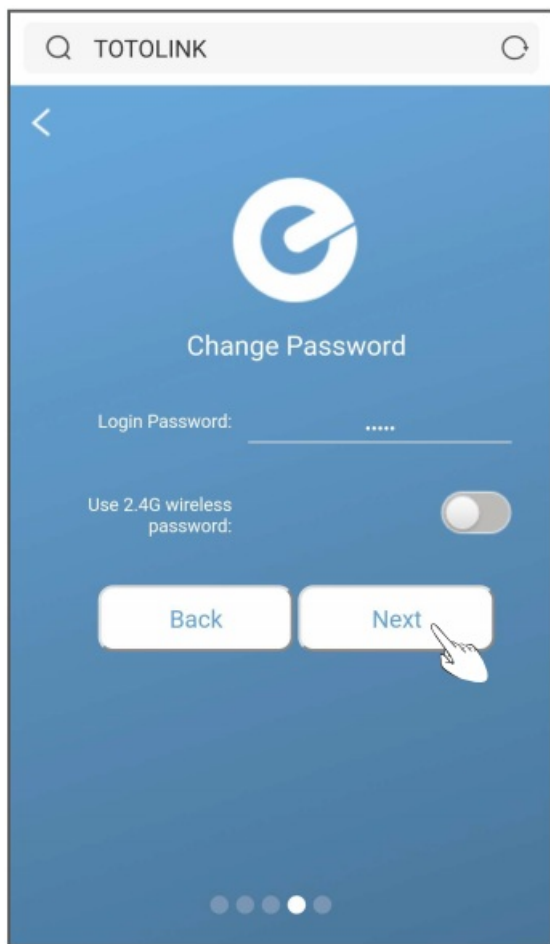


STEP-8:

The coming page is the Summary information for your setting. Please remember your Wi-Fi Name and Password, then click Done.

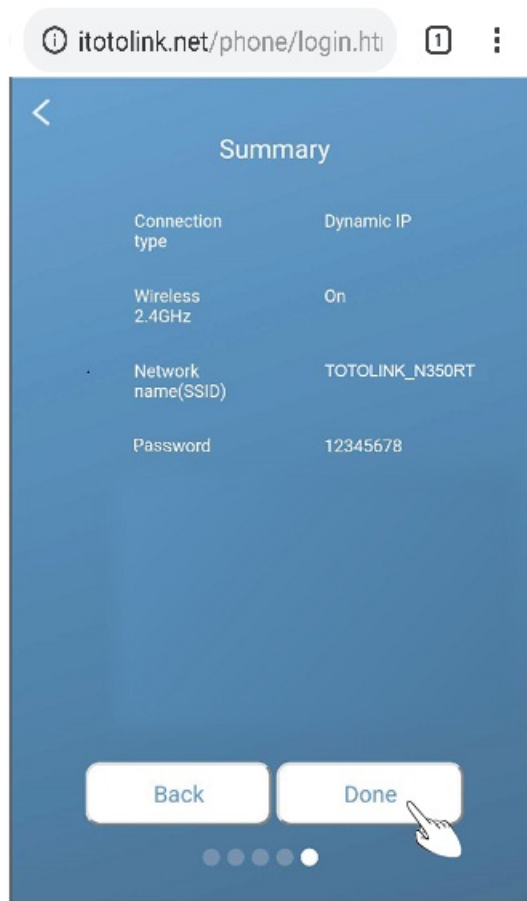

STEP-9:

It takes several seconds to save the settings and then your router will restart automatically. This time your Phone will be disconnected from the router. Please back to the WLAN list of your phone to choose the new Wi-Fi name and input the correct password. Now, you could enjoy the Wi-Fi.

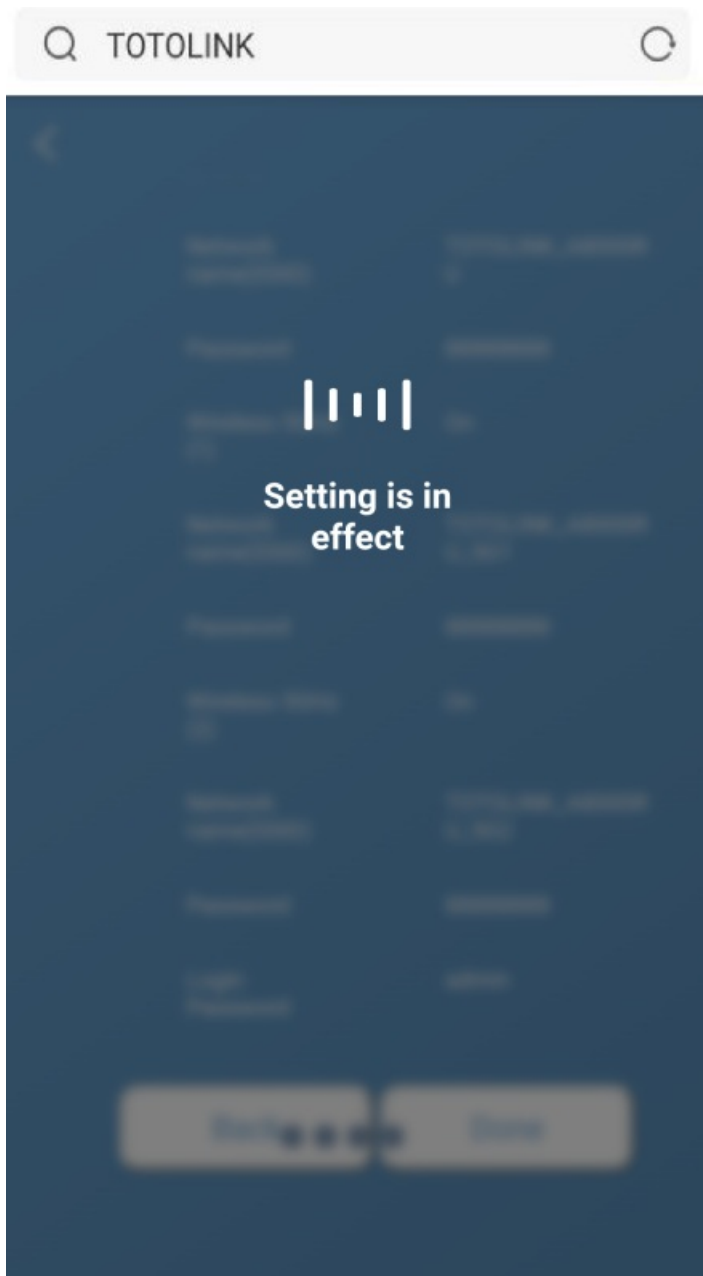

STEP-10:

More features: Click Application.




1 kB/s



1 kB/s



Quick
Setup

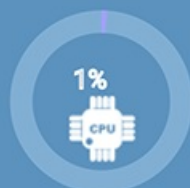

CPU



RAM



Internet



Access
Devices




N350RT



Wireless




Operation
Mode

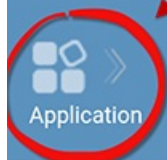

Application



Tools

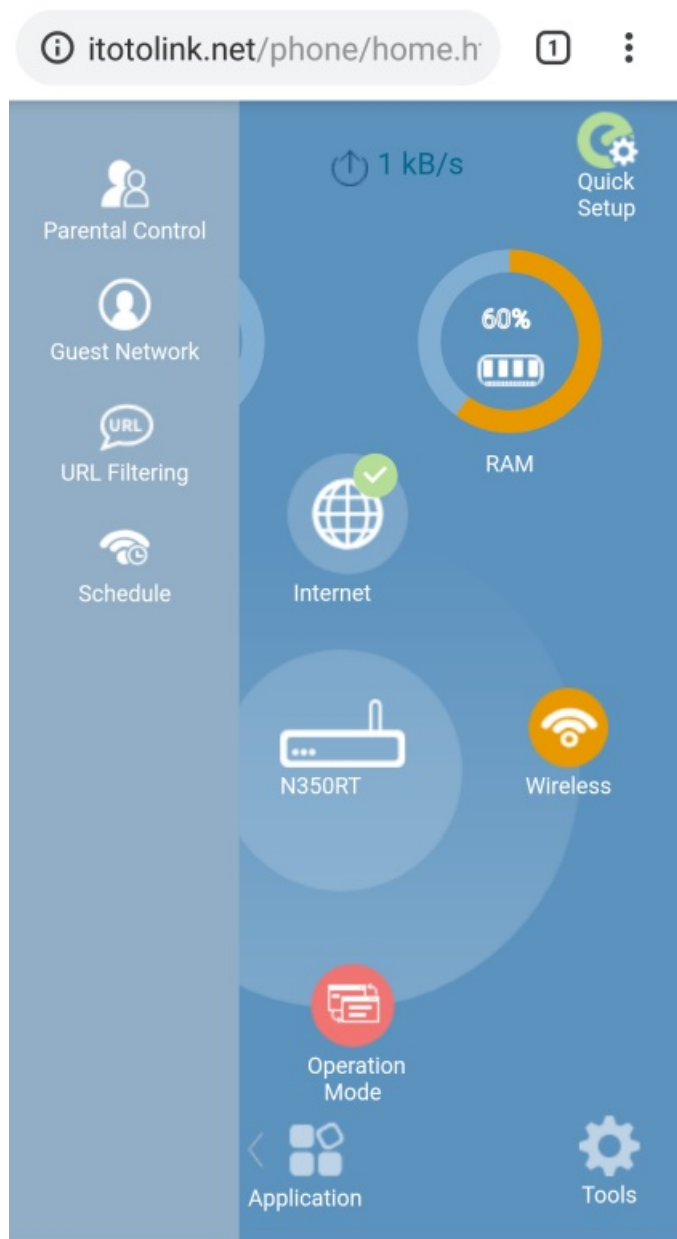

STEP-11:

More features: Click Tools.




Method Two: login via PC

STEP-1:

Connect your computer to the router by cable or wireless. Then run any Web browser and enter <http://itotolink.net> in the address bar.


STEP-2:

Enter admin for the password and then click LOGIN.

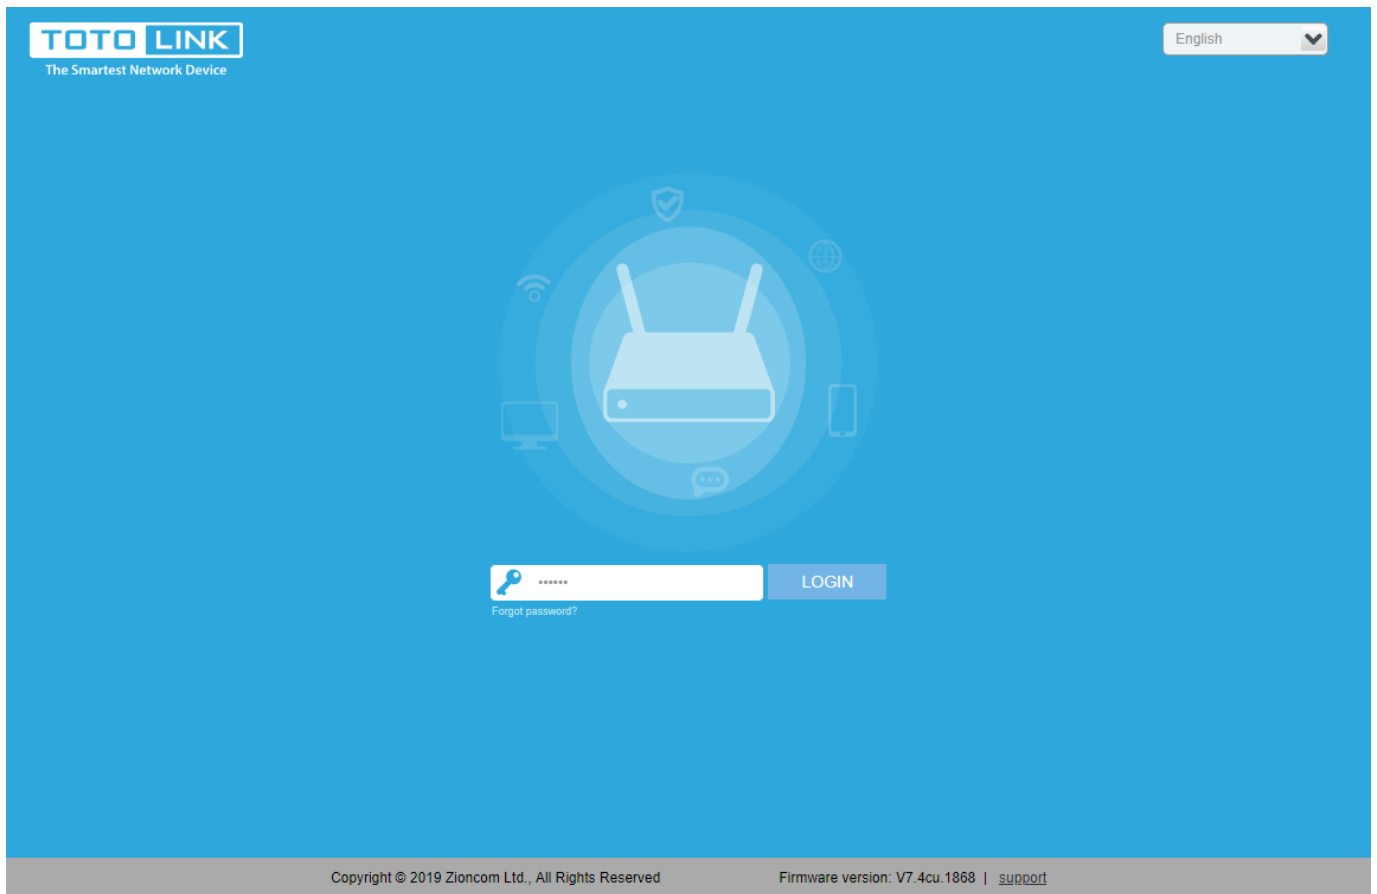

STEP-3:

Click Quick Setup.

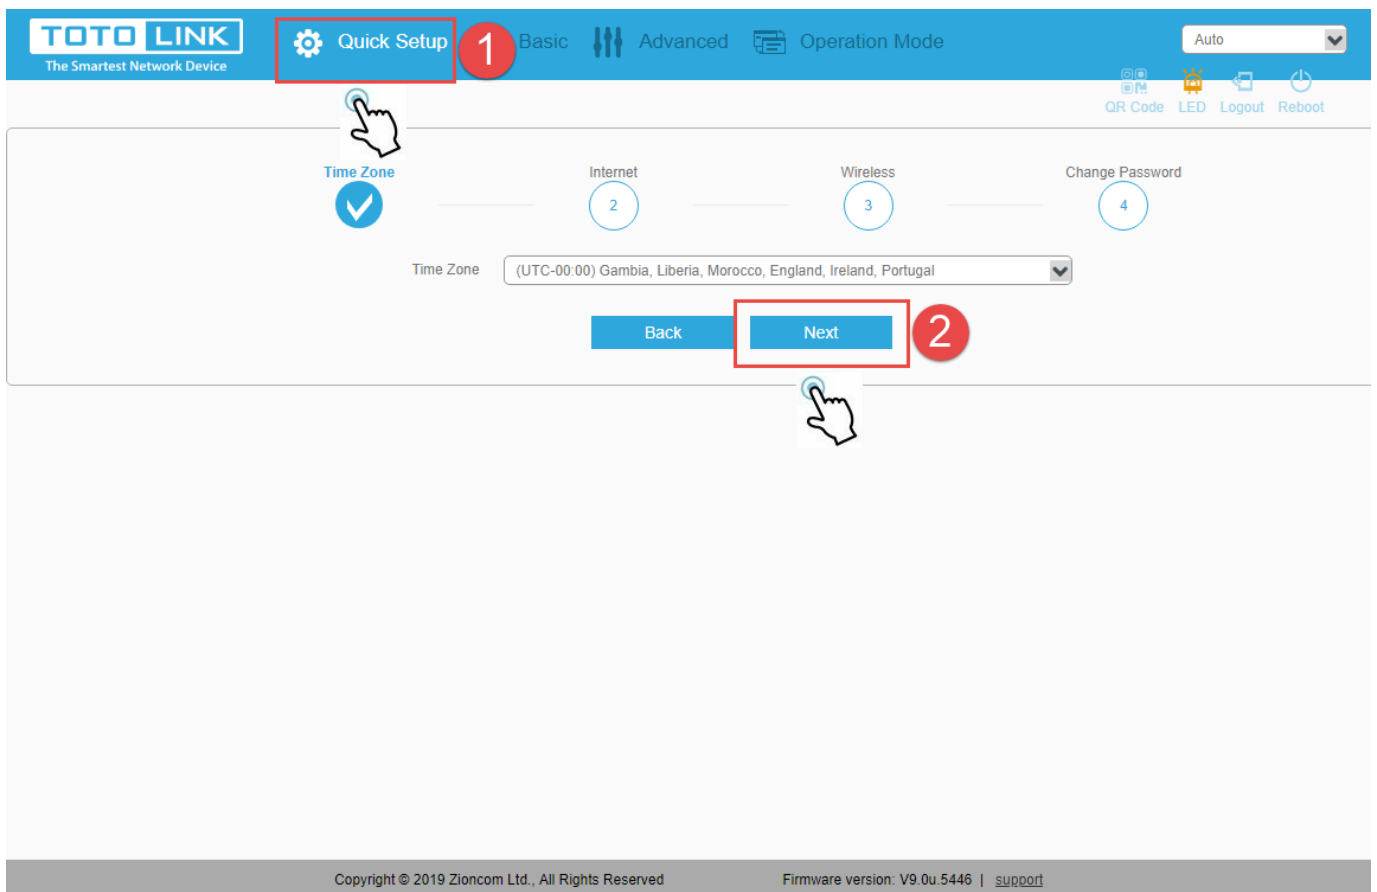

TOTO LINK

The Smartest Network Device

Quick Setup

Basic

Advanced

Operation Mode

Auto

QR Code

LED

Logout

Reboot

Time Zone

Internet

Wireless

Change Password

Dynamic IP

Static IP

PPPoE

PPTP

L2TP

If your ISP only allows internet access to a specific MAC address, you need to clone the MAC address. If you don't sure, select 'Use default MAC address'.

Use default MAC address

Clone PC's MAC address

MAC address

F4:28:53:00:00:2D

Back

Auto detect

Next

3

Copyright © 2019 Zioncom Ltd., All Rights Reserved

Firmware version: V9.0u.5446 | [support](#)

TOTO LINK

The Smartest Network Device

Quick Setup

Basic

Advanced

Operation Mode

Auto

QR Code

LED

Logout

Reboot

Time Zone

Internet

Wireless

Change Password

Wireless 2.4GHz

Radio On/Off

Network name(SSID)

TOTOLINK_N350RT

Hide

Encryption On/Off

Password


Back

Next

4

Copyright © 2019 Zioncom Ltd., All Rights Reserved

Firmware version: V9.0u.5446 | [support](#)

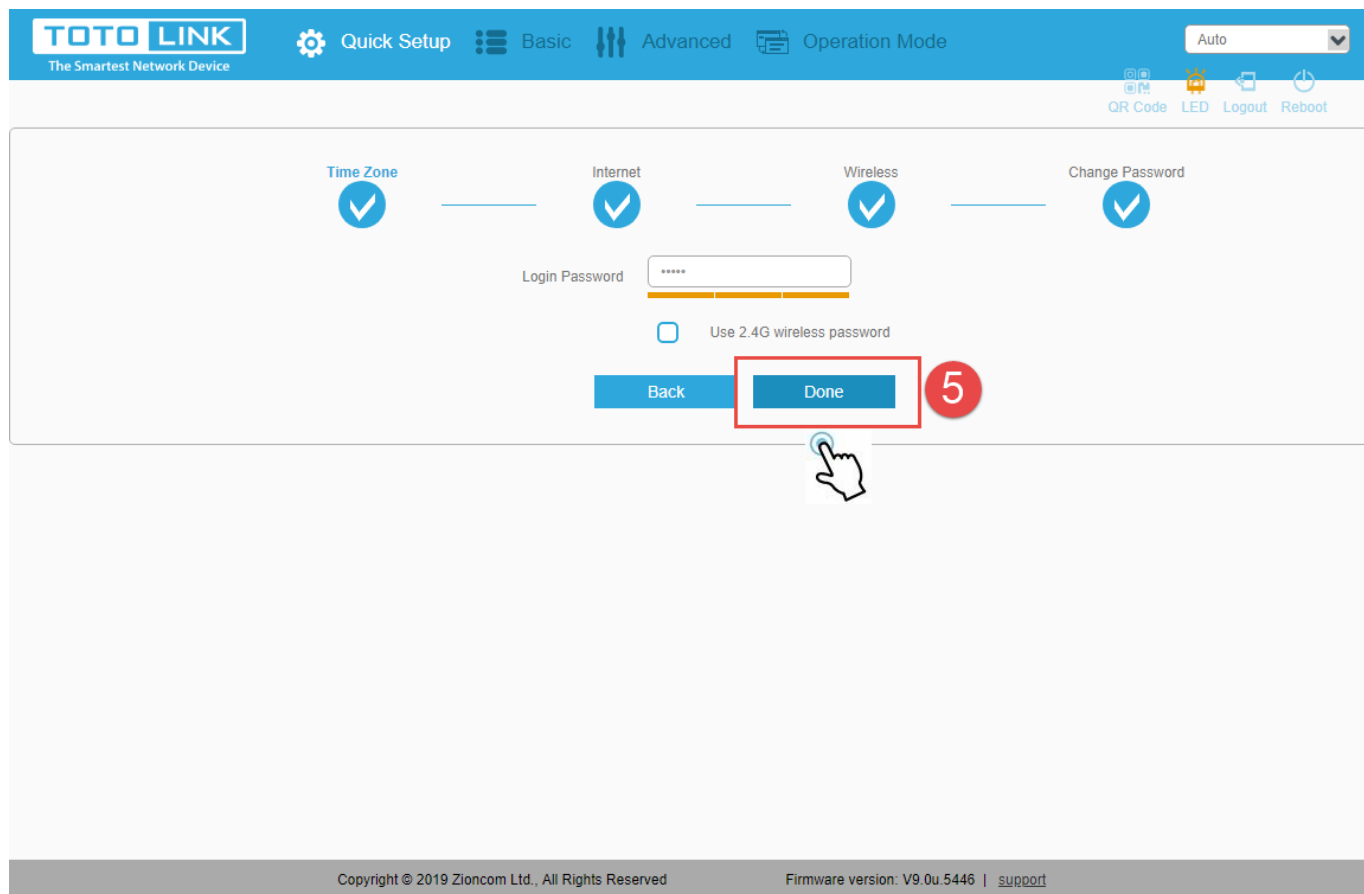

DOWNLOAD

N350RT Quick Installation Guide – [[Download PDF](#)]