N600R MAC filter settings

Contents

N600R MAC filter settings

It is suitable for: **N600R, A800R, A810R, A3100R, T10, A950RG, A3000RU**

Application introduction: Solution about how to configure Wireless MAC Filtering on TOTOLINK router

STEP-1:

Connect your computer to the router by cable or wireless, then login the router by entering http://192.168.0.1 into the address bar of your browser.
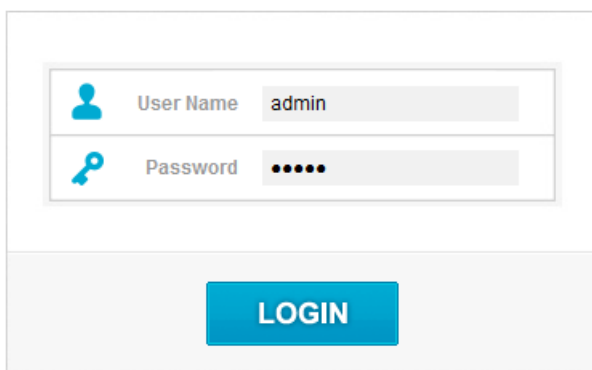

Note: The default access address varies depending on the actual situation. Please find it on the bottom label of the product.

STEP-2:

User Name and Password are required, by default both are **admin** in lowercase letter. Click **LOGIN**.

STEP-3:

Please go to **Firewall ->MAC Filtering** page, and check which you have selected.Select **Enable**, then Input your own **MAC Address** which you want to restrict or click **Scan** bottom to restrict it and give a **Comment** for this item, then Click **Add**.

Note: You need add items in this way one by one.

DOWNLOAD

N600R MAC filter settings – [**Download PDF**]