



Triple M
9PET201L HDP
Angled Toolbox



Triple M 9PET201L HDP Angled Toolbox Installation Guide

[Home](#) » [Triple M](#) » Triple M 9PET201L HDP Angled Toolbox Installation Guide 

Contents

- [1 Triple M 9PET201L HDP Angled Toolbox](#)
- [2 Product Usage Instructions](#)
- [3 Kit Contents](#)
- [4 Section 1 – Installation](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)



Triple M 9PET201L HDP Angled Toolbox



Specifications

- **Product Name:** 9PET201L-R HDP Angled Toolbox
- **Maximum Loading Capacity:** 25Kg
- **Fitting Time:** 0 hours 15 minutes
- **Document Issue:** 2, dated 26/06/2024

Product Usage Instructions

1. Section 1 – Installation

STEP 1a

Locate the rear mudguard on the underside of the tray. Align Mount Rails to the underside of deck plank holes and rearward from the mudguard. Ensure flange of Mount Rail with widely spaced holes are facing inward and bolt to deck planks using M6x16 Bolt & M6 Nyloc Nuts.

STEP 1b

Ensure flanges are facing inward towards the main bearer and set at the specified distance. Proceed to Step 3.

STEP 2a (For Steel Tray Bodies)

Align Mount Rails to the underside cross bearer holes and rearward from the mudguard. Bolt to the cross-bearers using M6x16 Bolt & M6 Nyloc Nuts

2. STEP 2

Ensure flanges are facing inward towards the main bearer and set at the specified distance.

3. STEP 3

Assemble HDP Toolbox to Mount Rails using M6x40 Bolts, Washer & M6 Nyloc Nut.

4. STEP

5. Keep a minimum gap of 10mm between HDP Toolbox and PP Mudguard.

STEP 5

Complete the toolbox key form, place toolbox keys on the vehicle key ring, and record details in the vehicle's user manual.

FAQ


Q: What tools are required for installation?

A: You will need a 10mm Socket, 10mm Spanner, Tape Measure, and Ratchet.

Kit Contents

NOTE: CHECK KIT CONTENTS BEFORE COMMENCING FITMENT AND REPORT ANY DISCREPANCIES

Item	Description	Qty
1	HDP Toolbox (LH or RH)	1
2	Mount Rail	2
3	1/4 x 3/4 x 16G Washer	4
4	M6x16 8.8 Hex Bolt	4
5	M6x40 8.8 Hex Bolt	4
6	M6 Nyloc Nut	8

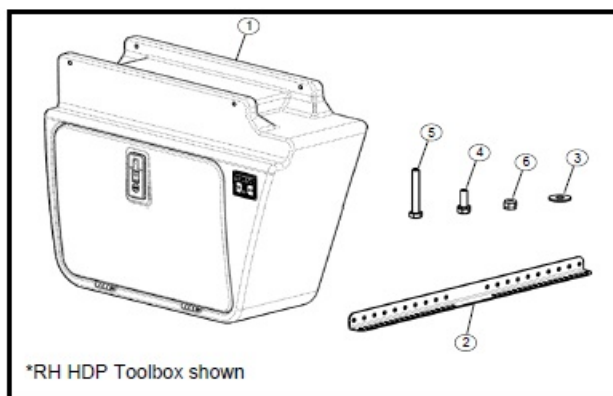**Tools Required**

TOOLS REQUIRED	
10mm Socket	10mm Spanner
Tape Measure	Ratchet

Fastener Torque Table

Fastener size	Class	Torque
M6	8.8	9 Nm

- MAXIMUM LOADING CAPACITY – 25Kg
- Instructions will show images of the RH side installation using part 9PET201R. LH side installation using 9PET201L will be a mirror image.
- Please read these instructions carefully before installation, paying special attention to all Notice, Caution & Warning notes.
- Failure to do so may result in damaged parts or injury to the installer or customer.

Section 1 – Installation

1. STEP 1a

Note: Steps 1a & 1b are for installation to Alloy Tray Bodies. For Steel Tray Bodies, proceed to Step 2.



Locate the rear mudguard on the underside of the tray. Align Mount Rails to the underside of deck plank holes and rearward from the mudguard as shown in adjacent diagram.

Ensure flange of Mount Rail with the widely spaced holes are facing inward and bolt to deck planks, using M6x16 Bolt & M6 Nyloc Nuts as shown.

STEP 1b

Ensure flanges are facing inward towards main bearer and set at the distance shown in the adjacent diagram.

Proceed to Step 3.

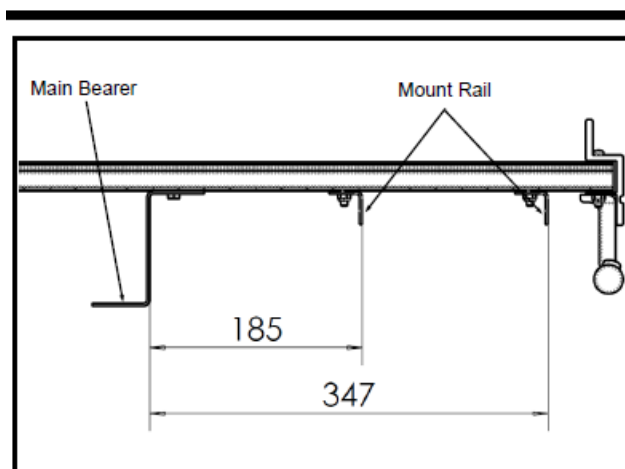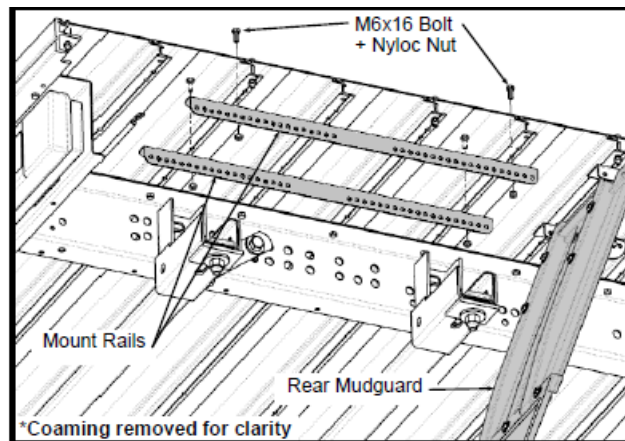


2. STEP 2a

Note: Steps 2a & 2b are for installation to Steel Tray Bodies only.


Locate the rear mudguard on the underside of the tray. Align Mount Rails to the underside cross bearer holes and rearward from the mudguard as shown in adjacent diagram.

Ensure flange of Mount Rail with the widely spaced holes are facing inward and bolted to the cross bear-ers, using M6x16 Bolt & M6 Nyloc Nuts as shown.

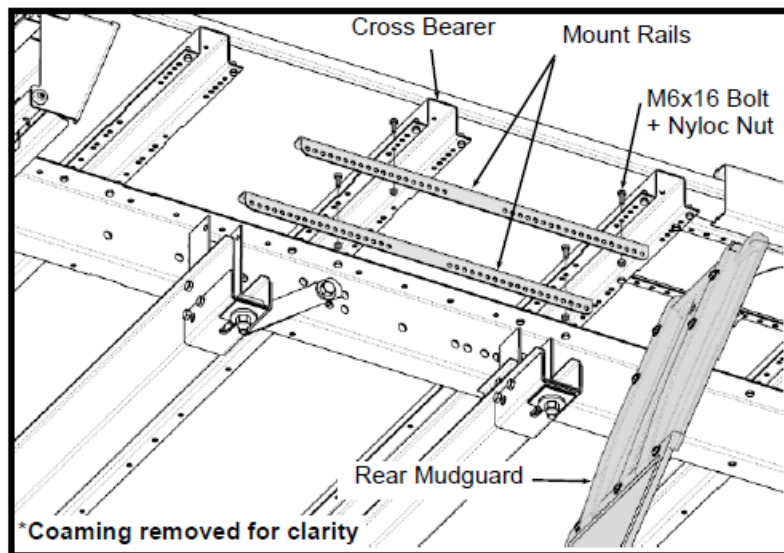

1. STEP 2b

Ensure flanges are facing inward towards main bearer and set at the distance shown in the adjacent diagram.


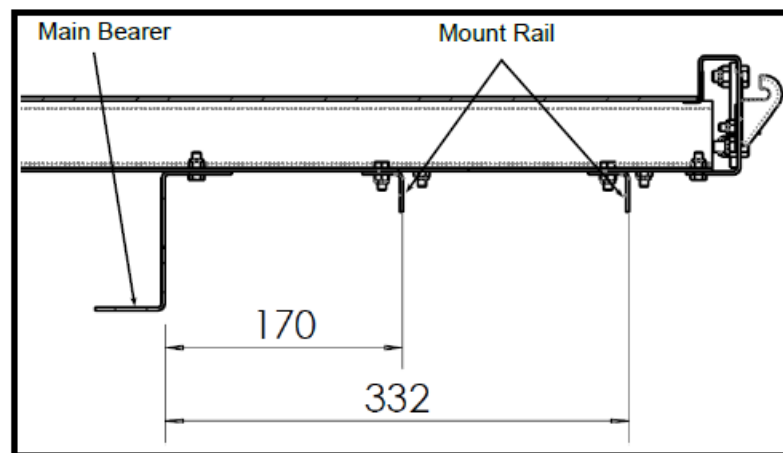


3. STEP 3

Assemble the HDP Toolbox to Mount Rails as shown in the adjacent diagram using M6x40 Bolts, Washer & M6 Nyloc Nut.

4. STEP 4

Ensure to keep a minimum gap of 10mm between HDP Toolbox and PP Mudguard.

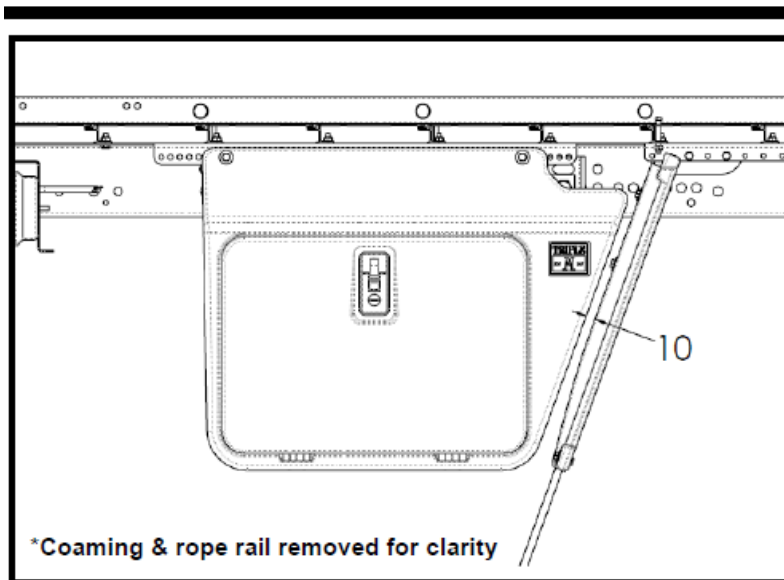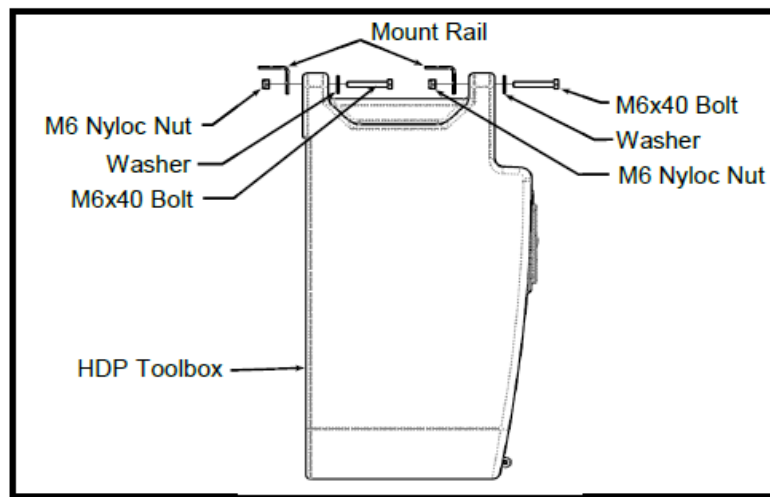

5. STEP 5


Complete the "toolbox key form" in adjacent diagram & remove and place into the vehicles user manual.
Close the toolbox door and place toolbox keys on the vehicle key ring.

Toolbox Key Record


Key Number: _____

Fitment Date: _____

VIN: _____



Documents / Resources

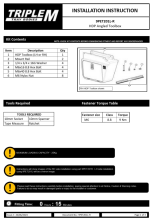

[Triple M 9PET201L HDP Angled Toolbox](#) [pdf] Installation Guide
9PET201L HDP Angled Toolbox, 9PET201L, HDP Angled Toolbox, Toolbox

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.