




TWIST DYNAMICS 2015-2024 Canvas Frame System Installation Guide

[Home](#) » [Twist Dynamics](#) » **TWIST DYNAMICS 2015-2024 Canvas Frame System Installation Guide** 

Contents

- [1 TWIST DYNAMICS 2015-2024 Canvas Frame System](#)
- [2 Specifications](#)
- [3 Frequently Asked Questions](#)
- [4 Canvas Frame System Installation Instructions](#)
- [5 CARE](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)



TWIST DYNAMICS 2015-2024 Canvas Frame System

TWIST-DYNAMICS-2015-2024-Canvas-Frame-System-product

Specifications

- Tools required: 13mm Socket, Socket Wrench, 8mm Allen Wrench, 6mm Allen Wrench
- Bolts provided: 3/8 shorter/fatter bolt (for frame assembly), four shorter/skinnier bolts (35mm), four long bolts (12mm)

Installation Instructions

1. After unwrapping, put the two-piece frame together with the provided bolts.
2. Open the Slingshot hood.
3. Remove the mirrors and mirror brackets.
4. Starting from the rear, place the frame on the Slingshot. The two back plates go on the back headrest on the front of the roll hoop.

5. Attach and tighten halfway with four shorter/skinnier bolts (35mm).
6. Insert the four long bolts (12mm) into the holes where the mirror brackets were. Tighten halfway on each side.
7. Once all bolts are in place, tighten the remaining bolts.
8. Put the mirrors back on using the same OEM bolts.

Product Care

Use a non-abrasive cleaner for heavy dirt. A microfiber towel has been included for light dusting. Avoid using harsh chemicals or abrasive materials that may damage the canvas frame system.

Frequently Asked Questions

Q: What tools do I need for installation?

A: You will need a 13mm Socket, Socket Wrench, 8mm Allen Wrench, and 6mm Allen Wrench.

Q: How do I assemble the frame?

A: After unwrapping, put the two-piece frame together using the provided bolts.

Q: Where do the back plates go?

A: The back plates should be placed on the back headrest on the front of the roll hoop.


Q: How should I tighten the bolts?

A: Start by tightening the bolts halfway, then once all bolts are in place, tighten the remaining bolts.


Tools you will need:

13mm Socket, Socket Wrench, 8mm Allen Wrench, 6mm Allen Wrench

Canvas Frame System Installation Instructions

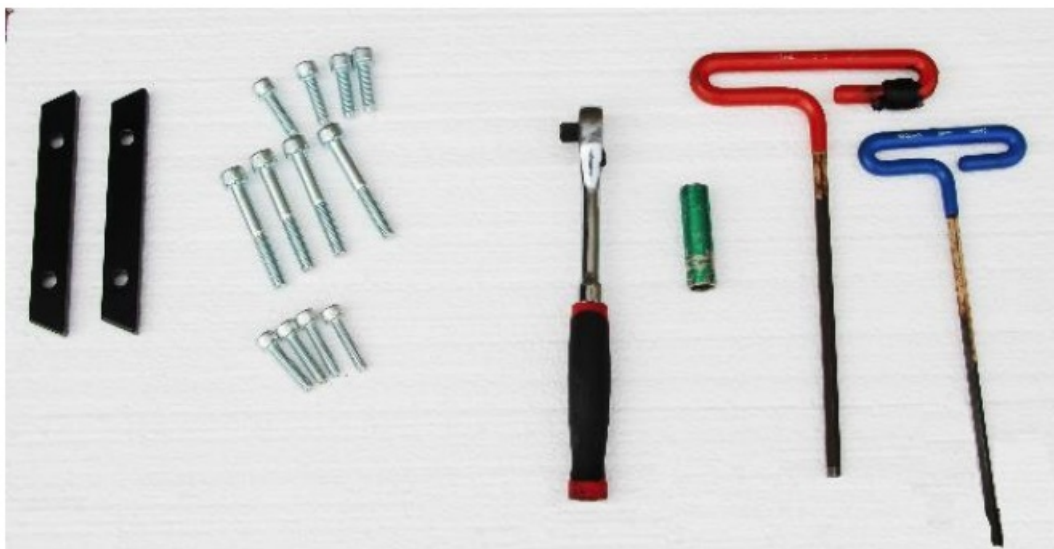

1. After unwrapping, put the two-piece frame together with bolts provided. (3/8 shorter/fatter bolt)

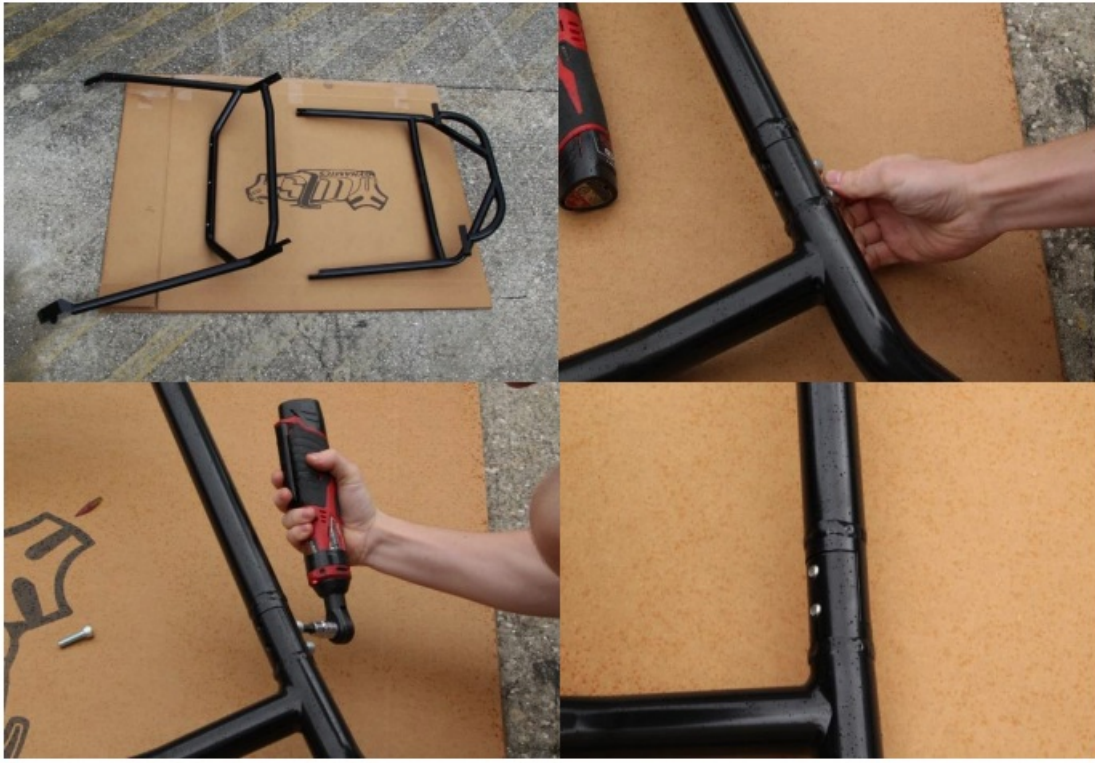

2. Open the Slingshot hood.



3. Remove the mirrors, and mirror brackets.



4. Starting from the rear, place the frame on the Slingshot. The two back plates go on the back headrest on the front of the roll hoop. Attach and tighten halfway with four shorter/skinnier bolts (35mm). The four long bolts (12mm) go into where the mirror brackets were. Tighten halfway on each side. Once all bolts are in place, tighten the remaining bolts. Put mirrors back on with same OEM bolts.



CARE


- Use a non-abrasive cleaner for heavy dirt.
- A microfiber towel has been included for light dust.

WARNING

- This roof is not a safety device, roll bar, or roll cage, and is not intended or designed to provide the occupants of the vehicle, or the vehicle itself, with protection in the event of a vehicle accident, roll over, or other unforeseeable events.

Twist Dynamics, 1468 Northgate Blvd., Sarasota, FL 34234 – www.twistdynamics.com – 941-323-5912

Documents / Resources

	<p>TWIST DYNAMICS 2015-2024 Canvas Frame System [pdf] Installation Guide 2015-2024 Canvas Frame System, 2015-2024, Canvas Frame System, Frame System, System</p>
---	---

References

- [🌐 Twist Dynamics](#)
- [🌐 Twist Dynamics](#)
- [🌐 User Manual](#)

[Manuals+](#), [Privacy Policy](#)