


TYPES BT57132-1 Wireless Backup Camera Installation Guide


Home » TypeS » TYPES BT57132-1 Wireless Backup Camera Installation Guide



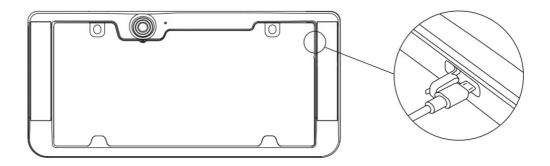

1. Fully charge the camera. Fold back camera power port plug and insert included charging cable. Most AC wall adapters will work with the USB charging cable.

NOTE: Fully charge and test the camera before installation

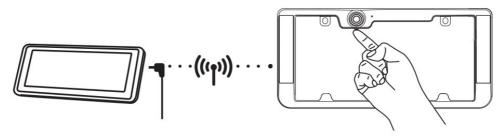


2. Plug-in 12V/24V power adapter to turn on the monitor. Turn on the camera by pressing the silver power button beneath the lens for 1 second. The blue LED status indicator will flash 2 times and an image should appear on the monitor.




3. Unscrew your license plate.




4. Align the camera with a license plate and secure it to the vehicle. See Manual for additional mounting guidance.

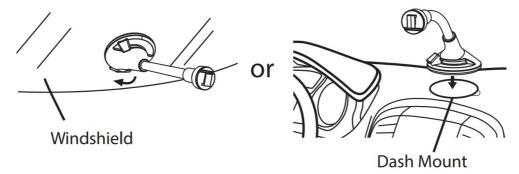

5. Place Windshield Mount on the windshield or Dash Mount and lower the lever to secure. Attach Dash Monitor onto the Windshield Mount and adjust to your desired position.

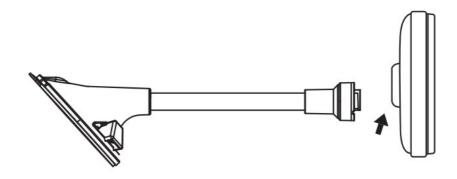

6. Mount and power the monitor. Power using the 12V/24V adapter provided. Remove overlay and adjust the angle as need.

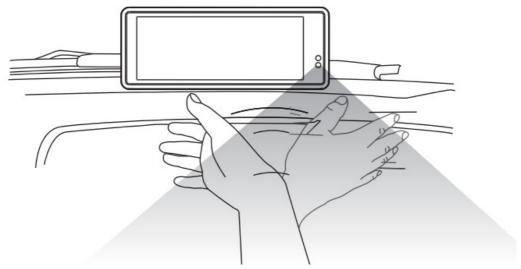

7. After the monitor has been connected to power, wake up the monitor and camera by waving your hand in front of the monitor, or tapping once on the screen.



A Horizon Brands Company 2975 Red Hill Ave., Ste. 100, Costa Mesa, CA 92626 1.866.294.9244

info@typesauto.com

©2020 Type S. All rights reserved.

www.typesauto.com

CONNECT WITH US







@TypeSAuto

The Facebook logo is a trademark of Facebook, Inc.
The Instagram logo is a trademark of Instagram, Inc.
YouTube and the YouTube logo are registered trademarks of Google Inc.

QIG-530033_V1

Contents [hide

1 Documents /

Resources

1.1 References

2 Related Posts

Documents / Resources



TYPES BT57132-1 Wireless Backup Camera [pdf] Installation Guide

BT57132-1, Wireless Backup Camera, Backup Camera

References

• **TYPE S Auto**

Manuals+, home privacy