

PZ W063 Running Boards



PZ W063 Running Boards Instruction Manual

[Home](#) » [Support](#) » PZ W063 Running Boards Instruction Manual 

Contents

- [1 PZ W063 Running Boards](#)
- [2 Tools Required](#)
- [3 INSTALLATION INSTRUCTION](#)
- [4 Part List](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

PZ

PZ W063 Running Boards



Tools Required

- 13mm Socket
- Ratchet
- Torque Wrench


Notes

- Read this instruction carefully before starting installation.
- Proper tools will improve the quality of installation and reduce the time required.
- If missing parts or any damage is found, please take a picture, and contact us.

INSTALLATION INSTRUCTION

Step 1:

1. Locate three mounting positions on each side.
2. Carefully clean the factory paint on the studs before installation. Do not use power tools.

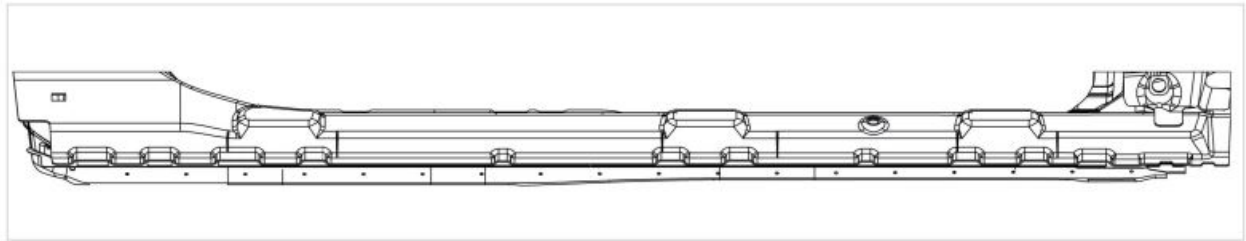


Driver Left Side

→ Front


Step 2:

1. Attach the bracket to the rocker panel, feed factory studs through the holes on the bracket.
2. Secure with (3) M8 flat washers, (3) M8 lock washers, (3) M8 hex nuts.
3. Repeat to install all brackets. Do not fully tighten.

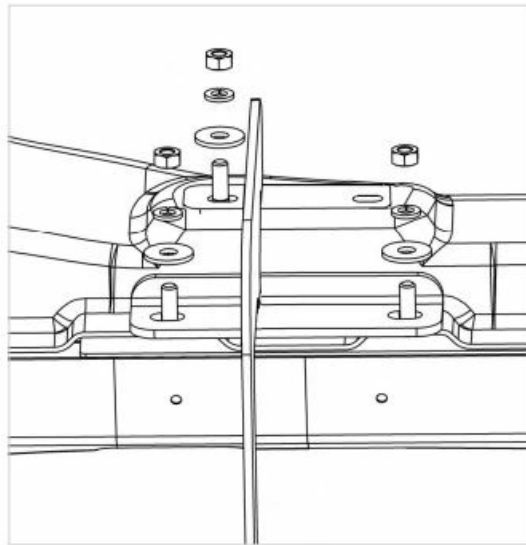


Step 3:

1. Remove (6) M8 hex bolts and (6) M8 flat washers from the back of the step bar.
2. Slide mounting tracks to proper positions.
3. With assistance, lift and attach the step bar to brackets.
 - Secure the step bar on brackets with (6) M8 hex bolts and (6) M8 flat washers.
4. Repeat to install the other side step bar. Do not fully tighten.

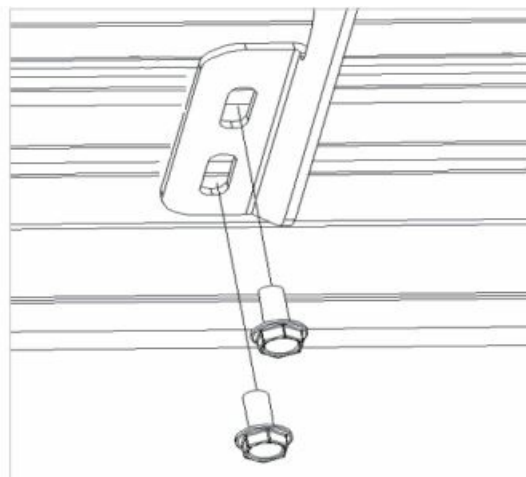





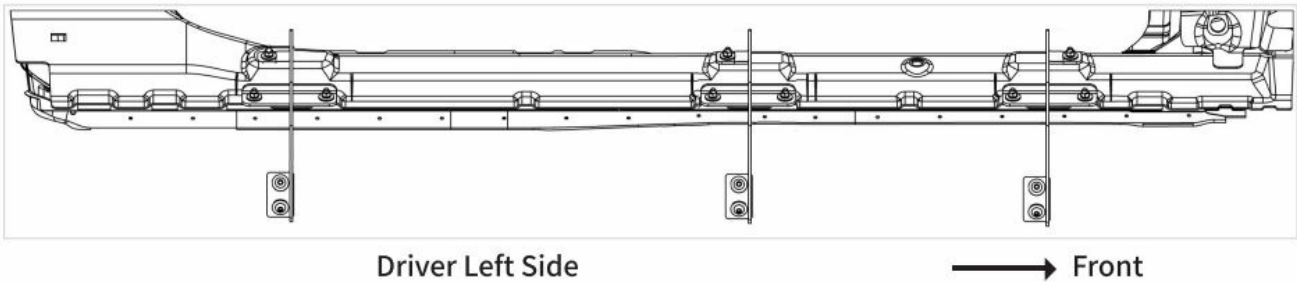


Step 4:

- 1. Tighten M8 hex nuts on the vehicle with 15 ft. lbs. torque.
- 2. Adjust the step bar to level and tighten M8 hex bolts with 15 ft. lbs. torque.
- 3. After the step bar is installed, periodic check to ensure all mounting hardware remains secure and tight.



Part List

			
Bracket	× 6	M8 Flat Washer	× 18
			
M8 Lock Washer	× 18	M8 Hexagon Nut	× 18
			
M8 Hexagon Bolt (on step bar)	× 12	M8 Flat Washer (on step bar)	× 12

<div><div>Installation & CARE</div><div>W063</div><div></div><div><small>Read these instructions carefully before using the product. Improper use of the product may result in injury or property damage. Please read and follow the safety instructions and warnings. For more information, please visit the website: www.pz.com</small></div><div><small>- 1 -</small></div></div>	<div><div>PZ W063 Running Boards [pdf] Instruction Manual</div><div>W063 Running Boards, W063, Running Boards, Boards</div></div>
---	---

References

- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.