

WRIGHT VDN333BL Pull Lever Handle Set Instructions

Home » WRIGHT » WRIGHT VDN333BL Pull Lever Handle Set Instructions



Contents

- 1 WRIGHT VDN333BL Pull Lever Handle Set
- **2 Product Information**
- **3 Product Usage Instructions**
- **4 NEW INSTALLATION INSTRUCTIONS FOR PULL LATCHES**
- **5 REPLACEMENT INSTALLATION INSTRUCTIONS FOR PULL LATCHES**
- 6 Documents / Resources
 - **6.1 References**
- **7 Related Posts**



WRIGHT VDN333BL Pull Lever Handle Set



Product Information

The product is a door latch mechanism that is used to secure doors. It comes with various sizes of spindles and screws to accommodate different door thicknesses. The product also includes a drill template and a strike plate for proper installation.

Product Usage Instructions

1. Determine Door Thickness

2. Measure the thickness of your door using the sizing chart provided. Select the appropriate door thickness from the chart.

3. Spindle & Screw Chart

Place the spindle on the sizing chart and mark the appropriate door thickness. Cut the spindle using a wire cutter.

4. Drill Installation Holes:

- 1. Place the drill template along the edge of the Z-bar with the door closed. Tape the template to the door and mark the holes.
- 2. Drill the holes according to the marked positions on the template.

5. Assemble Door Latch

Follow the illustrations provided to assemble the door latch according to your specific model.

6. Install Latch Spindle / Housing

Attach the latch spindle and housing to the door using the specified screws.


7. Verify Strike

8. Ensure that the strike plate is properly aligned with the latch when the door is closed. Use shims if necessary to adjust the strike plate position.


Note:If the hole pattern on your door does not match, refer to the New Installation instruction in Step 3 for further guidance. For warranty details or to make a warranty claim, please visit www.hampton.care or contact Hampton Care at 1-800-562-5625. Keep the defective product and the receipt for warranty claims.

NEW INSTALLATION INSTRUCTIONS FOR PULL LATCHES


TOOLS REQUIRED

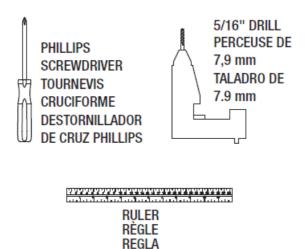

DETERMINE DOOR THICKNESS

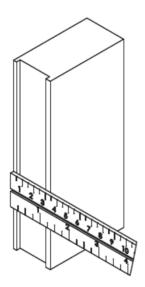


SPINDLE & SCREW CHART FOR DOOR THICKNESS

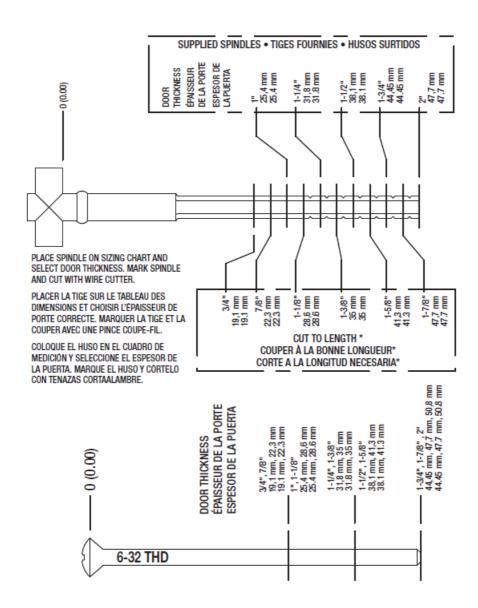

DRILL INSTALLATION HOLES


CAUTION LOCATE INSTALLATION SO THAT LATCH WILL NOT INTERFERE WITH ENTRANCE HARDWARE ENSURE THERE IS A MINIMUM OF 3/4" BETWEEN CENTER OF HOLES AND EDGE OF DOOR

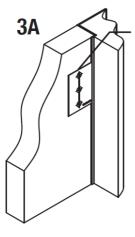


PLACE DRILL TEMPLATE ALONG EDGE OF Z-BAR WITH DOOR CLOSED, TAPE TO DOOR AND MARK HOLES.

PLACER LE GABARIT DE FORAGE LE LONG DU BORD DE LA BARRE EN Z, AVEC LA PORTE FERMÉE ; LE COLLER À LA PORTE ET MARQUER LES TROUS.

COLOQUE LA PLANTILLA PARA PERFORAR A LO LARGO DEL BORDE DE LA BARRA Z CON LA PUERTA CERRADA, PEGUE LA PLANTILLA USANDO CINTA ADHESIVA Y MARQUE LOS AGUJEROS.

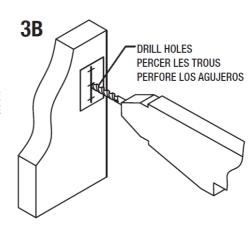


INSTALL LATCH SPINDLE / HOUSIN

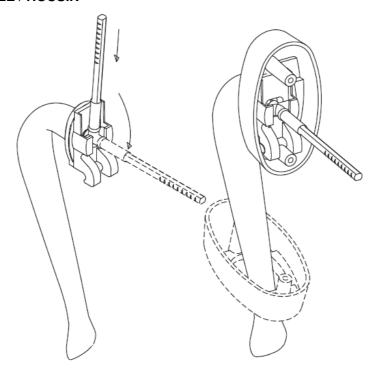



ASSEMBLE DOOR LATCH

NOTE The handle styles illustrated may vary by model.

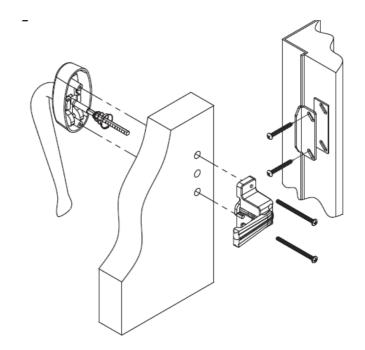

VERIFY STRIKE

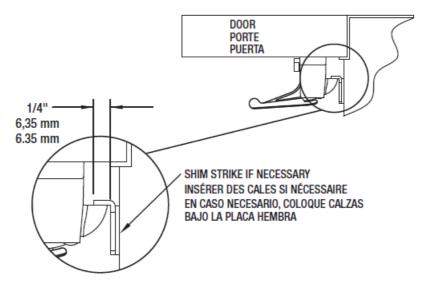

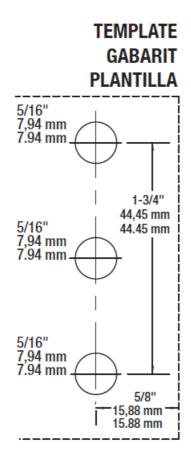

REPLACEMENT INSTALLATION INSTRUCTIONS FOR PULL LATCHES


TOOLS REQUIRED




RULER RÈGLE REGLA

EXISITING MOUNTING HOLES IN DOOR


Note: If hole pattern does not match see "New Installation" instruction Step 3.

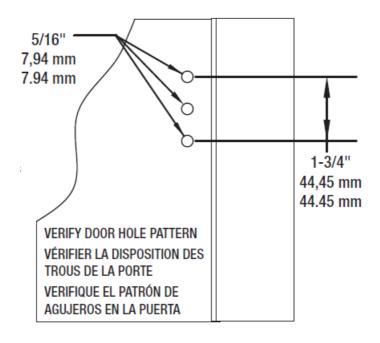


DETERMINE DOOR THICKNESS

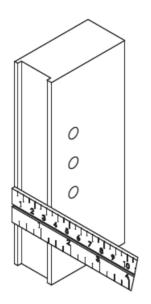

SPINDLE AND SCREW CHART FOR DOOR THICKNESS

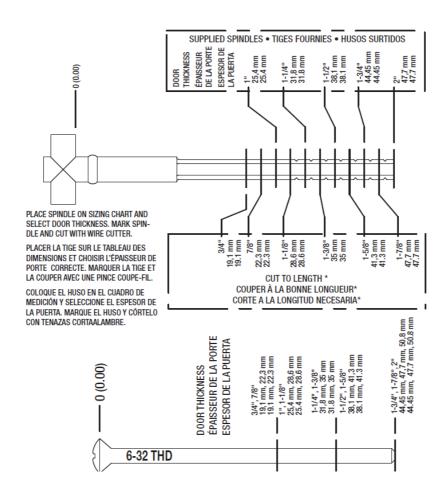


INSTALL LATCH SPINDLE / HOUSING

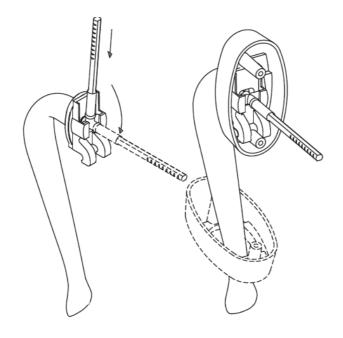


ASSEMBLE DOOR LATCH

NOTE The handle styles illustrated may vary by model

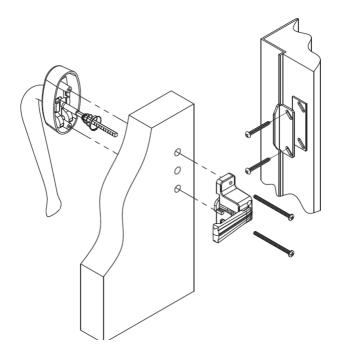

VERIFY STRIKE

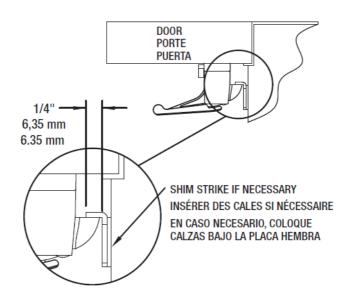

Documents / Resources



WRIGHT VDN333BL Pull Lever Handle Set [pdf] Instructions
VDN333BL Pull Lever Handle Set, VDN333BL, Pull Lever Handle Set, Lever Handle Set, Handle Set

References

• Hampton Products | Home

Manuals+,