




Wunderlich 21170-702 Navigation Bracket Instruction Manual

[Home](#) » [Wunderlich](#) » Wunderlich 21170-702 Navigation Bracket Instruction Manual 

Contents

- [1 Wunderlich 21170-702 Navigation Bracket](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Navigation bracket](#)
- [5 Key/file](#)
- [6 INSTRUCTIONS](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)



Wunderlich 21170-702 Navigation Bracket



Product Information

The product is a navigation bracket (Navihalter) designed for use with an original navigation system. It includes various components such as screws, washers, cap nuts, and a threaded washer. The product is compatible with BMW motorcycles.


Product Usage Instructions

1. Before installation, it is recommended to remove the windshield for easier installation.
2. Determine the position where the navigation bracket will be installed to avoid contact with the windshield.
3. Ensure that all the required components are included in the package.
4. Using the provided screws, attach the U-washer (M6) to the navigation bracket.
5. Attach the cap nuts (M6) to secure the U-washer in place.
6. Attach the second set of U-washers (M6) to the navigation bracket using the lens head screws (M6x14mm).
7. Secure the threaded washer in place using the cap nut (M5).
8. If necessary, connect the original navigation system using the original Navi connector.
9. Ensure that all screws are tightened with a torque of 2Nm.
10. After installation, clean the product using a suitable cleaner.

Please refer to the product manual for further details and safety instructions.

Navigation bracket

- Art. Nr: 21170-702

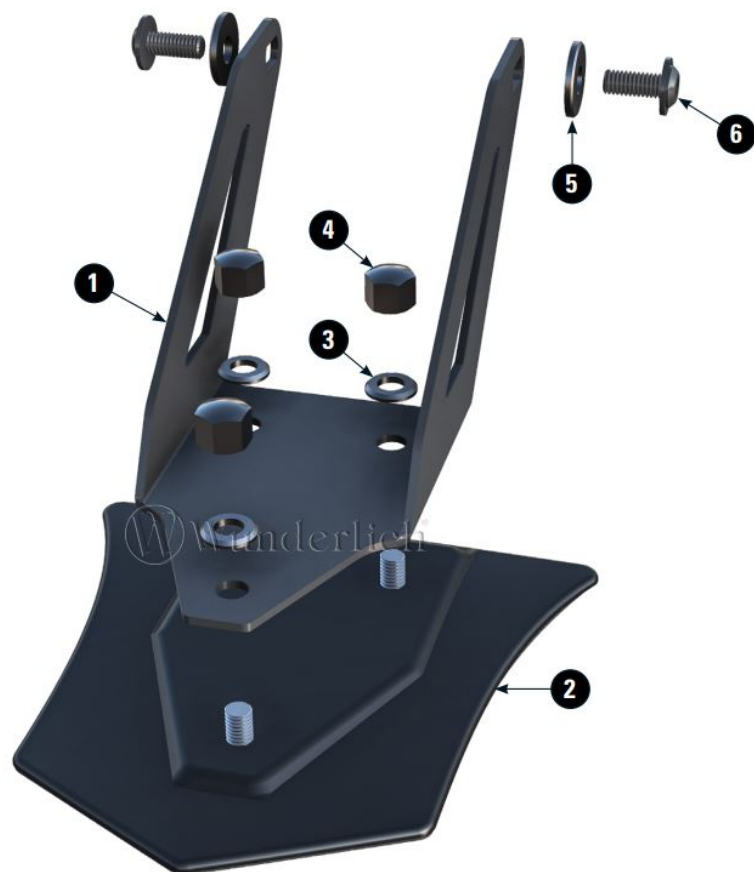

- Art. Nr: 21170-712



Key/file

- Fitting tip




- Schraube Screw



- Magnification



- Torque

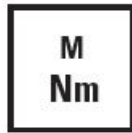

- Attention



- Thread locking fluid



- Fitting lubricant



- Cleaner




#	<i>description</i>		<i>The colors are for illustrating purposes only.</i>	DIN	ISO	<i>Quantity</i>
1	navigation bracket					1
2	adhesive base plate					1
3	U- washer	M6		125SA2	7089	3
4	cap nut	M6		917SA2		3
5	washer	M6		9021SA2	7093	2
6	lens head screw M6x14mm			7381SA2	7381SA2	2
7	wing screw M5					1
8	sleeve 31mm					1
9	sleeve 59mm					1
10	threaded washer					1
11	cap nut	M5		917SA2		1

We recommend for easier installation to remove the windshield. Beforehand, the position of the Navigation bracket should be determined to prevent contact with the windshield

INSTRUCTIONS



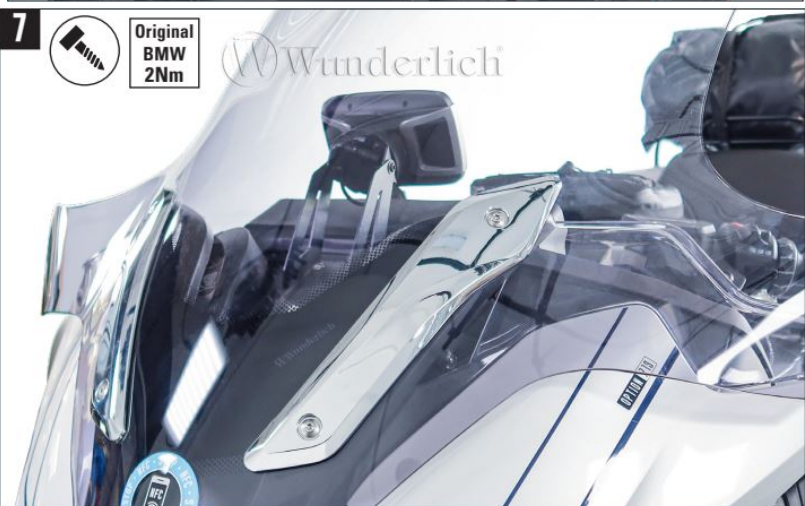





[Wunderlich 21170-702 Navigation Bracket](#) [pdf] Instruction Manual
21170-702 Navigation Bracket, 21170-702, Bracket, 21170-702 Bracket, Navigation Bracket, B
racket