

# **BMS Power Quality UPS Ablerex Company Instruction Manual**

Home » Ablerex » BMS Power Quality UPS Ablerex Company Instruction Manual





Wireless battery analysis, monitoring and protection system



The lowest installation and operating cost, maximum performance and battery system life is guaranteed by the voltage equalisation function.

# **IDEAL FOR**







#### **Contents**


- 1 FEATURES
- **2 KEY OPTIONS**
- 3 BATTERY VOLTAGE EQUALISER
- **4 BMS TECHNICAL DATA SHEET**
- 5 Documents / Resources
  - **5.1 References**
- **6 Related Posts**

## **FEATURES**

- Total flexibility with 2.4 GHz wireless communication technology that requires no preventative design and allows rack and cabinet configurations to be changed at any time.
- Everything easily under control: the most important parameters of each battery block are measured, including impedance, voltage, current and temperature.
- Good savings due to very simple and fast installation.
- Spikes are prevented and battery life and performance are maximised by equalization functions for each block.
- Each BMS system can monitor and protect up to 750 blocks.
- The batteries are protected by automatically disabling the measurement if the end-of-discharge voltage is reached. The measurement instruments are re-enabled automatically when the charging current is restored.
- Update frequency of 1 Hz ensures accurate measurements.
- Simultaneous management of batteries of different capacities and types (e.g. VRLA, AGM, NiCd, OPTS, OPZV, etc.) and mixed voltage configurations (e.g. 48 V and 240 V battery systems).
- Colour LCD display to clearly see configurations and parameters, including diagrams and voltage trend plots.
- Programmable alarm level.
- · Alarm alerts via email and dry contact.
- Removable SD card for event storage.
- RS-485 ModBus port for communication between the receiver and control panel for monitoring large plants.
- Ethernet port and additional RS-485 ModBus port for remote monitoring.


#### **KEY OPTIONS**

- Temperature sensor for each block.
- Sensor kit for use with Ni-Cd batteries.
- Additional antenna for each battery to extend the wireless range.
- Dedicated software for remote monitoring and data storage.

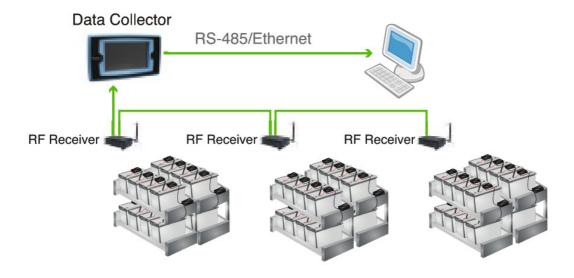

# **BATTERY VOLTAGE EQUALISER**

Continually equalizes the end-of-charge voltage of the batteries to the optimal level in order to prevent overcharging and ensure the best performance and durability. With the equalization function active, the voltage of each battery block is continually kept at the ideal value.

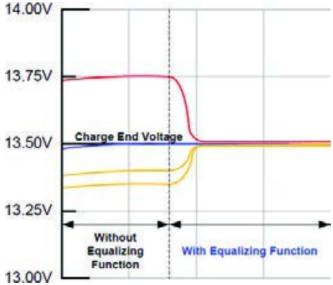

# **BMS TECHNICAL DATA SHEET**

MODEL		SPECIFICATIONS		
	User interface	7 colour LCD touch screen display		
	Supply voltage	12 Vdc		
	Power consumption	≤ 9 W		
BMS-DC-LCDII (C entral Unit)	Communication ports	Ethernet, 2 RS485 Modbus RTU, dry relay contacts (1 in/3 out)		
	RF receiver monitoring	Up to 63 RF receivers		
	Wireless devices that can be connected	Up to 750		
	Storage capacity	SD memory card up to 16 gigabytes		

	Dimensions (WxDxH) mm	260x150x57					
	Weight (kg)	0.85					
BMS-RFR (RF receivers)	Supply voltage	12 Vdc					
	Power consumption	s 3 W					
	Operating frequency	RF 2.4 GHz (wireless)*					
	Wireless devices that can be connected	Up to 256					
	Dimensions (WxDxH) mm	129x70x35.5					
	Weight	0.4					
	Voltage	1.2V ( Ni-Cd )	2 V	6 V	12 V		
	Measurement range	0.95- 2.00 V	1.48-4.00 V	4.2-8.0 V	8.5 -16.0V		
	Tolerance	±5 mV			110 mV		
BMS-BMK (Batter y meter)	Impedance measurem ent accuracy	2p0		101A2	>65 Ah	<65 Ah 25 p4	
	Measurable temperatu re"	0-100 C ±1°C					
	Power consumption	≤ 0.5 W					
	Input impedance	≥ 1 mΩ					
	Dimensions (WxDxH) mm	100x27x70					
	Weight (kg)	0.1					
	Measurement range	0–120 V 120–750 V					
	Tolerance	±0.2%					
	Measurable temperatu re	0–100°C ±1°C					

BMS-SMK (Battery monitorin g system) SMK (String meter)	Measured current rang e***	0–3000 A
	Supply voltage	12 Vdc
	Power consumption	≤1.5 W
	Input impedance	≥1 mΩ
	Dimensions (WxDxH) mm	100x27x70
	Weight (kg)	0.09

Specifications subject to change without notice - Rev. 22.09

- \* The maximum transmission distance is estimated to be 50 m if there are no obstacles. A distance of less than 20 m is recommended for optimal performance.
- \*\* The optional temperature sensor (TES) is required in order to measure the temperature.
- \*\*\* The optional Hall-effect current transformer (HCT) is required in order to measure the battery current.



www.ablerex.eu

## **Documents / Resources**



Ablerex BMS Power Quality UPS Ablerex Company [pdf] Instruction Manual BMS Power Quality UPS Ablerex Company, BMS, Power Quality UPS Ablerex Company, Abler ex Company

## References

◆ <u>Ablerex | Experts in Power Conversion - Homepage</u>

Manuals+,