

## Ajax Systems Button User Manual

[Home](#) » [Ajax Systems](#) » Ajax Systems Button User Manual

### Contents [ [hide](#) ]

- 1 Ajax Systems Button
- 2 Functional elements
- 3 Operating principle
- 4 Connecting the button to the Ajax security system
  - 4.1 Prior to initiating connection
  - 4.2 In order to connect a Button
- 5 States
- 6 Configuration
- 7 Operating indication
- 8 Use cases
  - 8.1 Panic Mode
- 9 Control Mode
  - 9.1 Mute Fire Alarm
- 10 How to fix Button
  - 10.1 To install the button in the holder:
  - 10.2 How to carry around Button
- 11 Maintenance
- 12 Technical Specifications
- 13 Complete Set
- 14 Warranty
- 15 Documents / Resources
  - 15.1 References
- 16 Related Posts






**Button** is a wireless panic button with protection against accidental press and additional mode to control automation devices.

Button is connected to the security system and configured via Ajax apps on iOS, Android, macOS, and Windows. The users are alerted of all alarms and events via push notifications, SMS, and phone calls (if enabled).

### Functional elements

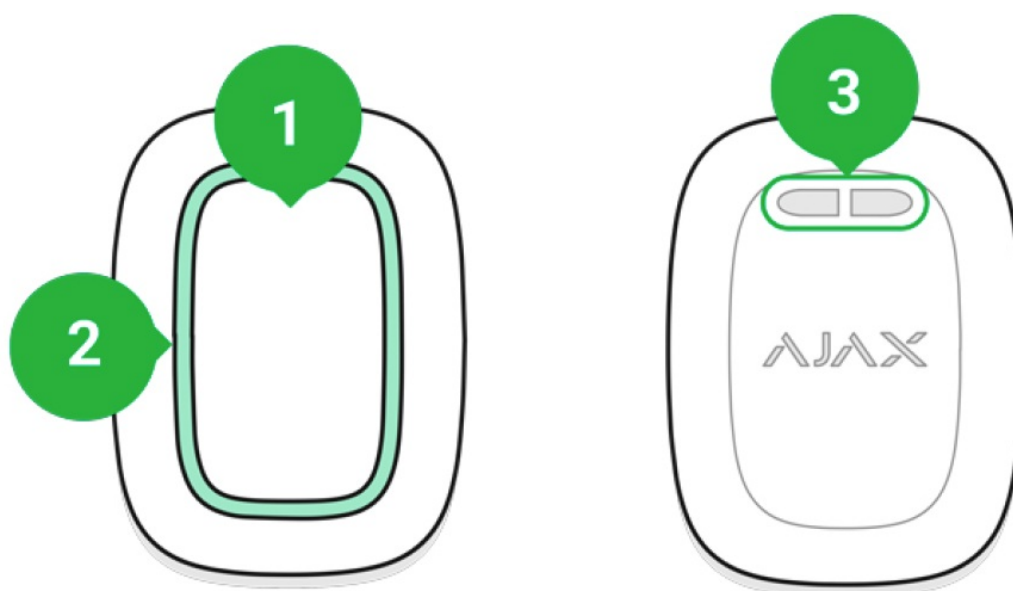

1. Alarm button
2. Indicator lights
3. Button mounting hole

### Operating principle

Button is a wireless panic button that, when pressed, transmits an alarm to users, as well as to the security company's CMS. In Control mode, Button allows you to control Ajax automation devices with a short or long press

of a button.

In panic mode, the Button can act as a panic button and signal about a threat, or inform about an intrusion, as well as a fire, gas or medical alarm. You can choose the type of alarm in the button settings. The text of alarm notifications depends on the selected type, as well as the event codes transmitted to the central monitoring station of the security company (CMS).

The Button is equipped with protection against accidental press and transmits alarms at a distance of up to 1,300 m from the hub. Please be aware that the presence of any obstructions that impede the signal (for example, walls or floors) will reduce this distance.

Button is easy to carry around. You can always keep it on a wrist or a neckless. The device is resistant to dust and splashes.

**When connecting Button via , note that Button does not automatically switch between the radio networks of the radio signal extender and the hub. You can assign Button to another hub or ReX manually in the app.**

## **Connecting the button to the Ajax security system**

### **Prior to initiating connection**

1. Follow the hub instructions to install the . Create an account, add a hub to the app, and create at least one room. Ajax application
2. Enter the Ajax app.
3. Activate the hub and check your internet connection.
4. Ensure that the hub is not in armed mode and is not being updated by checking its status in the app.

### **In order to connect a Button**

1. Click on Add Device in the Ajax app.
2. Name the device, scan its QR code (located on the package) or enter it manually, select a room and a group (if group mode is enabled).
3. Click Add and the countdown will begin.
4. Hold the button for 7 seconds. When the Button is added, the LEDs will flash green once.

For detection and pairing, the Button must be located within the hub radio communication zone (on the single protected object).

The connected button will appear in the list of hub devices in the application. Updating the statuses of the device in the list does not depend on the polling time value in the hub settings. Data is updated only by pressing the Button.

The Button only works with one hub. When connected to a new hub, the button Button stops transmitting commands to the old hub. Note that after being added to the new hub, the Button is not automatically removed from the device list of the old hub. This must be done manually through the Ajax application.

## **States**

Button statuses can be viewed in the device menu:

Parameter	Value
Battery Charge	<p>Battery level of the device. Two states available:</p> <p>OK</p> <p>Battery discharged</p> <p><a href="#">How battery charge is displayed in Ajax apps</a></p>
Operating mode	<p>Displays the operating mode of the button. Three modes are available:</p> <p>Panic Control</p>

	Mute Fire Alarm
LED Brightness	<p>Displays current brightness level of indicator light:</p> <p>Disabled (no display) Low</p> <p>Max</p>
Protection against accidental activation	<p>Displays the selected type of protection against accidental activation:</p> <p><b>Off</b> — protection disabled.</p> <p><b>Long press</b> — in order to send alarm you should hold the button down for more than 1.5 seconds.</p> <p><b>Double-pressing</b> — in order to send alarm you should double-press on the button with a pause of no more than 0.5 seconds.</p>
Routed Through ReX	Display the status of using the ReX range extender

Temporary Deactivation	Displays the status of the device: active or completely disabled by the user
Firmware	Button firmware version
ID	Device ID

**Configuration**

You can adjust the device parameters in the settings section:

Parameter	Value
First field	Name of the device, can be changed
Room	The choice of the virtual room that the device is

	assigned to
Operating mode	<p>Displays the operating mode of the button. Three modes are available:</p> <p><b>Panic</b> — sends an alarm when pressed</p> <p><b>Control</b> — controls automation devices by short or long ( 2 sec) pressing</p> <p><b>Mute Fire Alarm</b> — when pressed, mutes the fire alarm of FireProtect/FireProtect Plus detectors</p> <p><a href="#">Learn more</a></p>
Alarm type  (available only in panic mode)	<p>Selection of the Button alarm type:</p> <p>Intrusion Fire Medical</p> <p>Panic button Gas</p> <p>The text of SMS and notifications in the application depend on the selected type of alarm</p>
LED Brightness	<p>This displays the current brightness of the indicator lights :</p> <p>Disabled (no display) Low</p> <p>Max</p>
Accidental press protection  (available only in panic mode)	<p>Displays the selected type of protection against accidental activation:</p> <p><b>Off</b> — protection disabled.</p> <p><b>Long press</b> — in order to send alarm you should hold the button down for more than 1.5 seconds.</p>

	<p><b>Double press</b> — in order to send alarm you should double-press on the button with a pause of no more than 0.5 seconds.</p>
Alert with a siren if panic button is pressed	<p>If active, <a href="#">sirens added to the system</a> are activated after panic button pressing</p>
Scenarios	<p>Opens the menu for creating and configuring scenarios</p>
User Guide	<p>Opens the Button user guide</p>
Temporary Deactivation	<p>Allows a user to deactivate the device without deleting it from the system.</p> <p>The device will not execute system commands and participate in automation scenarios. The panic button of a deactivated device is disabled</p> <p><a href="#">Learn more about device temporary deactivation</a></p>
Unpair Device	<p>Disconnects Button from the hub and deletes its settings</p>

## Operating indication

Button status is indicated with red or green LED indicators.

Category	Indication	Event
Linking to security system	Green LEDs flash 6 times	The button is not registered in any security system
	Lights up green for a few seconds	Adding a button to the security system
Command delivery indication	Lights up green briefly	Command is delivered to security system
	Lights up red briefly	Command is not delivered to security system
Long press indication in Control mode	Blinks green briefly	Button recognized the pressing as a long press and sent the

		corresponding command to the hub
Feedback Indication  (follows the <b>Command Delivery Indication</b> )	Lights up green for about half a second after the command delivery indication	The security system has received and performed the command
	Briefly lights up red after the command delivery indication	The security system did not perform the command
Battery status  (follows <b>Feedback Indication</b> )	After the main indication it lights up red and goes out smoothly	Button battery needs to be replaced. At the same time, button commands are delivered to the security system.

## Use cases

### Panic Mode

As a panic button, the Button is used to call for security company or help, as well as for emergency notification through the app or sirens. Button support 5 types of alarms: intrusion, fire, medical, gas leak, and panic button. You can choose the type of alarm in the device settings. The text of alarm notifications depends on the selected type, as well as the event codes transmitted to the central monitoring station of the security company (CMS).

Consider, that in this mode, pressing the Button will raise an alarm regardless of security mode of the system. Button can be installed on a flat surface or carried around. To install on a flat surface (for example, under the table), secure the Button with double-sided adhesive tape. To carry the Button on the strap: attach the strap to the Button using the mounting hole in the main body of the Button.

### Control Mode



In the Control mode, the Button has two pressing options: short and long (the button is pressed for more than 3 seconds). These pressings can trigger the execution of an action by one or more automation devices: Relay, WallSwitch, or Socket.

To bind an automation device action to a long or short press of a Button:

1. Open the [Ajax app](#) and go to the **Devices** tab
2. Select **Button** in the list of devices and go to settings by clicking the gear icon




3. Select the **Control** mode in the Button modeSection



4. Click the **Button** to save the changes.

5. Go to the **Scenarios** menu and click **Create scenario** if you are creating a scenario for the first time, or **Add scenario** if scenarios have already been created in the security system.
6. Select a pressing option to run the scenario: **Short press** or **Long press**.

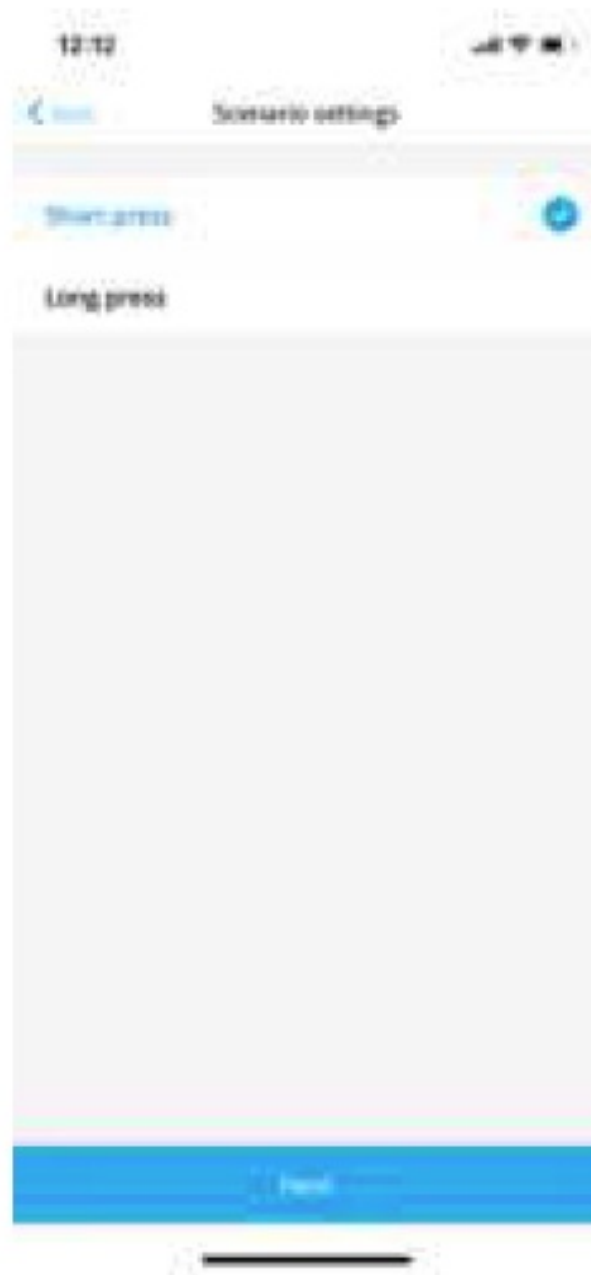

7. Select the automation device to execute the action.
8. Enter the Scenario Name and specify the Device Action to be executed by pressing the Button.
  - Switch on
  - Switch off
  - Switch the state
9. Click Save. The scenario will appear in the list of device scenarios.

#### **Mute Fire Alarm**

By pressing the Button, the fire signal can be muted (if the corresponding operating mode is selected). The reaction of the system to pressing a button depends on the settings and the state of the system:

- **Interconnected FireProtect Alarms are disabled** — pressing the Button mutes the sirens of triggered

FireProtect/FireProtect Plus detectors.

- **The Interconnected FireProtect Alarms have already propagated** — by the first press of the Button, all fire detectors sirens are muted, except for those that registered the alarm. Pressing the button again mutes the remaining detectors.
- **The interconnected alarms delay time lasts** — the siren of the triggered FireProtect/FireProtect Plus detector is muted by pressing.

Learn more about interconnected alarms of fire detectors

## Placement

Button can be fixed on a surface or carried around.

## How to fix Button

To fix Button on a surface (e. g. under a table), use Holder.

### To install the button in the holder:

1. Choose a location to install the holder.
2. Press the button to test whether the commands can reach the hub. If not, choose another location or use a **ReX radio signal range extender**.
3. Fix Holder on the surface using the bundled screws or double-sided adhesive tape.
4. Put Button into the holder.

## How to carry around Button

The button is convenient to carry with you thanks to a special hole on its body. It can be worn on the wrist or around the neck, or hung on a key ring.

Button has an IP55 protection rating. This means that the device body is protected from dust and splashes. Tight buttons are recessed into the body and software protection helps to avoid accidental pressing.

## Maintenance

When cleaning the key fob body, use cleaners that are suitable for technical maintenance.

Never use substances containing alcohol, acetone, gasoline and other active solvents to clean the Button. The pre-installed battery provides up to 5 years of key fob operation in normal use (one press per day). More frequent use may reduce battery life. You can check battery level at any time in the Ajax app.

The pre-installed battery is sensitive to low temperatures and if the key fob is cooled significantly, the battery level indicator in the app may show incorrect values until the key fob becomes warmer.

The battery level value is not updated on a regular basis, but only updates after pressing the button.

When the battery has run down, the user will receive a notification in the Ajax app, and the LED will steadily light up red and go out each time the button is pressed.

## How long Ajax devices operate on batteries, and what affects this Battery Replacement

## Technical Specifications

Number of buttons	1
LED backlight indicating command delivery	Available
Protection against accidental activation	Available, in panic mode
Frequency band	868.0 – 868.6 MHz or 868.7 – 869.2 MHz, depending on the sales region
Compatibility	<a href="#">Operates with all Ajax hubs, and range extenders featuring OS Malevich 2.7.102 and later</a>
Maximum radio signal power	Up to 20 mW
Radio signal modulation	GFSK
Radio signal range	Up to 1,300 m (without obstacles)
Power supply	1 CR2032 battery, 3 V
Battery life	Up to 5 years (depending on frequency of use)
Protection class	IP55

Operating temperature range	From -10°C to +40°C
Operating humidity	Up to 75%
Dimensions	47 × 35 × 13 mm
Weight	16 g

## Complete Set

1. Button
2. Pre-installed CR2032 battery
3. Double-sided tape
4. Quick Start Guide


## Warranty

The warranty for the products manufactured by the AJAX SYSTEMS MANUFACTURING limited liability company is valid for 2 years after purchase and does not extend to the bundled battery.

If the device does not function properly, we recommend that you first contact the support service as technical issues can be resolved remotely in half of the cases!

Technical support: [support@ajax.systems](mailto:support@ajax.systems)

## Documents / Resources

	<a href="#">Ajax Systems Button</a> [pdf] User Manual Button, 353436649
---	--

## References

- [End user agreement - Ajax Systems](#)
- [Current product lines of the Ajax security system](#)
- [Current product lines of the Ajax security system](#)
- [Current product lines of the Ajax security system](#)
- [Wireless panic button with control mode | Ajax Systems](#)
- [Holder for Button/DoubleButton — Bracket for panic button](#)
- [ocBridge Plus — Module for Ajax devices integration with wired systems](#)
- [Relay — Low current remote control relay with dry contact](#)
- [ReX — Intelligent radio signal range extender | Ajax Systems](#)
- [Socket \(type F\) — Wireless smart plug with energy monitor](#)
- [uartBridge — Module for Ajax devices integration with third-party wireless alarms systems](#)
- [Ajax WallSwitch — Wireless power relay with energy monitor](#)
- [Software | Ajax Systems](#)
- [Warranty - Ajax Systems](#)
- [Automation | Ajax Systems Support](#)
- [How battery charge is displayed in Ajax apps | Ajax Systems Support](#)
- [How long Ajax devices operate on batteries, and what affects this | Ajax Systems Support](#)
- [How to temporarily deactivate a device without removing it from the system | Ajax Systems Support](#)
- [Relay User Manual | Ajax Systems Support](#)
- [How to create and configure a scenario in the Ajax system | Ajax Systems Support](#)
- [What is Interconnected Fire Detectors Alarm and how does it work | Ajax Systems Support](#)