



AJAX Button Wireless Panic Button with Protection User Manual

[Home](#) » [ajax](#) » **AJAX Button Wireless Panic Button with Protection User Manual** 

Button User Manual

Updated March 26, 2021



The button is a wireless panic button with protection against the accidental press and an additional mode to control **automation devices**.



The button is compatible with Ajax hubs only. No support for Oxbridge Plus and cartridge integration modules!


The button is connected to the security system and con guard via Ajax apps on iOS, Android, macOS, and Windows. The users are alerted of all alarms and events via push notifications, SMS, and phone calls (if enabled).

Buy panic button Button

Contents

- 1 Functional elements
- 2 Operating principle
- 3 Connecting the button to the Ajax security system
- 4 States
- 5 Operating indication
- 6 Use cases Panic Mode
- 7 Control Mode
- 8 Mute Fire Alarm
- 9 Placement
- 10 Technical Specifications
- 11 Documents / Resources
 - 11.1 References
- 12 Related Posts

Functional elements

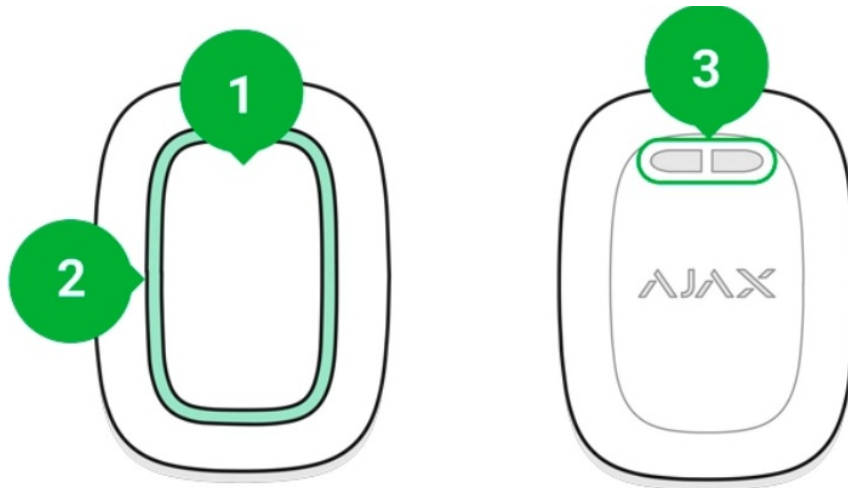

1. Alarm button
2. Indicator lights
3. Button mounting hole

Operating principle

The **button** is a wireless panic button that, when pressed, transmits an alarm to users, as well as to the security company's CMS. In Control mode, Button allows you to control Ajax automation devices with a short or long press of a button.

In panic mode, the Button can act as a panic button and signal about a threat, or inform about an intrusion, as well as fire, gas or medical alarm. You can choose the type of alarm in the button settings. The text of alarm notifications depends on the selected type, as well as the event codes transmitted to the central monitoring station of the security company (CMS).



You can bind the action of an automation device (Relay, WallSwitch or Socket) to a button press in the Button settings — **Scenarios** menu.

The Button is equipped with protection against the accidental press and transmits alarms at a distance of up to

1,300 m from the hub. Please be aware that the presence of any obstructions that impede the signal (for example, walls or doors) will reduce this distance.

The button is easy to carry around. You can always keep it on a wrist or a necklace. The device is resistant to dust and splashes.



When connecting Button via ReX, note that Button does not automatically switch between the radio networks of the radio signal extender and the hub. You can assign Button to another hub or ReX manually in the app.

Connecting the button to the Ajax security system

Prior to initiating the connection

1. Follow the hub instructions to install the Ajax application. Create an account, add a hub to the app, and create at least one room.
2. Enter the Ajax app.
3. Activate the hub and check your internet connection.
4. Ensure that the hub is not in armed mode and is not being updated by checking its status in the app.

Only users with administrative rights can add a device to the hub

In order to connect a Button

1. Click on **Add Device** in the Ajax app.
2. Name the device, scan its QR code (located on the package) or enter it manually, select a room and a group (if group mode is enabled).
3. Click **Add** and the countdown will begin.
4. Hold the button for 7 seconds. When the Button is added, the LEDs will flash green once.

For detection and pairing, the Button must be located within the hub radio communication zone (on the single protected object).

The connected button will appear in the list of hub devices in the application. Updating the statuses of the device in the list does not depend on the polling time value in the hub settings. Data is updated only by pressing the Button.

The Button only works with one hub. When connected to a new hub, the button Button stops transmitting commands to the old hub. Note that after being added to the new hub, the Button is not automatically removed from the device list of the old hub. This must be done manually through the Ajax application.

States

Button statuses can be viewed in the device menu:

Parameter	Value
First	The name of the device can be changed
Room	The choice of the virtual room that the device is assigned to
Operating mode	<p>Displays the operating mode of the button.</p> <p>Three modes are available:</p> <ul style="list-style-type: none">• Panic — sends an alarm when pressed• Control — controls automation devices by short or long (2 sec) pressing• Mute Interconnected Fire Alarm — when pressed, mutes the alarm of FireProtect/FireProtect Plus detectors. The option is available if the Interconnected FireProtect Alarms feature is enabled
Alarm type (available only in panic mode)	<p>Selection of the Button alarm type:</p> <ul style="list-style-type: none">• Intrusion• Fire• Medical• Panic button• Gas <p>The text of SMS and noti application depends on the selected type of alarm</p>
LED Brightness	<p>This displays the current brightness of the indicator lights:</p> <ul style="list-style-type: none">• Disabled (no display)• Low• Max

Accidental press protection (available only in panic mode)	<p>Displays the selected type of protection against accidental activation:</p> <ul style="list-style-type: none"> • Off — protection disabled. • Long press — in order to send an alarm you should hold the button down for more than 1.5 seconds. • Double press — in order to send an alarm you should double-press on the button with a pause of no more than 0.5 seconds.
Alert with a siren if the panic button is pressed	If active, sirens added to the system are activated after panic button pressing
Scenarios	Opens the menu for creating and controlling scenarios
User Guide	Opens the Button user guide
Temporary Deactivation	<p>Allows a user to deactivate the device without deleting it from the system.</p> <p>The device will not execute system commands and participate in automation scenarios. The panic button of a deactivated device is disabled</p> <p>Learn more about device temporary deactivation</p>
Unpair Device	Disconnects Button from the hub and deletes its settings

Operating indication

Button status is indicated with red or green LED indicators.

Category	Indication	Event
Linking to security system	Green LEDs	The button is not registered in any security system
	Lights up green for a few seconds	Adding a button to the security system
Linking to security system	Lights up green briefly	The command is delivered to the security system
	Lights up red briefly	The command is not delivered to the security system
Long press indication in Control mode	Blinks green briefly	Button recognized the pressing as a long press and sent the corresponding command to the hub
Feedback Indication (follows the Command Delivery Indication)	Lights up green for about half a second after the command delivery indication	The security system has received and performed the command
	Blinks red after the command delivery indication	The security system did not perform the command
Battery status (follows Feedback Indication)	After the main indication, it lights up red and goes out smoothly	The button battery needs to be replaced. At the same time, button commands are delivered to the security system Battery Replacement

Use cases

Panic Mode

As a panic button, the Button is used to call for a security company or help, as well as for emergency notification through the app or sirens. Button supports 5 types of alarms: intrusion, fire, medical, gas leak, and panic button. You can choose the type of alarm in the device settings. The text of alarm notification on the selected type, as well as the event codes transmitted to the central monitoring station of the security company (CMS).

Consider, that in this mode, pressing the Button will raise an alarm regardless of the security model of the system.





An alarm if Button is pressed can also run a scenario in the Ajax security system.


The button can be installed on a face or carried around. To install on a surface (for example, under the table), secure the Button with double-sided adhesive tape. To carry the Button on the strap: attach the strap to the Button using the mounting hole in the main body of the Button.

Control Mode


In the Control mode, the Button has two pressing options: short and long (the button is pressed for more than 3 seconds). These pressings can trigger the execution of an action by one or more automation devices: Relay, wall switch, or Socket.

To bind an automation device action to a long or short press of a Button:


1. Open the **Ajax app** and go to the **Devices**  tab.
2. Select the **Button** in the list of devices and go to settings by clicking the gear icon  .

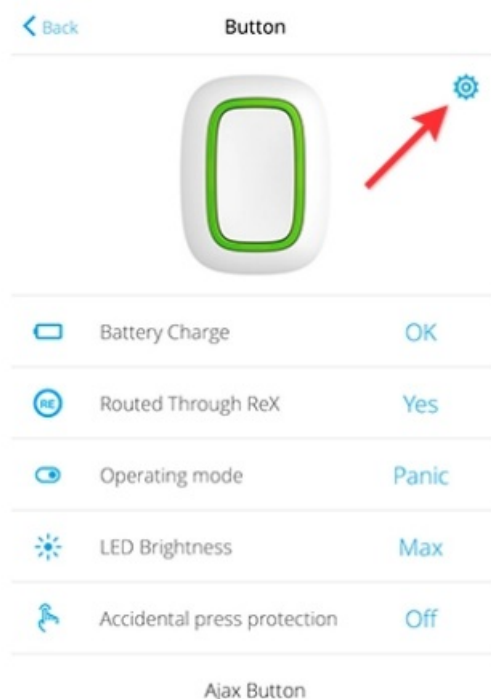


3. Select the **Control** mode in the Button mode section.

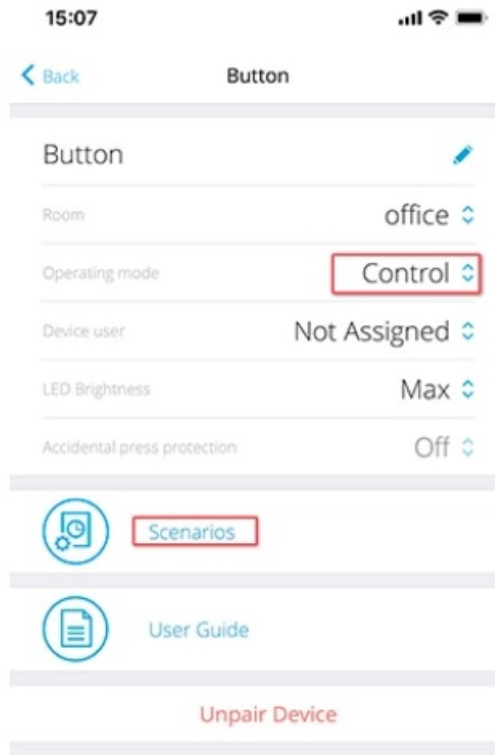

4. Click the **button** to save the changes.
5. Go to the **Scenarios** menu and click **Create scenario** if you are creating a scenario for the **Add scenario** if scenarios have already been created in the security system.
6. Select a pressing option to run the scenario: **Short press** or **Long press**.

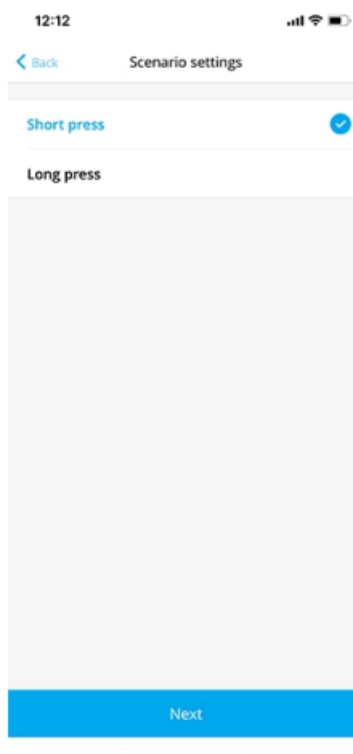


7. Select the automation device to execute the action.

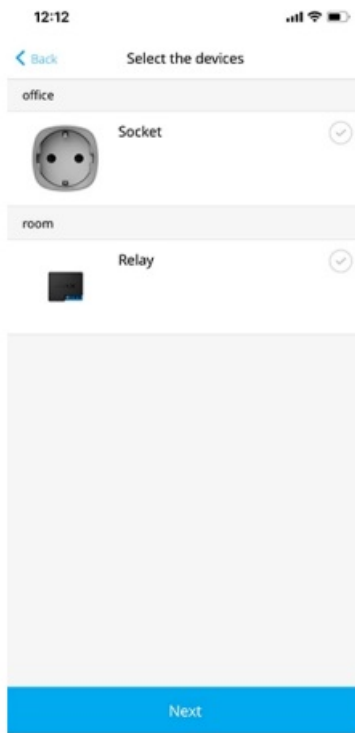

8. Enter the **Scenario Name** and specify the **Device Action** to be executed by pressing the Button.

- Switch on
- Switch off
- Switch the state

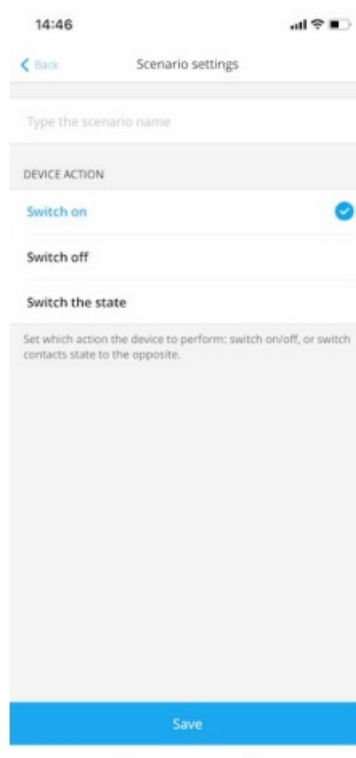

When cony, which is in pulse mode, the **Device Action** setting is not available. During the scenario execution, this relay will close/open the contacts for a set time. The operating mode and pulse duration are set in the. Relay settings

9. Click **Save**. The scenario will appear in the list of device scenarios.

Mute Fire Alarm

By pressing the Button, the interconnected e detectors alarm can be muted (if the corresponding operating mode of the button is selected). The reaction of the system to pressing a button depends on the state of the system:

- **The Interconnected FireProtect Alarms have already propagated** — by the press of the Button, all e detectors sirens are muted, except for those that registered the alarm. Pressing the button again mutes the remaining detectors.
- **The interconnected alarms delay time lasts** — the siren of the triggered FireProtect/FireProtect Plus detector is muted by pressing.

Learn more about interconnected alarms of e detectors

Placement

The button can be fixed on a surface or carried around.

How to fix button

To fix on a surface (e. g. under a table), use Holder.

To install the button in the holder:

1. Choose a location to install the holder.
2. Press the button to test whether the commands can reach the hub. If not, choose another location or use a ReX radio signal range extender.



When connecting Button via ReX, keep in mind that the button does not automatically switch between range extender and hub. You can assign a Button to a hub or another ReX in the Ajax app.

3. Fix Holder on the surface using the bundled screws or double-sided adhesive tape.
4. Put Button into the holder.



Please note that Holder is sold separately.

[Buy Holder](#)

How to carry around Button

The button is convenient to carry with you thanks to a special hole on its body. It can be worn on the wrist or around the neck, or hung on a key ring. Button has an IP55 protection rating. This means that the device's body is protected from dust and splashes. Tight buttons are recessed into the body and software protection helps to avoid accidental pressing.

Maintenance

When cleaning the key fob body, use cleaners that are suitable for technical maintenance.

Never use substances containing alcohol, acetone, gasoline, and other active solvents to clean the Button. The pre-installed battery provides up to 5 years of key fob operation in normal use (one press per day). More frequent use may reduce battery life. You can check the battery levels at any time in the Ajax app.



Keep new and used batteries away from children. Do not ingest battery, Chemical Burn Hazard. The pre-installed battery is sensitive to low temperatures and if the key fob is a cooled sign, the battery level indicator in the app may show incorrect values until the key fob becomes warmer. The battery level value is not updated on a regular basis, but only updates after pressing the button. When the battery has run down, the user will receive a notice app, and the LED will steadily light up red and go out each time the button is pressed.

How long Ajax devices operate on batteries, and what affects this Battery Replacement

Technical Specifications

Number of buttons	1
LED backlight indicating command delivery	Available
Protection against accidental activation	Available, in panic mode
Frequency band	868.0 – 868.6 MHz or 868.7 – 869.2 MHz, de

Compatibility	Operates with all Ajax, and hubs range featur
Maximum radio signal power	Up to 20 mW
Radio signal modulation	GFSK
Radio signal range	Up to 1,300 m (without obstacles)
Power supply	1 CR2032 battery, 3 V
Battery life	Up to 5 years (depending on the frequency of
Protection class	IP55
Operating temperature range	From -10°C to +40°C
Operating humidity	Up to 75%
Dimensions	47 × 35 × 13 mm
Weight	16 g

Complete Set

1. Button
2. Pre-installed CR2032 battery
3. Double-sided tape
4. Quick Start Guide

Warranty

The warranty for the products manufactured by the AJAX SYSTEMS MANUFACTURING limited liability company is valid for 2 years after purchase and does not extend to the bundled

battery.


If the device does not function properly, we recommend that you the support service as technical issues can be resolved remotely in half of the cases!

Warranty obligations

User agreement

Technical support: support@ajax.systems

Documents / Resources

	AJAX Button Wireless Panic Button with Protection [pdf] User Manual Button, Wireless Panic Button with Protection, Button Wireless Panic Button with Protection
---	--

References

- [End user agreement - Ajax Systems](#)
- [Current product lines of the Ajax security system](#)
- [Current product lines of the Ajax security system](#)
- [Current product lines of the Ajax security system](#)
- [Wireless panic button with control mode | Ajax Systems](#)
- [Holder for Button/DoubleButton — Bracket for panic button](#)
- [ocBridge Plus — Module for Ajax devices integration with wired systems](#)
- [Relay — Low current remote control relay with dry contact](#)
- [ReX — Intelligent radio signal range extender | Ajax Systems](#)
- [Socket \(type F\) — Wireless smart plug with energy monitor](#)
- [uartBridge — Module for Ajax devices integration with third-party wireless alarms systems](#)
- [Ajax WallSwitch — Wireless power relay with energy monitor](#)
- [Software | Ajax Systems](#)
- [Warranty - Ajax Systems](#)
- [Automation | Ajax Systems Support](#)
- [How battery charge is displayed in Ajax apps | Ajax Systems Support](#)
- [How long Ajax devices operate on batteries, and what affects this | Ajax Systems Support](#)
- [How to temporarily deactivate a device without removing it from the system | Ajax Systems Support](#)
- [Relay User Manual | Ajax Systems Support](#)
- [How to create and configure a scenario in the Ajax system | Ajax Systems Support](#)
- [What is Interconnected Fire Detectors Alarm and how does it work | Ajax Systems Support](#)