



Home » ALLEGRO » ALLEGRO ACS37630 Current Sensor User Guide 🏗



Contents [hide]

- 1 ALLEGRO ACS37630 Current Sensor
- 2 DESCRIPTION
- 3 FEATURES
- 4 USING THE EVALUATION BOARDS
- **5 PERFORMANCE DATA**
- 6 SCHEMATIC
- 7 LAYOUT
- 8 BILL OF MATERIALS
- 9 APPLICATION SUPPORT
- 10 Revision History
- 11 Documents / Resources
 - 11.1 References



ALLEGRO ACS37630 Current Sensor



DESCRIPTION

This user guide documents the features, operation, and use of the ACS37630 current sensor with the ASEK37630 evaluation board. Allegro MicroSystems offers evaluation board units that provide a method for quick evaluation of the Allegro current sensor in a lab environment, without the requirement for a custom circuit board.

The evaluation board is used to evaluate the functionality of the ACS37630, a cost-effective and precise solution for AC and DC current sensing in busbar and high-current printed circuit board (PCB) applications that use a U-shaped concentrator. Applied current through a busbar or PCB generates a magnetic field that is sensed by the Hall integrated circuit (IC). The ACS37630 outputs an analog signal that varies linearly with the field sensed within the range specified. The U-shaped concentrator simplifies the design and assembly of the module, so it is an attractive alternative to traditional C-shaped concentrators. High isolation is achieved via the non-contact nature of this assembly.

This guide includes a schematic of the ASEK37630 evaluation board, reference documentation, measurement and operation techniques, PCB layouts, and a bill of materials (BOM).

Table 1: ACS37630 Evaluation Board Configurations



Figure 1: ASEK37630 Evaluation Board, Full Assembly with Busbar and U-Core

Table 1: ACS37630 Evaluation Board Configurations

FEATURES

This evaluation board is designed for the 4 mV/G variant of the ACS37630 (sensor part number ACS37630LOLLU-004B5) with a full-scale output range of approximately ±860

A, or the 2.5 m V/G variant of the ACS37630 (sensor part number ACS37630LOLLU-2P5B5) with a full-scale output range of approximately ±1380 A. VCC, GND, and VOUT test points are available as header pins for ease of connection to lab equipment. Holes at either end of the busbar allow for M5 bolt connections to lugs and high-current cables.

Part Number	Sensor Include	Description
ACSEVB-Ucore0 1-37630-01	ACS37630LOLL U-004B5	Full evaluation board assembly with U-core, bu sbar, and 4 mV/G sensor
ACSEVB-Ucore0 1-37630-02	ACS37630LOLL U-2P5B5	Full evaluation board assembly with U-core, bu sbar, and 2.5 mV/G sensor

DESCRIPTION (continued)

Alternative U-Core Selection

- This evaluation board assembly comes with a 20 mm-wide U-core supplied by Shanghai SEC Technology Co., Ltd (Sectech), giving full-scale output of ±860 A sensed current using a 4 mV/G sensor, or ±1380 A sensed current using a 2.5 mV/G sensor.
- The internal width of the U-core is by far the most important factor influencing the
 coupling factor and, thus, the field at the sensor. To achieve a desired current sensing
 range, see the rough estimate of sensor gain performance for various core sizes
 shown in Table 2. Combinations that correspond to the Allegro evalua-tion boards are
 highlighted in green.
- NOTE: For the higher current ranges in the table, a larger core thickness is required to avoid saturation. For application-specific concentrator design support, contact an Allegro representative.
 - High-quality U-cores of various shapes and sizes are available from Sectech. For more information, contact sales@sectech.com.cn

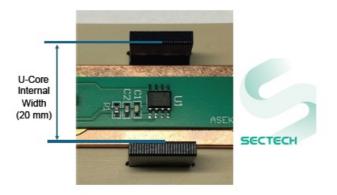


Table 2: Full-Scale Current vs. U-Core Width and Sensor Gain

Table 2: Full-Scale Current vs. U-Core Width and Sensor Gain

U-Core Internal Wi	Full-Scale Current (A, approximate) [1]			
	4 mV/G	2.5 mV/G	1.5 mV/G	
10	±480	±770	±1280	
15	±620	±990	±1650	
20	±860	±1380	±2290	
25	±1120	±1790	±2990	

This table provides a rough guideline. Coupling factor is also (weakly) affected by the other physical dimensions of the U-core, the material properties, and the location of the sensor within the U-shape. For application-specific simulation support, contact an Allegro representative.

USING THE EVALUATION BOARDS

Assembly

The ASEK37630 assembly is shown in Figure 2. The complete bill of materials (BOM) is provided in the Bill of Materials section.

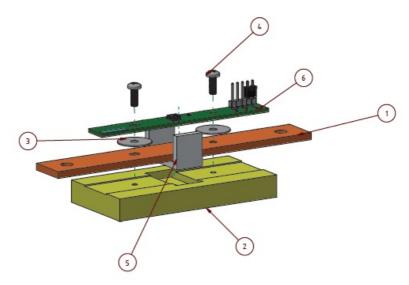


Figure 2: ASEK37630 Assembly—Exploded View

Connections

Supply 5 V to the VCC pin, connect ground to the GND pin, and connect measurement hardware (oscilloscope or multimeter) to the VOUT pin. Connect a high-current supply to both ends of the busbar. For best accuracy, use a four-point measurement on VOUT-GND: This provides a precise output voltage that is unaffected by contact resistance. While customer programming is not currently supported on the ACS37630, a PROG pin header with a jumper that shorts it to GND is included in the PCB design and is available for troubleshooting use in collaboration with Allegro engineering support.

Common Measurements

The ASEK37630 evaluation board is useful when measuring device characteristics such as quiescent output voltage, VOUT(Q), and sensitivity, Sens.

To measure the ACS37630 quiescent output voltage, ensure the device is powered using the correct supply voltage, typically 5 V.

Using an oscilloscope to view the output waveform, or a multi-meter to view the output voltage level, verify the VOUT pin on the evaluation board is V CC/2 = 2.5 V. The deviation from this ideal value is defined as offset error:

Equation 1: Offset Error (mV) Calculation

$$Offset [mV] = (V_{OUT(Q)}[V] - \frac{V_{CC}[V]}{2}) \times 1000$$

To measure device sensitivity, first ensure the device is powered using the correct supply voltage. Apply a known current (IP) through the busbar; and, while the current is

flowing, measure

VOUT again. Then, measure VOUT(Q) again, and calculate device sensitivity as:

Equation 2: Measured Sensitivity Calculation for ACS37630

Sens
$$\left[\frac{mV}{A}\right] = \frac{V_{OUT}\left[V\right] - V_{OUT(Q)}\left[V\right]}{I_p\left[A\right]} \times 1000$$

Offset error can be converted from mV to A as:

Equation 3: Offset Error (A) Calculation

$$Offset [A] = \frac{Offset [mV]}{Mean (Sens [\frac{mV}{A}])}$$

Were mean(Sens) is the average measured sensitivity over the full current range. If only one sensitivity measurement is taken, it is recommended that the measurement be performed at a relatively high current to minimize the impact of U-core remanence error.

The total output error in percent full-scale (%FS) is calculated as:

$$E_{total} \left[\%FS\right] = \frac{\left(V_{OUT}(I) \left[V\right] - Fit(V_{OUT}(I)) \left[V\right]\right)}{2 \left[V FS\right]} \times 100 \left[\%\right]$$

where Fit(VOUT(I)) is a linear fit to a series of measurements of VOUT vs. current at room temperature.

PERFORMANCE DATA

 Typical performance data using the evaluation board with a 4 mV/G sensor is shown in Figure 3 and Figure 4. Performance might vary slightly due to device-to-device variations and small variations in placement of assembly components relative to one another.

The offset error measured relative to VCC/2 who current is not. The offset error measured relative to VCC/2 when current is not flowing is shown in Figure 3. The source of most of the offset error is remanence from the concentrator, which depends on the history of the previously applied current. The effect of the remanence from the concentrator depends on material properties and concentrator design; it is largely temperature-independent. The additional 2 to 3 mV shift in the hysteresis loops as temperature changes is a result of the offset error of the sensor itself.

VOUT (measured at all test points shown in Figure 3(a)) is plotted as a function of applied current in Figure 4(a).

distinguish at this scale.

Sensitivity calculated using Equation 2 is shown in Figure 4(b). (The apparent low sensitivity at low current is related to the cur-rent history and conce tor remanence.)

Because it is difficult to separate the effects of remanence and device sensitivity, it often makes sense to evaluate the total error, as shown in Figure 4(c), where the measured output is compared to an ideal linear output having a sensitivity of 2.325


• NOTE: All temperature plots are overlaid, but the differences are too small to

• At high current, the error is dominated by the sensitivity drift over temperature of the sensor itself.

At low current, the error depends on a combination of concentrator hysteresis and sensor offset error.

•


mV/A:

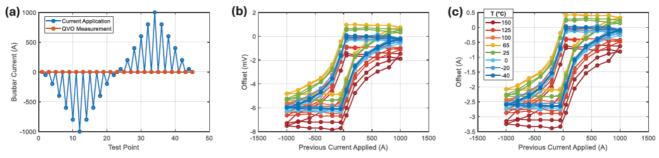

History of current applied to obtain data in plots (b) and (c)

- Resultant offset error in mV (see Equation 1), where current is not applied (shown as a function of temperature and current history)
- Resultant offset error in amperes (see Equation 3) (shown as a function of temperature and current history)

Figure 3: Example Current Application History and Resultant Hysteresis Loops Using 4 mV/G Sensor

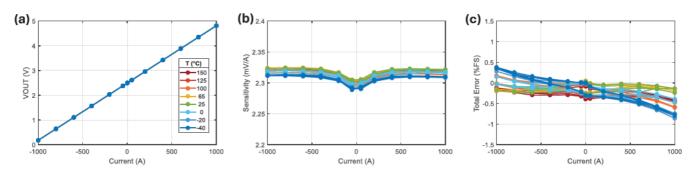

- VOUT at all test points plotted as a function of applied current
- Sensitivity calculated using Equation 2
- Total error including offset and sensitivity (see Equation 4) over current and temperature

SCHEMATIC

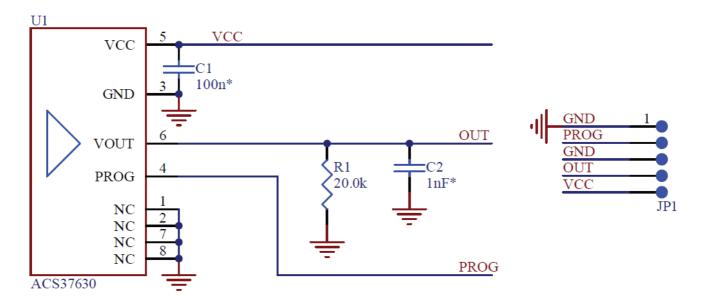


Figure 5: PCB Board Schematic

LAYOUT




Figure 6: PCB Layout (Top Layer)



Figure 7: PCB Layout (Bottom Layer)

BILL OF MATERIALS

Table 3: ASEK37630 Evaluation Board Bill of Materials

Designator /PCB Label	Quant	Description	Manuf acture r	Manufacturer Part Number
1	1	Busbar	Allegro	39-0050-002-D WG
2	1	Base holder	Allegro	39-0050
3	2	Spacer	Allegro	39-0050-005-D WG
4	2	Brass pan head Phillips	Mcmas ter	96741A118
5	1	U-core	Sectec h	Sectech-U26-1 5-13
6	1	PCB	Allegro	39-0054-001-R 1
U1	1	IC, SOIC-8, current sensor	Allegro	ACS37630LOL LU-004B5 or A CS37630LOLL U-2P5B5
C2	1	Capacitor, 0603, 16 V, 1 nF, X8R, 150°C rated	Kemet	C0603C102J8H ACTU
C1	1	Capacitor, 0603, monolithic, 16 V, X8R, 100 nF, 150°C rated	Vishay	VJ0603Y104JX XAC
R1	1	Resistor, 0603, 100 mW, thick film, 1%, 20 k Ω	Yageo	RC0603FR-072 0KL
JS2	1	Jumper, 2-pin shunt, gold plating, 125°C rated	Molex	90059-0013

JP1 1	1	Jumper, 5-pin male, gold plating, 1 50°C rated	Sullins	GBC05SFBN-M 30	
-------	---	--	---------	-------------------	--

APPLICATION SUPPORT

For application support, visit https://www.allegromicro.com/en/about-allegro/contact-us/technical-assistance and navigate to the appropriate region.

Revision History

Numb er	Date	Description
_	March 27, 2 025	Initial release

Copyright 2025, Allegro MicroSystems.

Allegro MicroSystems reserves the right to make, from time to time, such departures from the detail specifications as may be required to permit improvements in the performance, reliability, or manufacturability of its products. Before placing an order, the user is cautioned to verify that the information being relied upon is current.

Allegro's products are not to be used in any devices or systems, including but not limited to life support devices or systems, in which a failure of Allegro's product can reasonably be expected to cause bodily harm.

The information included herein is believed to be accurate and reliable. However, Allegro MicroSystems assumes no responsibility for its use; nor for any infringement of patents or other rights of third parties which may result from its use.

Copies of this document are considered uncontrolled documents.

For the latest version of this document, visit our website: www.allegromicro.com

Allegro MicroSystems 955 Perimeter Road Manchester, NH 03103-3353 U.S.A. www.allegromicro.com

Documents / Resources



ALLEGRO ACS37630 Current Sensor [pdf] User Guide

ACS37630 Current Sensor, ACS37630, Current Sensor, Sensor

References

- User Manual
 - ACS37630, ACS37630 Current Sensor, ALLEGRO, Current Sensor,
- ALLEGRO Sensor

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

 $\hfill \square$ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.