

Altronix ACM8E Series ACM8CBE Access Power Controllers **Installation Guide**

Home » Altronix » Altronix ACM8E Series ACM8CBE Access Power Controllers Installation Guide 🖫



Contents

- 1 Altronix ACM8E Series ACM8CBE Access Power **Controllers**
- 2 Overview
- 3 Specifications
- **4 Installation Instructions:**
- **5 LED Diagnostics**
- **6 Terminal Identification Tables**
- 7 Typical Application Diagram
- 8 Hook-Up Diagrams
- 9 Documents / Resources
 - 9.1 References
- **10 Related Posts**



Altronix ACM8E Series ACM8CBE Access Power Controllers



Overview

Altronix ACM8E and ACM8CBE convert one (1) 12 to 24 volt AC or DC input into eight (8) independently controlled fused or PTC protected outputs. These power outputs can be converted to dry form "C" contacts (ACM8E only). Outputs are activated by an open collector sink or normally open (NO) dry trigger input from an Access Control System, Card Reader, Keypad, Push Button, PIR, etc. The units will route power to a variety of access control hardware devices including Mag Locks, Electric Strikes, Magnetic Door Holders, etc. Outputs will operate in both Fail-Safe and/or Fail-Secure modes. Units are designed to be powered by one common power source which will provide power for both the board operation and locking devices, or two (2) totally independent power sources, one (1) providing power for board operation and the other for lock / accessory power. The FACP Interface enables Emergency Egress, Alarm Monitoring, or may be used to trigger other auxiliary devices. The fire alarm disconnect feature is individually selectable for any or all of the eight (8) outputs.

Specifications

12 to 24volt AC or DC operation (setting not required).(0.6A @ 12 volt, 0.3A @ 24 volt current consumption with all relays energized).

Power supply input options:

- a) One (1) common power input (board and lock power).
- b) Two (2) isolated power inputs (one (1) for board power and one (1) for lock/hardware power).
- • Eight (8) Access Control System trigger inputs:
 - a) Eight (8) normally open (NO) inputs.
 - b) Eight (8) open collector sink inputs.
 - o c) Any combination of the above.
- Eight (8) independently controlled outputs:
 - a) Eight (8) Fail-Safe and/or Fail-Secure power outputs.

- b) Eight (8) dry form "C" 5A rated relay outputs (ACM8E only).
- c) Any combination of the above (ACM8E only).
- Eight (8) auxiliary power outputs (unswitched).

Output ratings:

ACM8E: Fuses are rated 3.5A each.

• ACM8CBE: PTCs are rated 2.5A each.

Main fuse is rated at 10A.

Note: Total output current is determined by the power supply, not to exceed a maximum of 10A total.

- Red LEDs indicate outputs are triggered (relays energized).
- Fire Alarm disconnect (latching or non-latching) is individually selectable for any or all of the eight (8) outputs. Fire Alarm disconnect input options:
- a) Normally open (NO) or normally closed (NC) dry contact input.
- b) Polarity reversal input from FACP signaling circuit.
- FACP output relay (form "C" contact rated @ 1A 28VDC, not evaluated by UL).
- Green LED indicates when FACP disconnect is triggered.
- Removable terminal blocks facilitate ease of installation.

Enclosure Dimentions (H x W x D): 15.5" x 12" x 4.5" (393.7mm x 304.8mm x 114.3mm).

ACM8E and ACM8CBE Series Configuration Reference Chart

Altronix Model Number	Fuse Protected Outputs	PTC Protected Auto-Resettable Outputs	Output Ratings	Class 2 Rated Power- Limited	Agency Listing	UL Listings and File Numbers
ACM8E	✓	_	3.5A	*	SECURITY SECURITY OLD LISTED LISTED	UL File # BP6714 UL Listed for Access Control
ACM8CBE	_	√	2.5A	✓	© C €	System Units (UL 294**). "Signal Equipment" Evaluated to CSA Standard C22.2 No.205-M1983

- When used with Class 2 Rated Power-Limited power supply.
- Access Control Performance Levels: Destructive Attack I; Endurance IV; Line Security I; Stand-by Power I.

Installation Instructions:

1. Mount unit in the desired location.

Carefully review

- Terminal Identification Table (pg. 4) Typical Application Diagram (pg. 5)
- LED Diagnostics (pg. 4) Hook-up Diagrams (pg. 6)

Power supply input


The units can be powered with one (1) power supply which will provide power for both board operation and the locking devices or two (2) separate power supplies, one (1) to provide power for the board operation and the other to provide power for the locking devices and/or access control hardware.

Note: The input power can be either 12 to 24 volts AC or DC (0.6A @ 12 volt, 0.3A @ 24 volt current consumption with all relays energized).

Single power supply input

If the unit and the locking devices are to be powered using a single power supply, connect the output

• (12 to 24 volts AC or DC) to the terminals marked [- Power +].

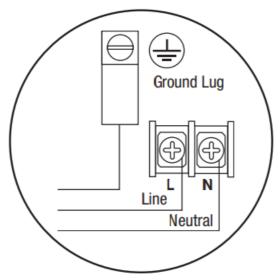

Dual power supply inputs (Fig. 1c, pg. 5)

When the use of two power supplies is desired, jumpers J1 and J2 (located to the left of the power control terminals) must be cut. Connect power for the unit to the terminals marked [– Control +] and connect power for the locking devices to the terminals marked [– Power +].

Note: When using DC power supplies polarity must be observed. When using AC power supplies polarity needs not to be observed (Fig. 1d, pg. 5). For UL compliance the power supplies must be UL Listed for Access Control Systems and accessories.

Output options (Fig. 1, pg. 5):

The ACM8E provide either eight (8) switched power outputs, eight (8) dry form "C" outputs, or any combination of both switched power and form "C" outputs, plus eight (8) unswitched auxiliary power outputs. The ACM8CBE provide eight (8) switched power outputs or eight (8) unswitched auxiliary power outputs.

Switched Power outputs

Connect the negative (–) input of the device being powered to the terminal marked [COM]. For Fail-Safe operation connect the positive (+) input of the device being powered to the terminalmarked [NC]. For Fail-Secure operation connect the positive (+) input of the device being powered to the terminal marked [NO].

Form "C" outputs (ACM8E only)

When form "C" outputs are desired the corresponding output fuse (1-8) must be removed. Connect negative (–) of the power supply directly to the locking device. Connect the positive (+) of the power supply to the terminal marked [C]. For Fail-Safe operation connect the positive (+) of the device being powered to the terminal marked NC]. For Fail-Secure operation connect the positive (+) of the device being powered to the terminal marked [NO].

Auxiliary Power outputs (unswitched)

Connect positive (+) input of the device being powered to the terminal marked [C] and the negative (-) of the device being powered to the terminal marked [COM]. Output can be used to provide power for card readers, keypads etc.

Input trigger options (Fig. 1, pg. 5):

• (a) Normally Open [NO] input trigger:

Inputs 1-8 are activated by normally open or open collector sink inputs. Connect devices (card readers, keypads, request to exit buttons etc.) to terminals marked [IN] and [GND].

Open Collector Sink inputs

Connect the access control panel open collector sink positive (+) to the terminal marked [IN] and the negative (-) to the terminal marked [GND].

Fire Alarm Interface options (Figs. 3 through 7, pg. 6)

A normally closed [NC], normally open [NO] input or polarity reversal input from FACP signaling circuit will trigger selected outputs. To enable FACP Disconnect for an output turn the corresponding switch [SW1-SW8] OFF. To disable FACP disconnect for an output turn the corresponding switch [SW1-SW8] ON.

• Normally Open [NO] input

For non-latching hook-up see Fig. 4, pg. 6. For latching hook-up see Fig. 5, pg. 6.

• (b) Normally Closed [NC] input:

For non-latching hook-up see Fig. 6, pg. 6. For latching hook-up see Fig. 7, pg. 6.

• (c) FACP Signaling Circuit input trigger:

Connect the positive (+) and negative (-) from the FACP signaling circuit output to the terminals marked [+ INP -]. Connect the FACP EOL to the terminals marked [+ RET -] (polarity is referenced in an alarm condition). Jumper J3 must be cut (Fig. 3, pg. 6).

FACP Dry form "C" output (Fig. 1a, pg. 5)

Connect desired device to be triggered by the unit's dry contact output to the terminals marked [NO] and [C] FACP for normally open output or the terminals marked [NC] and [C] FACP for normally closed output.


LED Diagnostics

LED	ON	OFF
LED 1- LED 8 (Red)	Output relay(s) energized.	Output relay(s) de-energized.
Trg (Green)	FACP input triggered (alarm condition).	FACP normal (non-alarm condition).

Terminal Identification Tables

Terminal Legend	Function/Description				
– Power +	12VDC or 24VDC input from power supply board.				
- Control +	These terminals can be connected to a separate UL Listed power supply to provide isola ed operating power for the ACM8E/ACM8CBE (jumpers J1and J2 must be removed).				
TRIGGER					
INPUT 1 – INPUT 8 IN, GND	From normally open and/or open collector sink trigger inputs (request to exit buttons, exit pir's, etc.).				
	12 to 24 volts AC/DC trigger controlled outputs:				
	Fail-Safe [NC positive (+) & COM Negative (-)], Fail-Secure [NO positive (+) & COM Negative (-)],				
OUTPUT 1 – OUTP	Auxiliary output [C positive (+) & COM Negative (-)]				
UT 8	(When using AC power supplies polarity need not be observed),				
NC, C, NO, COM	NC, C, NO become form "C" 5A/24VAC/VDC rated dry outputs when fuses are removed (ACM8E). Contacts shown in a non-triggered state.				
FACP INTERFACE T, + INPUT –	Fire Alarm Interface trigger input from FACP. Trigger inputs can be normally open, normal ly closed from an FACP output circuit (Fig. 3 through 7, pgs. 6-7).				
FACP INTERFACE NC, C, NO	Form "C" relay contact rated @ 1A 28VDC for alarm reporting. (This output has not been evaluated by UL).				

Typical Application Diagram

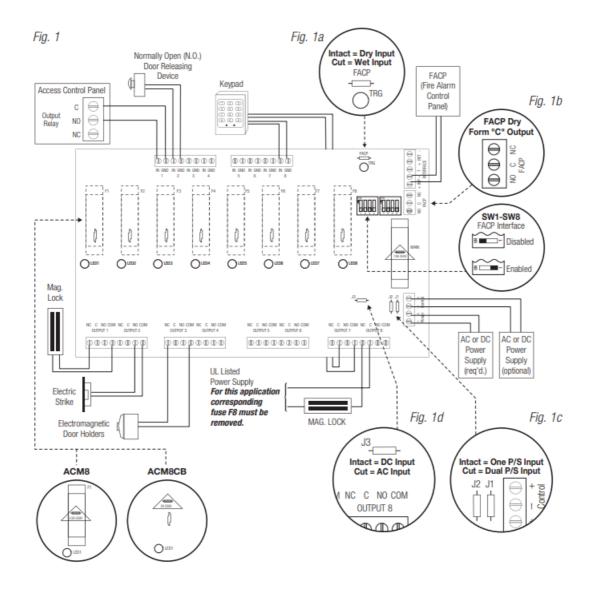

WARNING: To reduce the risk of fire or electric shock, do not expose the unit to rain or moisture. Replace fuses (ACM8E only) with the same type and rating, 3.5A/250V.

Hook-Up Diagrams

Fig. 2 Optional hook-up using two (2) isolated power supply inputs

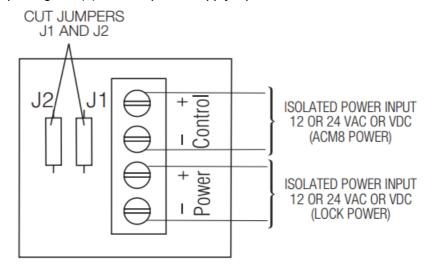


Fig. 3 Polarity reversal input from FACP signaling circuit output (polarity is referenced in alarm condition)

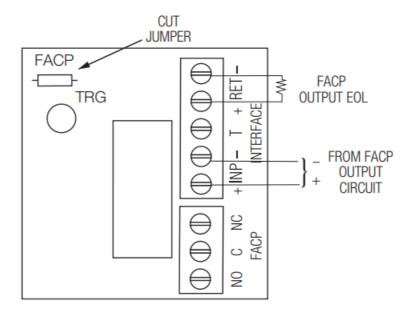


Fig. 4 Normally Open: Non-Latching FACP trigger input

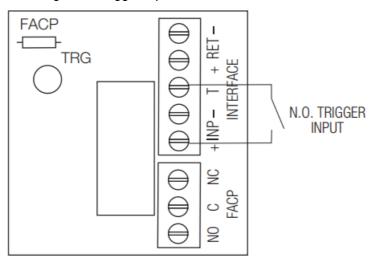


Fig. 5 Normally Open FACP Latching trigger input with reset (This output has not been evaluated by UL)

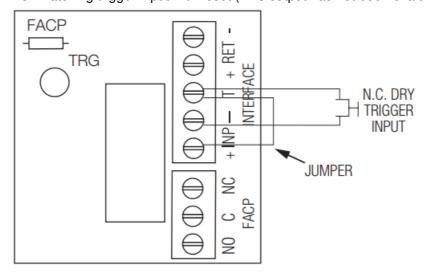


Fig. 6 Normally Closed: Non-Latching FACP trigger input


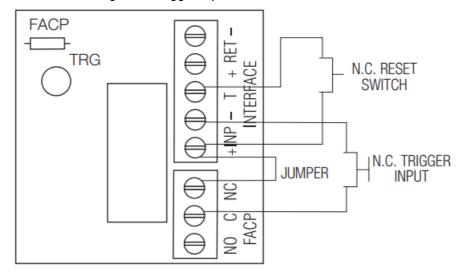


Fig. 7 Normally Closed: Latching FACP trigger input with reset (This output has not been evaluated by UL)


Enclosure Dimensions

15.5" x 12" x 4.5" (393.7mm x 304.8mm x 114.3mm)

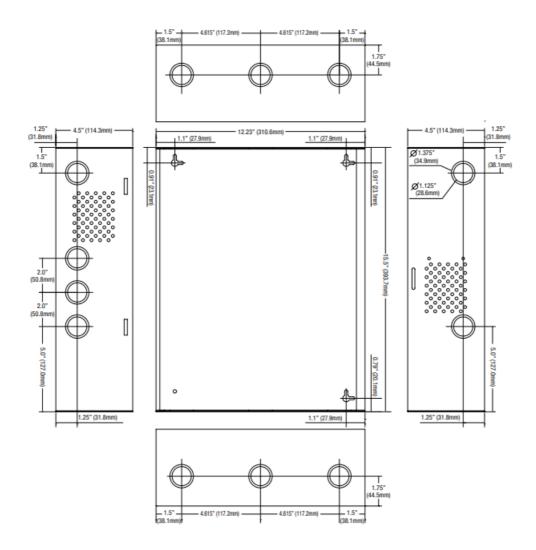

Altronix is not responsible for any typographical errors.140 58th Street, Brooklyn, New York 11220 USA | phone: 718-567-8181 | fax: 718-567-9056 website: www.altronix.com | e-mail: info@altronix.com | Lifetime Warranty

Documents / Resources



<u>Altronix ACM8E Series ACM8CBE Access Power Controllers</u> [pdf] Installation Guide ACM8E Series, ACM8CBE, Access Power Controllers

References

• Altronix Home

Manuals+,