



AOC 27G2SPA Monitor User Guide

[Home](#) » [AOC](#) » AOC 27G2SPA Monitor User Guide 

AOC 27G2SPA Monitor User Guide




Contents


- [1 Package Contents](#)
- [2 Installations Instructions](#)
- [3 General Specification](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)

Package Contents


- Monitor

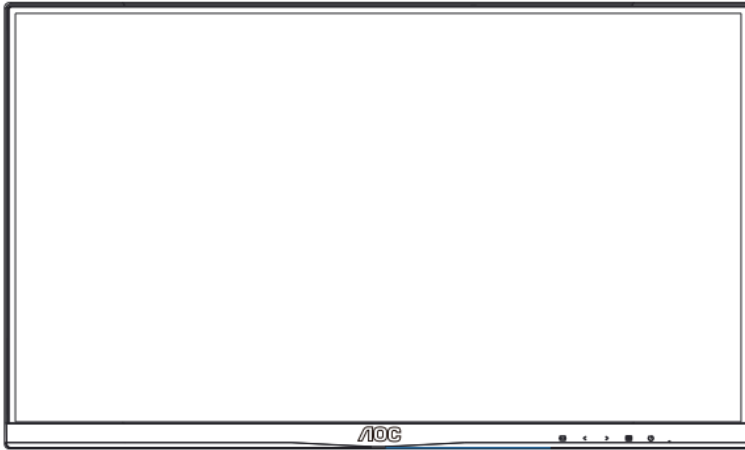


- Stand

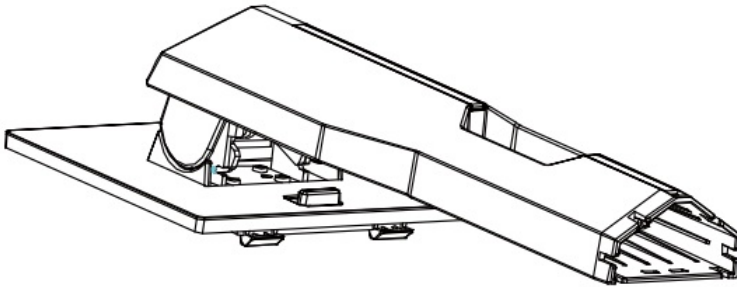


- Base

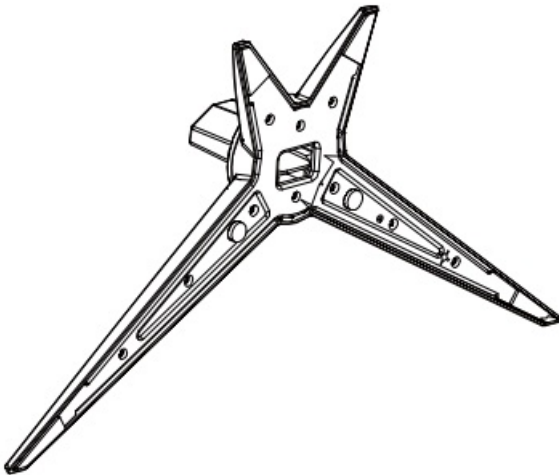

- Quick Start



- Warranty Card



- Power Cable



- HDMI Cable



- DP Cable



- D-SUB Cable








- Audio Cable



*Different according to countries/regions
Display design may differ from that illustrated

Installations Instructions

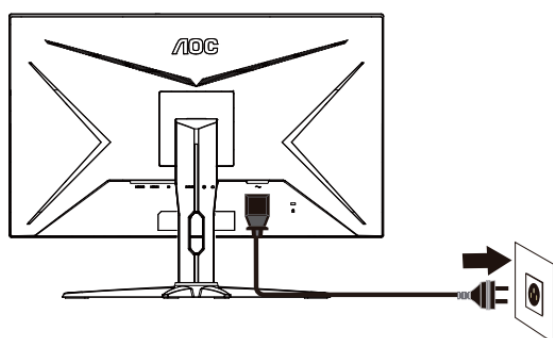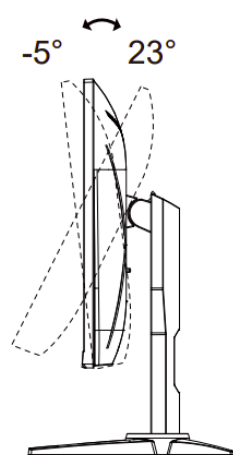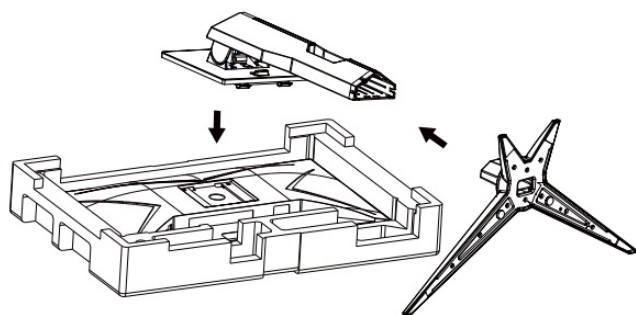

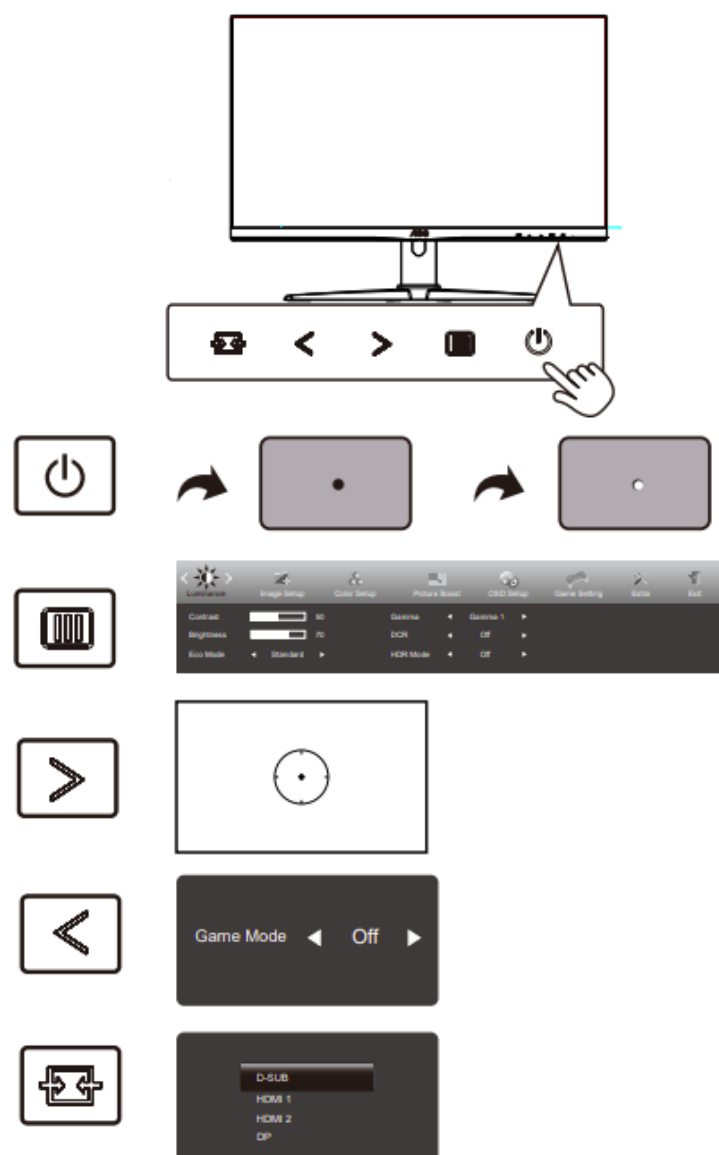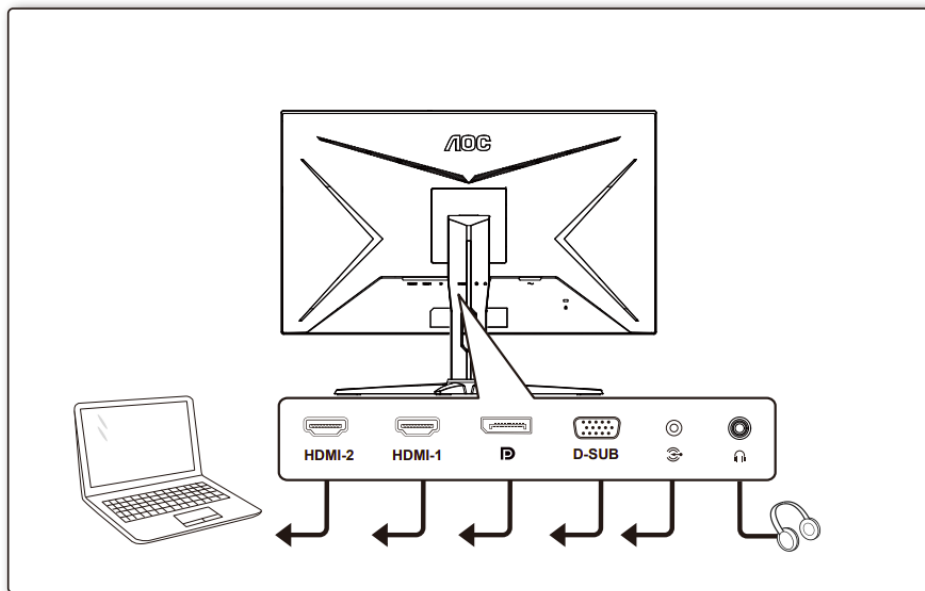

General Specification

	Model name	27G2SPA-E
	Driving system	TFT Color LCD

Panel	Viewable Image Size	68.6cm diagonal (27" Wide Screen)	
	Pixel pitch	0.3114mm(H) x 0.3114mm(V)	
Others	Horizontal scan range	30k~160kHz(D-SUB/HDMI)30k~200kHz(DP)	
	Horizontal scanSize(Maximum)	597.888mm	
	Vertical scan range	48-120Hz(D-SUB)48-144Hz(HDMI)48-165Hz(DP)	
	Vertical Scan Size(Maximum)	336.312mm	
	Optimal preset resolution	1920×1080@60Hz	
	Plug & Play	VESA DDC2B/CI	
	Power Source	100-240V , 50/60Hz,1.5A	
	Power Consumption	Typical (default brightness and contrast)	28W
		Max. (brightness =100,contrast =100)	≤ 45W
		Standby mode	≤ 0.3W
	Dimensions(with stand)	612.5×464.6×227.4mm(WxHxD)	
	Net Weight	4.53kg	
Physical Characteristics	Connector Type	DP/HDMI/D-SUB/AUDIO IN/Earphone out	
	Signal Cable Type	Detachable	
Environmental	Temperature	Operating	0°C~ 40°C
		Non-Operating	-25°C~ 55°C
	Humidity	Operating	10% ~ 85% (non-condensing)
		Non-Operating	5% ~ 93% (non-condensing)
	Altitude	Operating	0~ 5000 m (0~ 16404ft)
		Non-Operating	0~ 12192m (0~ 40000ft)

Find your product and get support



FAQ



Driver



User Manual

Europe

<https://eu.aoc.com/en/support>



Australia

https://au.aoc.com/user_manual



https://tw.aoc.com/user_manual



https://jp.aoc.com/user_manual



Malaysia

https://my.aoc.com/user_manual



Россия

<https://eu.aoc.com/ru/support>



Hong Kong S.A.R.

https://hk.aoc.com/user_manua



Indonesia

https://id.aoc.com/user_manual



https://kr.aoc.com/user_manual



Myanmar

https://mm.aoc.com/user_manual



New Zealand

https://nz.aoc.com/user_manual



Singapore

https://sg.aoc.com/user_manual



Việt Nam

https://vn.aoc.com/user_manual



South Africa

https://za.aoc.com/user_manual



India

https://www.aocindia.com/download_manuals.php



Philippines

https://ph.aoc.com/user_manual



https://th.aoc.com/user_manual



Middle East

https://me.aoc.com/user_manual



Brasil

<https://aoc.portaltpv.com.br/>



US/Canada

<https://us.aoc.com/en-US/downloads>



Printed in China

- [!\[\]\(1fa45a4e3a4dbe569cae65410a9008db_img.jpg\) Homepage | AOC Monitors](#)
- [!\[\]\(4704a622c626cb51a56b7a01526ff7ca_img.jpg\) AOC - Central de Suporte e Dúvidas](#)
- [!\[\]\(68da944a7678e7c5a5243f13b2b65d79_img.jpg\) Search Result - AOC Monitor](#)
- [!\[\]\(11f856d6a3424f919544744b795bdd93_img.jpg\) Contact support | AOC Monitors](#)
- [!\[\]\(25606c4d3b7362da8d60d9164fa38a4b_img.jpg\) Contact support | AOC Monitors](#)
- [!\[\]\(a5165e77ac9dabad8d880d8f56de9d6c_img.jpg\) Search Result - AOC Monitor](#)
- [!\[\]\(defec12c92941050da330b57c68f0aff_img.jpg\) Search Result - AOC Monitor](#)
- [!\[\]\(cd52c8ee4f2e4545dda6139661d2047a_img.jpg\) Search Result - AOC Monitor](#)
- [!\[\]\(92197177177d1260e5f34969553046fa_img.jpg\) Search Result - AOC Monitor](#)
- [!\[\]\(ce3337b307dbb81df62ce47db4ae3aae_img.jpg\) Search Result - AOC Monitor](#)

-  [Search Result - AOC Monitor](#)
-  [Search Result - AOC Monitor](#)
-  [Search Result - AOC Monitor](#)
-  [Search Result - AOC Monitor](#)
-  [Search Result - AOC Monitor](#)
-  [Search Result - AOC Monitor](#)
-  [Search Result - AOC Monitor](#)
-  [Search Result - AOC Monitor](#)
-  [Search Result - AOC Monitor](#)

Manuals+.