Argon 40 Technologies AR1 V3 Argon ONE V3 Case M.2 NVMe PCIe Case





Argon 40 Technologies AR1 V3 Argon ONE V3 Case M.2 NVMe PCIe Case Instruction Manual

Home » Argon 40 Technologies » Argon 40 Technologies AR1 V3 Argon ONE V3 Case M.2 NVMe PCIe Case Instruction Manual ™

Contents


- 1 Argon 40 Technologies AR1 V3 Argon ONE V3 Case M.2 NVMe PCle Case
- 2 ARGON ONE V3 / M.2 NVMe PCIE PARTS
- **3 ARGON ONE V3 FEATURES**
- **4 ASSEMBLY INSTRUCTIONS**
- 5 INSTALL ARGON ONE V3 POWER BUTTON AND FAN CONTROL SCRIPT
- 6 AUTOMATED SETTINGS IN ARGON ONE V3 SCRIPT
 6.1 CONFIGURE ARGON BLSTR DAC FOR RASPBERRY PIOS
- 7 SET UP BUILT-IN INFRARED RECEIVER
- 8 ARGON ONE V3 BASIC HARDWARE TEST AND UPDATE FIRMWARE
- 9 Documents / Resources
 - 9.1 References



Argon 40 Technologies AR1 V3 Argon ONE V3 Case M.2 NVMe PCle Case



ARGON ONE V3 / M.2 NVMe PCIE PARTS

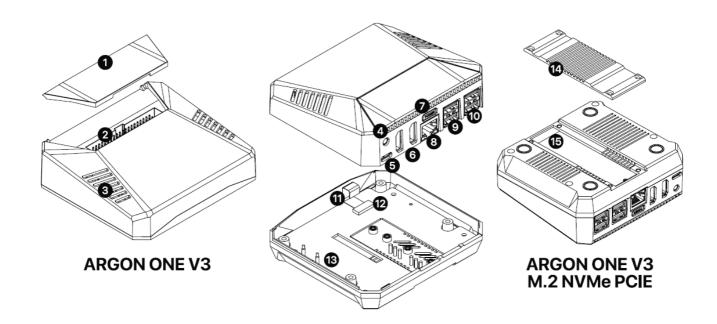

- 1. Magnetic Removable Top Cover
- 2. 40 Pin GPIO Access
- 3. Exhaust vents
- 4. 3.5mm Audio Port
 - (Works only with Argon BLSTR DAC)
- 5. USB-C Power In
- 6. 2x TypeAHDMI
- 7. Power Button
- 8. Gigabit Ethernet
- 9. 2x USB3.0
- 10. 2x USB2.0

- 11. Pele Film Strip
- 12. PCIe Socket
- 13. Power Pogo Pins
- 14. THRML M.2 Heatsink
- 15. M.2 NVMe Drive Socket


ARGON ONE V3 FEATURES

Durable and Functional Case Material for Passive Cooling	Whole top of the case is injected aluminum alloy and injected ABS plastic bottom
More efficient Active Cooling	Blower type 30mm PWM Programmable fan. Full fan power control vi s-a-vis CPU Temp response via Argon Script
Internal MicroControllerfor Power Butto n and FAN Control Functions	Powered by Raspberry Pi RP2O4O Chip. New Hacker-friendly feature
Built-in IR Receiver	(GPIO 23) Works with Argon Remote once Argon Script is installed, b ut is fully user Programmable for other remotes in LIRC
Multi function Power Button and Power Management	Sale shutdown with power cut, Reboot, Always ON Mode
2 Regular HDMI	Converted the micro HDMI of the RPi 5 to Regular HDMI
GPIOAccess	Full GPIO Access with Magnetic cover


ARGON ONE V3 ADD ON MODULES


Add ON: Argon ONE M.2 NVMe PCle E xpansion Board	Fully compatible with the Argon ONE M.2 NVMe PCIe Expansion Board for the M.2 NVMe Storage via the PCIe of the RPi 5
Add ON: Argon BLSTR DAC	Full high definition 24-bit 192kHz Texas Instruments PCM5122 digital audio ccx:lec (DAC) via the 3.5mm jack
Add ON: Argon PWR Uninterrupted Power Supply Module	Argon PWR UPS I5.1V 5A PD UPS with internal RTC

ASSEMBLY INSTRUCTIONS

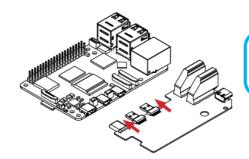

PUSH ALL THE WAY IN THE HDMI-POWER BOARD

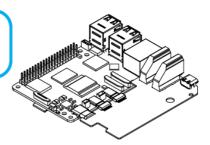


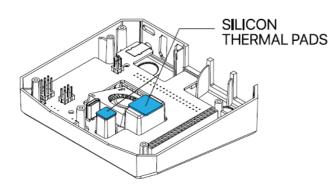

Make sure that the HDMI-Power Board is **FULLY CONNECTED** to the RPi 5 to **AVOID POWERING UP ISSUES.**

- 1. Connect the Raspberry Pi® 5 to HDMI-Power Board. Place the Silicon Themial Pads on the Argon ONE V3 case heatsinks (CPU and PMIC).
- 2. Select the Argon ONE V3 Power Button Management Mode:


ARGON ONE V3 / M.2 NVMe PCIe CASE JUMPER PIN SETTING

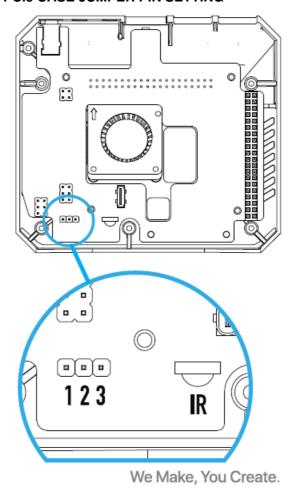


JUMPER PIN SETTIN G	MODE	BEHAVIOUR
Pin 1-2	Default Setting (Mod e1)	You need to PRESS button to Power ON from shutdown or power outage.
Pin2-3	Always ON (Mode2)	Power current will flow directly to Raspberry Pi. NO need to PRESS button to power ON from power outage

• DEFAULT SETTINGS: Pin 1-2 or No Pin


Skip this step if you have not purchased the Argon ONE V3 M.2 NVMe PCle Case or Expansion Board

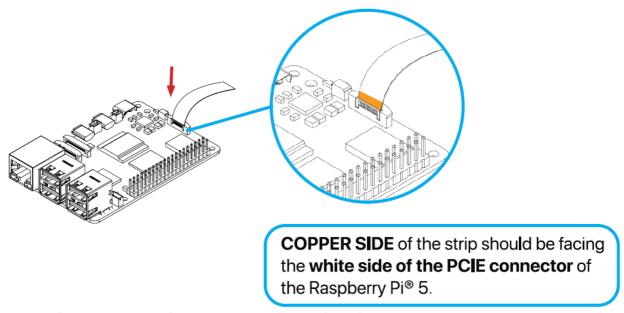


3. Connect the PCIe Pipe Flat Flex Cable to the Raspberry Pi® 5 PCIE port.

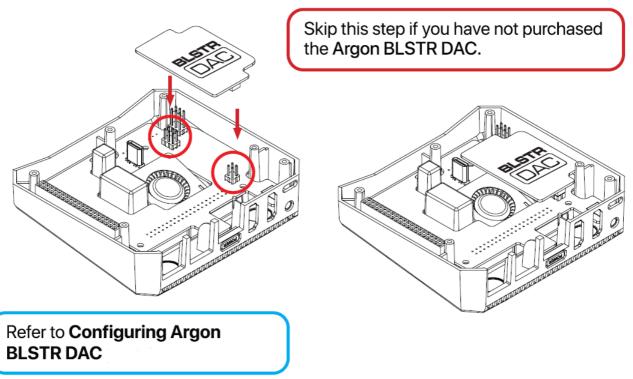


- 4. Connect the Argon BLSTR DAC Board to the pins of the Argon ONE V3 RP2040-Fan Board.
 - Argon BLSTR DAC is needed to activate the 3.5mm Audio Port.

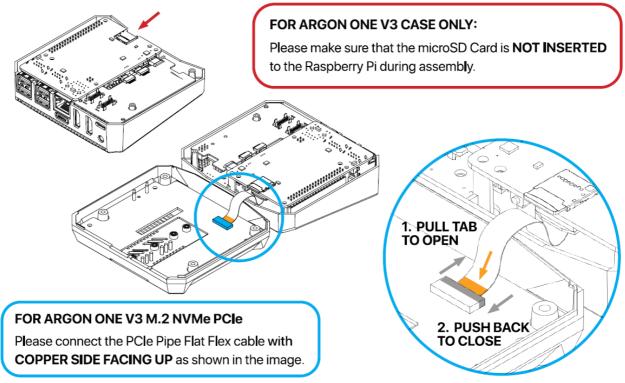


5. Carefully connect Raspberry Pi9 5 HDMI-Power assembly to the female GPIO and 6-pln Power port of the Argon ONE V3 case.

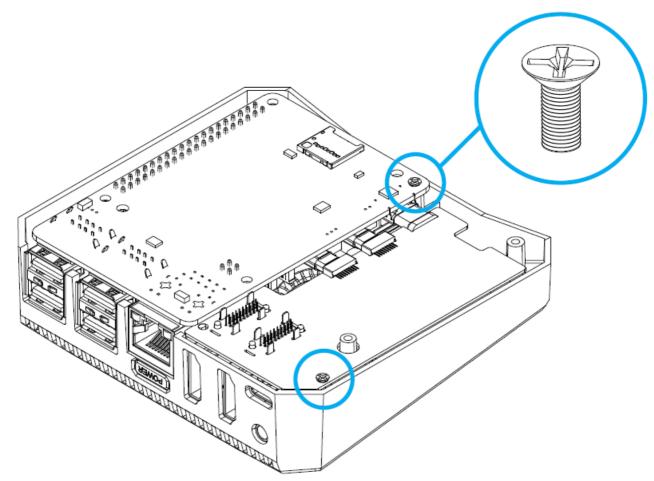

6. Secure flat head screws to fasten Raspberry Pi 5 and HDMI-Power Board assembly to top case.

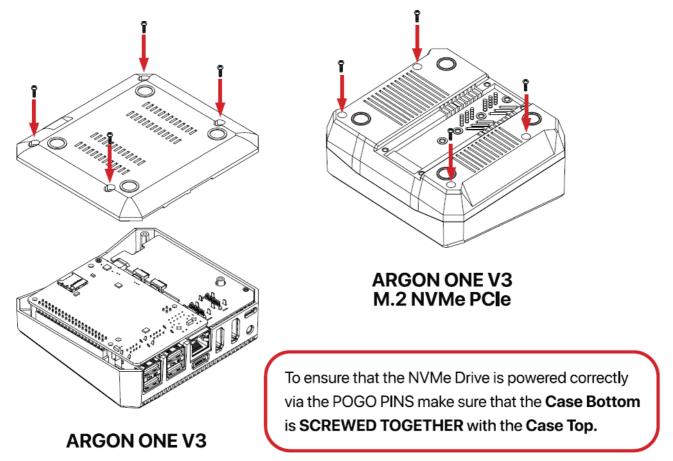

7. Fasten the bottom cover of the Argon ONE V3 / M.2 NVMe PCle using the round head screws.

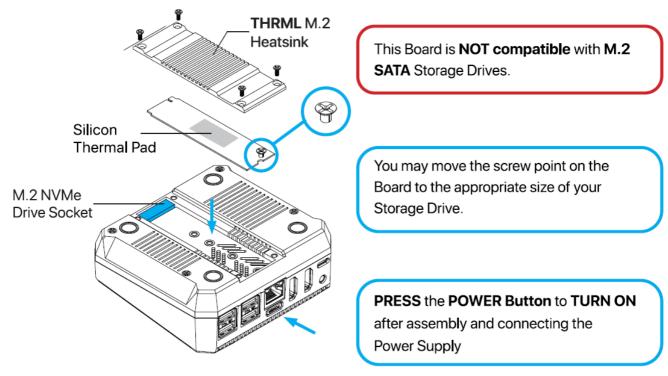

8. Connect your M.2 NVMe Drive to the Argon ONE V3 M.2 NVMe PCIe Expansion Board. This Board will accept M.2 Key M and M.2 Key B+M NVMe Storage Drive.

INSTALL ARGON ONE V3 POWER BUTTON AND FAN CONTROL SCRIPT

STEP 1: Configure the EE PROM Setting to optimize power and boot from NVMe.

- 1. Connect to the Internet, make sure Raspberry Pi TI me is updated and execute in the Terminal.
 - curl https://download.argon40.com/argon-eeprom.sh|bash
- 2. Reboot.

STEP 2: Install the Argon Control Script and Config.txt Settings

- 1. Connect to the Internet and execute in the Terminal.
 - curl https://download.argon40.com/argonl.sh|bash
- 2. Reboot.

UNINSTALL

To uninstall the Argon ONE V3 script you may do so by clicking the Argon ONE V3 Desktop Icon. You may also remove the script via Tenninal Shell by typing:

argonone-uninstall

Always reboot after changing any configuration or uninstallation for the revised settings to take effect.

AUTOMATED SETTINGS IN ARGON ONE V3 SCRIPT

The ARGON ONE Script automates the installation of all the libraries, programs and EEPROM and Config settings necessary for the RP204O in the Argon ONE V3 Case to be able to communicate with the Raspberry PI 5 and

perform the various functions like Active Cooling and Power Management.

Below are the SETTINGS that were automated by the Argon ONE Script.

	EEPROM Config	config.txt
Argon ONE Power Bu tton	PSU_MAX_CURRENT=5000	usb_max_current_enable=1
Argon ONE V3 M.2 NVME PCIE	BOOT ORDER=Oxf416 PCIE_PR OBE=1	dtparam=nvme dtparam=pciex1_1=gen3
Argon BLSTRDAC		dtoverlay=hifiberry-dacplus,slave

DEFAULT ARGON ONE V3 POWER BUTTON AND FAN SETTINGS

Upon installation of the Argon ONE V3 script by default, the settings of the Argon ONE V3 Power button and cooling system are as follows:

ARGONONEV3 STATE	ACTION	FUNCTION
OFF	Short Press	Turn ON
ON	Long Press(>= 3 s)	Soft Shutdown and Power Cut
ON	Short press(<3s)	Nothing
ON	Double tap	Reboot
ON	long Press(>= 5 s)	Forced Shutdown

CPU TEMP	
55C	30%
60C	55%
65C	100%

However, you may change or configure the FAN to your desired settings by clicking the Argon ONE V3 Desktop icon.

Or via Teminal Shell by typing and following the specified format:

· argon-config

CONFIGURE ARGON BLSTR DAC FOR RASPBERRY PIOS

- 1. Make sure you have installed the Argon Configuration Script into your by running in the Terminal Shell:
 - curl https://download.argon40.com/argonl.sh|bash

```
Argon Configuration Tool
Version 2402004
------
Choose Option:
    1. Configure Fan
    2. Configure IR
    3. Configure BLSTR DAC (v3 only)
    4. Configure Units
    5. Uninstall

    0. Exit
[Enter Number (0-5):3
```

2. To enter the Argon Configuration Tool type argon-config in the Terminal Shell. Enter number 3 to install Argon BLSTR DAC Configuration.

- 3. Once installed you will be able to see this.
- 4. If you want to configure manually the ARGON BLSTR DAC just add the setting in the config file located at /boot/flnnware/config.txt
 - dtoverlay=hifiberry-dacplus,slave
- 5. Then Reboot.

For more information please visit: https://argon40.com/blogs/argon-resources

The latest version has a programmable Infrared Receiver installed that can turn ON and OFF the device using the proprietary Argon 40 IR Remote.

To configure the Infrared Receiver ON/OFF signal of Argon ONE V3 type in the Terminal Shell:

· argonone-ir

Then follow the instructions as indicated.

RECOMMENDED IR REMOTE & POWER SUPPLY

Argon JR Remote

• https://argon40.com/products/argon-remote


Argon PWR GaN 27W Power Delivery

• https://argon40.com/products/argon-pwr-gan-usb-c-Pd-Power-supply-27-watts

ARGON ONE V3 BASIC HARDWARE TEST AND UPDATE FIRMWARE

ARGON ONE V3 BASIC HARDWARE TEST


1. Connect the Internal USB-C socket on the RP2040-Fan Board to a 5V Power Supply.

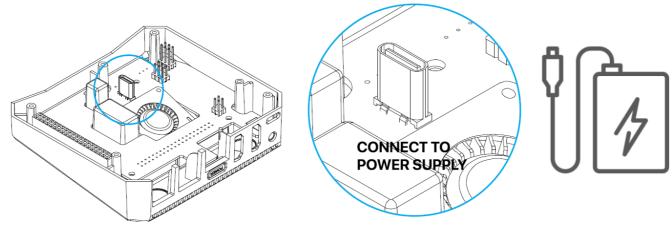

- 2. Press the Power ON Button.
- 3. This would initiate the internal FAN to RUN for 5 SECONDS and then STOP.
- 4. This would indicate that the RP2040 is able to communicate properly with the Power Button and the internal FAN and that the board is fully functional.

UPDATE ARGON ONE V3 FIRMWARE

- 1. Download in your PC or Raspberry Pi Computer the latest Argon ONE V3 Firmware from the link below: https://download.argon40.com/firmware/Argon0ne.uf2
- 2. PRESS and HOLD the Argon ONE V3 POWER BUTTON while you connect the Internal USB•C with Data cable to your PC or Raspberry PI computer.

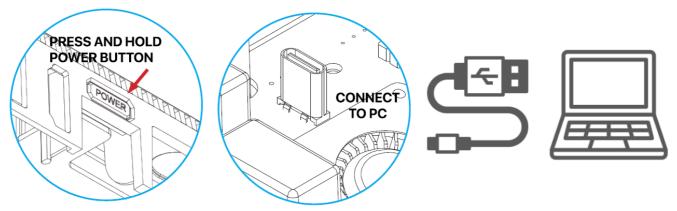

- 3. This puts the RP2040 into USB mass storage device mode.
- 4. Then you can DRAG and DROP your LATEST compiled .uf2 firmware file to the USB mass storage device.
- 5. Eject device when completed.

www.argon40.com

We Make, You Create.

Documents / Resources



Argon 40 Technologies AR1 V3 Argon ONE V3 Case M.2 NVMe PCle Case [pdf] Instruction Manual

AR1 V3 Argon ONE V3 Case M.2 NVMe PCle Case, AR1 V3, Argon ONE V3 Case M.2 NVMe PCle Case, ONE V3 Case M.2 NVMe PCle Case, Case M.2 NVMe PCle Case, NVMe PCle Case, PCle Case

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.