

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Taco](#) /

› [Taco 007-F5 Cast Iron Circulator User Manual](#)

Taco 007-F5

Taco 007-F5 Cast Iron Circulator User Manual

Model: 007-F5 Series

1. INTRODUCTION

The Taco 007-F5 Cast Iron Circulator is engineered for efficient and reliable operation in hydronic heating systems, chilled fresh water systems, and domestic water systems. This model is particularly suited for residential hydronic heating applications. Its design incorporates a unique replaceable cartridge, which contains all moving parts, simplifying maintenance and extending the unit's service life.

The 007-F5 circulator features a quiet, direct-drive, self-lubricating design, eliminating the need for mechanical seals and routine maintenance. Its compact form factor and low power consumption contribute to high-efficiency system performance.

2. SAFETY INFORMATION

WARNING: To reduce the risk of electrical shock, consult the instruction manual for proper installation. Disconnect power before servicing. This pump is not intended for use in swimming pool areas and has not been investigated for such applications. For indoor use only.

- Always ensure the power supply is disconnected before performing any installation, maintenance, or repair work on the circulator.
- Installation and electrical connections must be performed by qualified personnel in accordance with all local codes and regulations.
- Do not operate the circulator if it is damaged or if any electrical components are exposed to moisture.
- Ensure proper grounding to prevent electrical hazards.
- The maximum water temperature for this unit is 110°C (230°F). Exceeding this temperature can cause damage or failure.
- The maximum operating pressure is 125 PSI.

3. PACKAGE CONTENTS

Verify that all components are present upon unpacking:

- Taco 007-F5 Cast Iron Cartridge Circulator - 007 Series, 115 V

- Instruction Manual (this document)

Note: Flanges for connection are typically sold separately and are not included with the circulator unit.

4. PRODUCT OVERVIEW

The Taco 007-F5 circulator is a compact, robust unit designed for continuous duty in various water circulation applications. Its cast iron construction ensures durability, while the cartridge design facilitates easy servicing.



Image 1: Taco 007-F5 Cast Iron Circulator. This image displays the circulator pump, featuring its green cast iron body, motor housing, and flanged connections at the top and bottom for integration into a piping system. A product label with specifications is visible on the motor housing.

Key Features:

- **Quiet, Efficient Operation:** Engineered for minimal noise and optimal energy use.
- **Unique Replaceable Cartridge Design:** All moving parts are contained within a single cartridge, allowing for easy servicing without replacing the entire unit.
- **Universal Flange-to-Flange Dimensions:** Designed for compatibility with standard installations.
- **Standard High Capacity Output:** Delivers reliable performance for residential systems.
- **Maintenance-Free:** Self-lubricating design with no mechanical seal reduces the need for ongoing

maintenance.

5. SPECIFICATIONS

Specification	Value
Model Number (from label)	007-BF5-3
Horsepower (HP)	1/25 HP
Amperage (AMP)	0.76 A
Voltage (VOLTS)	115 V
Frequency (Hz)	60 Hz
Revolutions Per Minute (RPM)	3250 RPM
Maximum Pressure	125 PSI
Maximum Water Temperature	110°C (230°F)
Material	Cast Iron
Product Dimensions (L x W x H)	7" x 7" x 6"
Item Weight	6.5 Pounds
Power Source	Corded Electric
Enclosure	CSA Enclosure 2
Insulation Class	Class F

6. SETUP AND INSTALLATION

6.1 Pre-Installation Checks

1. Ensure the power supply to the system is completely shut off at the main breaker.
2. Verify that the circulator's specifications (voltage, frequency) match your system's requirements.
3. Inspect the circulator for any visible damage that may have occurred during shipping.
4. Confirm that you have the necessary tools and additional components, such as flanges and gaskets, for installation.

6.2 Mounting the Circulator

1. Select a suitable location for the circulator, ensuring it is easily accessible for future maintenance and away from potential water exposure.
2. Install the appropriate flanges onto the piping system, ensuring they are clean and free of debris.
3. Position the circulator between the flanges, ensuring proper alignment.
4. Secure the circulator to the flanges using bolts, washers, and nuts. Tighten fasteners evenly to create a watertight seal, but do not overtighten.
5. Ensure the circulator is mounted in a way that allows for proper motor cooling and prevents strain on the piping.

6.3 Electrical Connection

1. All electrical wiring must comply with national and local electrical codes.
2. Connect the circulator to a dedicated 115V, 60Hz power supply circuit.
3. Ensure the circulator is properly grounded to prevent electrical shock.
4. Route wiring to prevent damage from heat, sharp edges, or moving parts.
5. After connections are made, secure the electrical box cover.

7. OPERATING INSTRUCTIONS

7.1 Initial Startup

1. After installation and electrical connections are complete, slowly fill the system with water, ensuring all air is purged from the piping.
2. Check for any leaks at the circulator connections. Address any leaks before proceeding.
3. Restore power to the circulator.
4. The circulator should start operating quietly. Listen for any unusual noises, such as grinding or excessive vibration, which may indicate air in the system or an installation issue.

7.2 Normal Operation

The Taco 007-F5 circulator is designed for continuous duty. Once properly installed and started, it will circulate water through your system as dictated by your heating or cooling controls. The unit is self-lubricating and requires no user intervention during normal operation.

8. MAINTENANCE

The Taco 007-F5 circulator is designed to be maintenance-free due to its self-lubricating, cartridge-type design. However, periodic checks of the system and the circulator are recommended to ensure optimal performance and longevity.

8.1 Routine Checks

- **Annually:** Inspect the circulator for any signs of external leaks, corrosion, or unusual noises during operation.
- **Periodically:** Ensure the system pressure is within the recommended range for your heating or cooling system.
- **Electrical Connections:** Verify that electrical connections remain secure and free from corrosion.

8.2 Cartridge Replacement

The unique replaceable cartridge design allows for easy servicing. If the circulator experiences reduced performance or failure, the cartridge can be replaced without removing the entire circulator body from the piping system.

1. **Disconnect Power:** Always disconnect the electrical power supply to the circulator before attempting any service.
2. **Isolate Circulator:** Close isolation valves on both sides of the circulator to prevent water flow.
3. **Drain System:** Drain the water from the section of the system containing the circulator.
4. **Remove Motor Assembly:** Unbolt and remove the motor assembly from the cast iron volute. The cartridge is part of this assembly.
5. **Replace Cartridge:** Install a new, genuine Taco replacement cartridge, ensuring proper seating and

alignment.

6. **Reassemble:** Reattach the motor assembly to the volute, ensuring gaskets are properly placed and bolts are tightened evenly.
7. **Refill and Purge:** Refill the system and thoroughly purge all air before restoring power.

9. TROUBLESHOOTING

This section provides solutions to common issues you might encounter with your Taco 007-F5 circulator.

Problem	Possible Cause	Solution
Circulator does not run	No power supply	Check circuit breaker, wiring connections.
	Motor seized or damaged	Replace cartridge assembly.
Loud noise or vibration	Air in the system	Purge air from the system.
	Worn bearings or impeller	Replace cartridge assembly.
	Improper mounting	Ensure circulator is securely and properly mounted.
Reduced flow or no heat	Air in the system	Purge air from the system.
	Clogged impeller or piping	Inspect and clean impeller/system. Replace cartridge if necessary.
	System pressure too low	Check and adjust system pressure.
Water leaks from circulator	Loose flange connections	Tighten flange bolts evenly. Replace gaskets if damaged.
	Damaged cartridge or volute	Replace cartridge assembly or consult a professional for volute damage.

If troubleshooting steps do not resolve the issue, contact a qualified HVAC technician or Taco customer support.

10. WARRANTY AND SUPPORT

Taco products are manufactured to high standards and are typically covered by a manufacturer's warranty against defects in materials and workmanship. For specific warranty terms and conditions, please refer to the warranty documentation provided with your purchase or visit the official Taco website.

Customer Support:


For technical assistance, replacement parts, or warranty claims, please contact Taco customer support through their official channels. Ensure you have your product model number (007-F5) and purchase information available when contacting support.


Taco, Inc.

Cranston, R.I. USA

Contact information such as phone numbers or specific website links are subject to change. Please refer to the latest information available on the official Taco website.

Related Documents - 007-F5

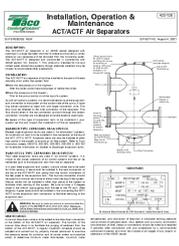	<p>Taco 0026e ECM High-Efficiency Circulator Instruction Sheet</p> <p>Instruction sheet for the Taco 0026e ECM High-Efficiency Circulator, detailing its features, applications, installation, wiring, programming, and troubleshooting. This variable speed circulator offers significant energy savings and replaces older single and 3-speed models.</p>
	<p>Taco ACT/ACTF Air Separator Installation, Operation & Maintenance Manual</p> <p>Comprehensive guide for installing, operating, and maintaining Taco ACT/ACTF Air Separators. Covers system types, maintenance procedures, safety warnings, and typical piping diagrams for hydronic heating and cooling systems.</p>
	<p>Taco SR501-4 Switching Relay Instruction Sheet and Wiring Guide</p> <p>Detailed instruction sheet for the Taco SR501-4 Switching Relay, covering features, operation, wiring diagrams, specifications, troubleshooting, and warranty information for HVAC professionals.</p>
	<p>Taco Timer and Aquastat Instruction Sheet - Installation and Operation</p> <p>Detailed instruction sheet for Taco's Timer and Aquastat combination units (models 265-1, 265-3, 563-2). Covers application, installation, electrical hook-up, analog and digital timer programming, and warranty information.</p>
	<p>Taco ZVC406-5 Zone Valve Control: Installation and Operation Manual</p> <p>Comprehensive guide for the Taco ZVC406-5 Zone Valve Control, covering installation, operation, wiring, specifications, troubleshooting, and warranty information. Learn how to optimize heating system comfort and efficiency.</p>

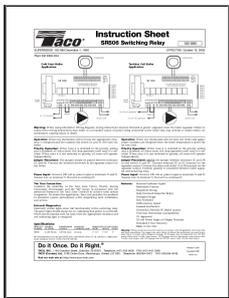

Taco SR506 Switching Relay Instruction Sheet

Instruction sheet for the Taco SR506 Switching Relay, detailing wiring diagrams, operation, priority settings, jumper placement, power input, external diagnostics, and specifications for both Cold Start Boiler and Tankless Coil Boiler applications. Includes features and manufacturer information.

Documents - Taco – 007-F5

Submittal Data Information 101-077
Model 007-IFC[®] Cartridge Circulator
 Effective July 15, 2007

Model No. 007-IFC
Model No. 007-IFC
Model No. 007-IFC
Model No. 007-IFC

Applications:
 • Hydronic Heating/Cooling
 • Domestic Water Recirculation (Domestic Use Only)
 • Radiant Floor Heating
 • Radiant Floor Cooling
 • Radiant Floor Heating/Cooling
 • Radiant Floor Heating/Cooling

Performance Data:
 The 007-IFC is designed to provide pump circulation with low energy consumption. The 007-IFC is designed to provide pump circulation with low energy consumption. The 007-IFC is designed to provide pump circulation with low energy consumption.

Dimensions:
 • Overall Height: 10.25 in. (260 mm)
 • Overall Width: 4.125 in. (105 mm)
 • Overall Depth: 4.125 in. (105 mm)

Weight:
 • Net Weight: 1.5 lb (0.68 kg)
 • Gross Weight: 2.0 lb (0.91 kg)

Material & Finish:
 • Cast Iron
 • Paint: Epoxy Enamel

Installation:
 • Mounting: Flush Mount
 • Connections: 1/2" NPT

Performance Graphs:
 The graph shows the relationship between flow rate (GPM) and head (ft) for the 007-IFC. The flow rate ranges from 0 to 10 GPM, and the head ranges from 0 to 10 ft. The graph shows that the 007-IFC can provide up to 10 GPM of flow at a head of 10 ft.

Do It Once. Do It Right.[®]
 101-077-100 (English) Taco Systems, Inc. 101-077-100 (English) Taco Systems, Inc. 101-077-100 (English) Taco Systems, Inc. 101-077-100 (English) Taco Systems, Inc.

[pdf]

79108 PROD FILE taco 007 f5 8ifc article 1408712807481 en subs fmt tc 101 077 s3 supplyhouse manuals 1346943369851 s7d2 scene7 is content Watscocom Gemaire pexuniverse docs Submittal Data Information 101-077 Model 007-IFC Cartridge Circulator Effective: June 7, 2010 JoSb ... ccessed for removal and service. Pump Dimensions Weights Model Casing in. mm in. mm **007-F5-7** IFC Cast Iron 6-1/8 156 4-1/2 114**007-F5-8** IFC Cast Iron 5-7/8 149 4-1/2 114 007-SF5 IFC S.... lang:en score:32 filesize: 252.96 K page_count: 1 document date: 2010-07-23

ideal HEATING
 NORTH AMERICA
APPLICATION GUIDE

Exalt Solo 110-155-199 & Combi 155-199

NOTICE
 This manual is applicable to all EXALT Solo 110-155-199 & Combi 155-199 units. It is not applicable to other models. If you have any questions, please contact your distributor or call 1-800-368-5848.

WARNING
 This document is intended to be used by a licensed professional. It is not intended for use by untrained personnel. If you are not a licensed professional, do not attempt to install or service this unit. If you do, you may void the warranty and cause property damage, personal injury, or death.

FOR YOUR SAFETY
 Do not touch any electrical conductors. Do not use any power in your building. In hazardous situations, you should call the fire department. If you cannot reach your gas supplier, call the fire department.

WHAT TO DO IF YOU SMELL GAS
 Do not try to light any appliance. Do not touch any electrical switch. Do not use any power in your building. In hazardous situations, you should call the fire department. If you cannot reach your gas supplier, call the fire department.

Do It Once. Do It Right.[®]
 101-077-100 (English) Taco Systems, Inc. 101-077-100 (English) Taco Systems, Inc. 101-077-100 (English) Taco Systems, Inc. 101-077-100 (English) Taco Systems, Inc.

[pdf]

User Manual Instructions Documentation Guide Application Guide Warranty APPLICATION GUIDE To maintain the safety longevity of your appliance read and follow Installation Maintenance Manual prior to installation If information in 241584 3 WEB assets ctfassets net sj902orc9wh4 1K6jtpz6naLBabBax6AZ ee9b4ba84b0b3812449724394dbb95b4 ||| APPLICATION GUIDE Exalt Solo 110-155-199 Combi 155-199 This manual is applicable to all EXALT bo ... ze Grundfos Taco Wilo 10.2 GPM 1 UPS 15-58FC 0015-MSF3 Star S 21 F 8.2 GPM 1 UPS 15-58FC **007-F5** Star S 21 F 6.8 GPM 1 UPS 15-58FC **007-F5** Star S 21 F 5.8 GPM 1 UPS 15-58FC **007-F5** ... lang:en score:32 filesize: 4.27 M page_count: 24 document date: 2025-04-11

Water Circulation Pumps & Circulators

Model 007-IFC[®] Cartridge Circulator

The redesigned 007-IFC features a larger removable Inlet/Outlet Flow Check designed to improve pump performance, simplify piping and reduce installation costs. The spring-loaded IFC opens a response in flow check to ensure protection against reverse flow and gravity flow. IFC is suitable on all 007-Circulators including Energy-Zone and Variable-Speed control models.

NSF i s 25% Lead

Taco
 SYSTEMS **TRAC-WAY**

101-077-100 (English) Taco Systems, Inc. 101-077-100 (English) Taco Systems, Inc. 101-077-100 (English) Taco Systems, Inc. 101-077-100 (English) Taco Systems, Inc.

[pdf]

Borchure Catalog taco 007 msf1 ifc brochure ecomfort manuals ||| Water Circulation Pumps Circulators Model 007-IFC Cartridge Circulator The redesigned 007-IFC featu ... ily accessed for removal and service. Pump Dimensions Weights A B Model Casing in. mm in. mm **007-F5-7** IFC Cast Iron 6-1/8 156 4-1/2 114 **007-F5-8** IFC Cast Iron 5-7/8 149 4-1/2 114 007-SF5 IFC S.... lang:en score:31 filesize: 445.27 K page_count: 2 document date: 2011-12-26




[pdf] Guide Accessories

ALPHA2 Pumps Product Guide Grundfos 99490916 1 6 HP Variable Speed Circulation Pump Cast Iron GF 15 26 Flange grundfos d546d21511cebcf35d2e7096fc3cfe8 acwholesalers manuals ||| ALPHA Pumps and accessories GRUNDFOS DATA BOOKLET Table of contents 1. Product data 55 F ALPHA2 15-55 FR/LC UP 15-10 FR UP 15-42 FR UPS15-58 FRC ALPHA 15-55 FR TACO 005-F2-3 006-F7 **007-F5-5** 008-F6-1 008-F6-3 00R-F6-1 0015-MSF3-1 005-F2-2 **007-F5** 008-F6 00R-MSF 0015-MSF3 007e 0015e ... lang:it score:29 filesize: 3.66 M page_count: 38 document date: 2019-07-09



[pdf] User Manual Instructions Documentation Guide Application Guide Warranty 5 APPLICATION GUIDE 2020 53D Exalt WHB Application Guide AB in Serial No after S or C Display Software 0 40 later assets ctfassets net sj902orc9wh4 4aXt8gZaiH3DdSdOwJQ7W8 41f22644074d2dc3edb59ae8a0daab6e ||| APPLICATION GUIDE Exalt Solo 110-155-199 Combi 155-199 This manual is applicable to all Exalt bo ... Boiler Pump Size Grundfos Taco UPS 15-58FC 0015-MSF3 Wilo Star S 21 F 8.2 GPM 1 UPS 15-58FC **007-F5** Star S 21 F 6.8 GPM 1 UPS 15-58FC **007-F5** Star S 21 F 5.8 GPM 14.3 GPM 1 1.25 UPS 1... lang:en score:28 filesize: 6.67 M page_count: 21 document date: 2022-03-10

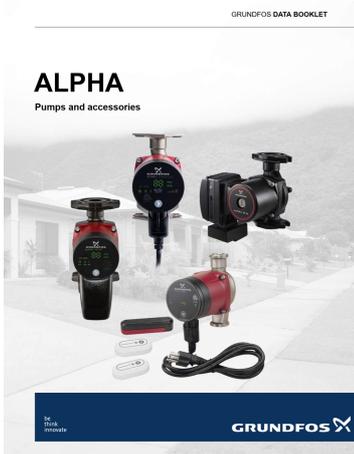


[pdf] Guide Accessories

Pumps and accessories ALPHA PRODUCT GUIDE f hubspotusercontent40 net hubfs 20924342 GRUNDFOS GUIDES ||| ALPHA Pumps and accessories GRUNDFOS DATA BOOKLET Table of contents 1. Product data 55 F ALPHA2 15-55 FR/LC UP 15-10 FR UP 15-42 FR UPS15-58 FRC ALPHA 15-55 FR TACO 005-F2-3 006-F7 **007-F5-5** 008-F6-1 008-F6-3 00R-F6-1 0015-MSF3-1 005-F2-2 **007-F5** 008-F6 00R-MSF 0015-MSF3 007e 0015e ... lang:it score:28 filesize: 1.51 M page_count: 0 document date: 0000-00-00




[pdf] User Manual Instructions Documentation Guide Application Guide Warranty Application Guide 170229 Instinct SoloandCombi firstsupply UserFiles Documents inRiver Original ||| Application Guide SOLO 110-155-199 COMBI 155-199 WARNING This document is intended to be used by ... os Taco Wilo 20F 10.2 GPM 1 UPS 15-58FC 0015-MSF3 Star S 21 F 25F 8.2 GPM 1 UPS 15-58FC **007-F5** Star S 21 F 30F 6.8 GPM 1 UPS 15-58FC **007-F5** Star S 21 F 35F 5.8 GPM 1 UPS 15-58F...

lang:en score:27 filesize: 23.2 M page_count: 23 document date: 2020-05-19

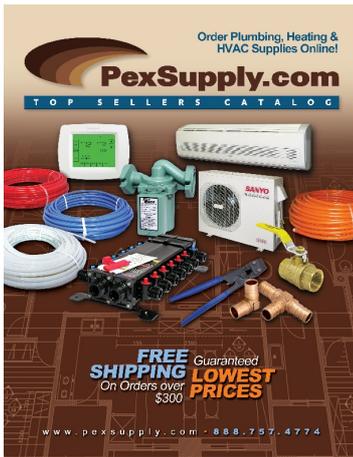

[pdf] PexSupply.com Catalog: Plumbing, Heating & HVAC Supplies Comprehensive catalog from PexSupply.com featuring a wide range of plumbing, heating, and HVAC products, including PEX tubing, boilers, water heaters, thermostats, circulator pumps, and more. Find specifications, SKUs, and ordering information.

lang:en score:27 filesize: 9.6 M page_count: 20 document date: 2013-05-06

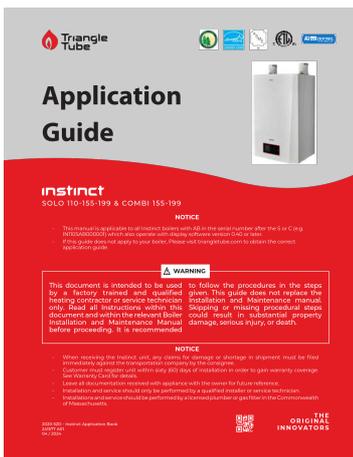

[pdf] User Manual Instructions Documentation Guide Application Guide Warranty Application Guide 241577 1 lowres assets ctfassets net sj902orc9wh4 3Q8SEjpdCafw0EqLpIPIy 4e80236ecb4211c8df2094c361dd8a86 ||| Application Guide SOLO 110-155-199 COMBI 155-199 NOTICE This manual is applicable to all Instinc ... ze Grundfos Taco Wilo 10.2 GPM 1 UPS 15-58FC 0015-MSF3 Star S 21 F 8.2 GPM 1 UPS 15-58FC **007-F5** Star S 21 F 6.8 GPM 1 UPS 15-58FC **007-F5** Star S 21 F 5.8 GPM 1 UPS 15-58FC **007-F5** ...

lang:en score:27 filesize: 8.44 M page_count: 28 document date: 2024-10-08



Application Guide

instinct
SOLO 110-155-199 & COMBI 155-199

NOTICE

- The manufacturer warrants the equipment with AHR as shown in the original catalog after the date of July 1st 2014 (101400001).
- The guide can be used in any other case and the manufacturer is not responsible for any damage or injury.

WARNING

This document is intended to be used by a factory trained and qualified heating contractor or service technician only. Failure to follow instructions within this document and within the relevant factor installation and maintenance manual before proceeding, it is recommended to follow the procedures in the steps given. Skipping factory trained and qualified heating contractor or service technician could result in or cause reduction in life of the equipment, substantial property damage, serious injury or death.

NOTICE

- When working the boiler and any claims for damage or changes in shipment must be filed immediately against the manufacturer's policy.
- Customer must register and within 90 days of installation in order to gain warranty coverage. See Warranty Card for more.
- Always disconnect power to the equipment before the repair or maintenance.
- Installation and service should only be performed by a qualified installer or service technician.
- Installations and service should be performed in a licensed location or get the local Commission or other authority.

© 2013 Triangle Tube Boiler
101400001

THE ORIGINAL INNOVATORS

[\[pdf\]](#) User Manual Instructions Documentation Guide Application Guide Warranty 2020 52 instinct application guide A trianglertube getmedia abcc3a28 ca96 4858 88e9 183ce5358a51 ext Application Guide SOLO 110-155-199 COMBI 155-199 NOTICE This manual is applicable to all Instinc ... os Taco Wilo 20F 10.2 GPM 1 UPS 15-58FC 0015-MSF3 Star S 21 F 25F 8.2 GPM 1 UPS 15-58FC **007-F5** Star S 21 F 30F 6.8 GPM 1 UPS 15-58FC **007-F5** Star S 21 F 35F 5.8 GPM 1 UPS 15-58F...
lang:en score:26 filesize: 2.93 M page_count: 23 document date: 2021-03-16

Water Circulation Pumps & Circulators

Model 007 Cartridge Circulator

The Taco 007 Cartridge Circulator is the most popular hydronic circulator sold today. With its field convertible cartridge design, the compact 007 provides quiet efficient operation and unmatched reliability. The self-aligning, maintenance free design and flow characteristics make it the ideal hydronic circulator for a wide range of applications.



Stainless Steel

UL LISTED NSF 311001 Class 1

Water Treatment Compliant

Taco Drytek brass works

[\[pdf\]](#) Datasheet Dimension Guide Catalog
taco 007 f5 article 1408712807568 en datasheet fmt tc 101 029 br s7d2 scene7 80 is content Watscocom Gemaire pexuniverse docs
Water Circulation Pumps Circulators Model 007 Cartridge Circulator The Taco 007 Cartridge Circulato ... eplacing the entire unit. Ideal for a wide range of applications. Pump Dimensions Weights Models **007-F5 007-F5-5 007-SF5** Casing Cast Iron Cast Iron St. Steel Flange A Type* in. mm S 6-3/8 162 ...
lang:en score:26 filesize: 906.53 K page_count: 2 document date: 2013-03-25

Instruction Sheet

007-IFC 3 Speed "Zoning Pump" Cartridge Circulator with Integral Flow Check

SUPERSEDES: November 1, 2007
Plant ID# 001-3909
EFFECTIVE: May 1, 2010

APPLICATION:

- Maximum operating pressure is 125 psi (862 kPa)
- Maximum water temperature not to exceed nameplate rating.
- Cast iron circulators are best used for closed loop systems only.
- Taco Cartridge circulator pumps are for indoor use only (sanitary equipment is intended).

WARNING: Do not use in swimming pool or spa areas; pump has not been investigated for this application.

CAUTION: In the event the retaining screws have been pulled out of the housing, DO NOT replace them. Use of any other screw may affect the static windings, creating a risk of electrical shock.

CAUTION: When installing electrical connections, do not apply mechanical loads to the capacitor box, otherwise, retaining screws may be pulled out of the housing, making circulator inoperable.

CAUTION: 1. The addition of petroleum based fluids or certain chemical additives to systems utilizing IMCO equipment voids the warranty.
2. Use supply wire suitable for 50°C - ATTENTION: Employer des fils d'alimentation adaptés pour 50°C.

WARNING: To avoid electrical shock, disconnect the power supply to the circulator and the main electrical unit.

INSTALLATION:

- Location - Install the "007" circulator on the supply side of the boiler "bypassing away" from the expansion tank as shown in Figure 1. This is the best pump location to obtain optimal performance and maintain positive system pressure. An alternate location on the boiler return line is shown in Figure 2.
- Mounting position - Mount circulator with the motor in the horizontal position. It may be mounted vertically with the motor up, provided that the system cold fill pressure is at least 20 psi (1.38 kPa) to ensure proper air purging and prevent flooding.
- Flowing body - Body has an arrow on the front that indicates direction of flow. To water body, remove the four body bolts, clear sand and replace bolts. Make sure that the direction flow is 90° located underneath the circulator. One gasket seal must be installed in the correct position. An arrow will be installed.
- Electrical connections - Observe all applicable codes when connecting to power supply. This motor is non-reversible, and does not require electrical control protection. If the control wire from the capacitor box can be attached to either control wire from the power supply. There is a "hot" or "ground" wire leading from the capacitor box. Electrical insulation must be used to attach the wire to the non-grounded power supply wire and the yellow wire to the back (hot) power supply wire. The pump cannot run backwards.

SPEED	Flow (GPM)
1	10.2 GPM
2	13.8 GPM
3	17.4 GPM

CAUTION: Installations at higher elevations over 5000 feet must have higher fill pressure of 30 psi minimum to prevent pump cavitation and flooding. Premature failure may result. Adjust expansion tank pressure to equal fill pressure. A larger size expansion tank may be required.

[\[pdf\]](#) Instructions Warranty
PageW PLot with IFC joe c Instruction Sheet 102 339 follow these instructions to ensure proper service and operation of the circulator REMOVAL 1 Disconnect power related equipment 2 Shut off water supply Isolate using valves or drain system if are not available 3 Allow cool prevent scalding Loosen flange bolts
taco 007 f5 8ifc article 1408712807481 en ii fmt s7d2 scene7 is content Watscocom Gemaire
Instruction Sheet 102-339 007-IFC 3 Speed Zoning Pump Cartridge Circulator with Integral Flow Check SUPERSEDES: November 1, 2007 Plant ID# 001-3909
EFFECTIVE: May 1, 2010 APPLICATION: Maximum operating pressure is 125 psi 862 kPa . Maximum water temperature not to exceed nameplate rating. ...
lang:en score:26 filesize: 176 K page_count: 4 document date: 2010-06-02




[pdf] Dimension Guide Catalog

79103 PROD FILE s3 supplyhouse manuals 1346941865585

Water Circulation Pumps Circulators Model 007 Cartridge Circulator The Taco 007 Cartridge Circulato ... Weights A B C D F G Ship Wt. Model Casing in. mm in. mm in. mm in. mm in. mm in. mm lbs. Kg **007-F5** Cast Iron 6-3/8 162 4-1/2 114 3-3/16 81 2-15/16 75 4-3/4 121 6-3/8 162 8.0 3.6 **007-F5-5** Cast...

lang:en score:25 filesize: 463.74 K page_count: 2 document date: 2011-06-01

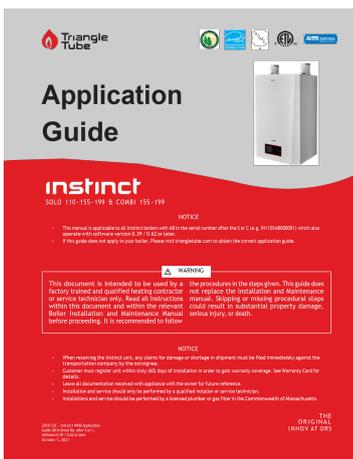


[pdf] User Manual Instructions Documentation Guide Application Guide Warranty

2 Application Guide Triangle Tube 2020 52C Instinct WHB AB in Serial No after 35°F 5.8 GPM 1 UPS 15 58FC 007 F5 Star S 21 F Solo 155 143 MBH 20°F or C Software 0 390 62 later cdn trianglertube 2021 10 05163332 39 Wall |||

Application Guide SOLO 110 -155 -199 COMBI 155 -199 NOTICE This manual is applicable to all Inst ... os Taco Wilo 20F 10.2 GPM 1 UPS 15-58FC 0015-MSF3 Star S 21 F 25F 8.2 GPM 1 UPS 15-58FC **007-F5** Star S 21 F 30F 6.8 GPM 1 UPS 15-58FC **007-F5** Star S 21 F 35F 5.8 GPM 1 UPS 15-58F...

lang:en score:25 filesize: 2.81 M page_count: 25 document date: 2021-10-05

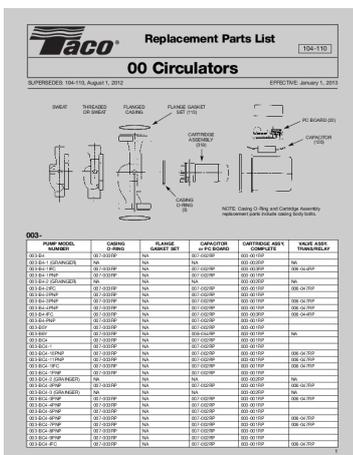

[pdf] Parts List

104 110 Taco 00 Series Circulator Replacement Part List 006 036RP Cartridge Assembly taco series circulator replacement part list ecomfort manuals |||

Replacement Parts List 104-110 00 Circulators SUPERSEDES: 104-110, August 1, 2012 EFFECTIVE: Janu ... P NA 0010-025RP NA NA NA NA NA NA NA NA NA 9 007- Continued PUMP MODEL NUMBER 007-F4-8 007-F4Y **007-F5 007-F5-10 007-F5-10IFC 007-F5-11IFC 007-F5-12 007-F5-12IFC 007-F5-13 007-F5-13IFC 007-F5-14 0...**

lang:de score:25 filesize: 231.95 K page_count: 24 document date: 2012-12-31

Taco
Comfort of Solutions

Submittal Data Information 101-029
Model 007 Cartridge Circulator

Effective: June 10, 2015 Expires: March 25, 2017

Job: _____ Engineer: _____ Consultant: _____

FRINGE	MODEL NO.	MPF DIA.	SHIP WGT.	HEADPT.	FLG.	ELEC. CHART
--------	-----------	----------	-----------	---------	------	-------------

Features

- Removable integral float check
- Direct Drive Low Noise Construction
- Energy Efficient Design
- Self-Adjusting
- No Mechanical Seal
- Universal Flange to Flange Dimensions
- Cast Iron or Stainless Steel Construction

Applications

The 007 Cartridge Circulator (CC) is a single shaft, non-reciprocating, non-rotating, non-impeller circulator pump. It is designed to operate in residential, light commercial, medium commercial, and industrial applications. It is suitable for use in hydronic heating and cooling systems. Available in Cast Iron or Stainless Steel construction and is suitable for use in residential, light commercial, medium commercial, and industrial applications.

Key Features & Benefits

Feature	Benefit
Removable integral float check	Eliminates need for separate float check
Direct Drive Low Noise Construction	Reduces noise levels
Energy Efficient Design	Reduces energy consumption
Self-Adjusting	Eliminates need for manual adjustment
No Mechanical Seal	Eliminates need for seal replacement
Universal Flange to Flange Dimensions	Increases compatibility
Cast Iron or Stainless Steel Construction	Increases durability

Materials of Construction

Casing Material: Cast Iron or Stainless Steel
 Shaft Material: Cast Iron or Stainless Steel
 Impeller: Cast Iron or Stainless Steel
 Seal: Cast Iron or Stainless Steel
 Flange: Cast Iron or Stainless Steel
 Motor: Cast Iron or Stainless Steel

Model Nomenclature

007 - Model Number
 IFC - Flange Orientation Type
 S - Stainless Steel Flanged

Performance Data

Flow Range: 1.0 - 10.0 gpm
 Head Range: 1 - 10 ft
 Max. Fluid Temperature: 200°F (77°C)
 Max. Working Pressure: 150 psi
 Connection Size: 1/2" to 2" (12.5 to 50.8 mm)

Performance Graph

Certifications & Listings

UL LISTED FOR INDOOR USE ONLY
 NSF Certified for Backflow Prevention
 Low Lead Compliant

Taco
Comfort of Solutions

TACO Group, Inc. 1900 Riverside Drive, Minneapolis, MN 55416
 TACO Canada, Ltd. 1000 Lakeshore Blvd. East, Toronto, Ontario M5G 1S7
 TACO Mexico, S.A. de C.V. Carretera a Toluca, km. 10.5, Toluca, Mexico

[Taco 007 Cartridge Circulator Submittal Data Information](#)

Technical submittal data for the Taco 007 Cartridge Circulator, detailing features, materials, performance, electrical data, dimensions, and certifications. Includes information for Cast Iron and Stainless Steel models.

lang:en score:25 filesize: 275.5 K page_count: 1 document date: 2015-07-02

Water Circulation Pumps & Circulators

Model 007-IFC Cartridge Circulator

The 007-IFC features a removable integral float check designed to improve pump performance, simplify piping and reduce installation costs. The spring loaded IFC replaces a separate in-line float check to ensure protection against reverse flow and gravity flow.

Stainless Steel

Taco
Do your best work.

UL LISTED FOR INDOOR USE ONLY
 NSF Certified for Backflow Prevention
 Low Lead Compliant

Circle 10 on Reader Service Card

[\[pdf\] Datasheet Catalog](#)

taco 007 f5 8ifc article 1408712807481 en datasheet fmt 100 6 9 tc 101 077 br s7d2 scene7 is content

Watscom Gemaire hvac FileLibrary pexuniverse docs

Water Circulation Pumps Circulators Model 007-IFC Cartridge Circulator The 007-IFC features a remov ... e easily accessed for removal and service. Pump Dimensions Weights Model Casing Flange Type* **007-F5-7** IFC Cast Iron S **007-F5-8** IFC Cast Iron R 007-SF5-7 IFC S. Steel S A in. mm 6-1/8 156 5-7/8...

lang:en score:24 filesize: 838.76 K page_count: 2 document date: 2013-03-25

Taco
Comfort of Solutions

Submittal Data Information 101-029
Model 007 Cartridge Circulators

Effective: June 10, 2015 Expires: July 9, 2017

Job: _____ Engineer: _____ Consultant: _____

FRINGE	MODEL NO.	MPF DIA.	SHIP WGT.	HEADPT.	FLG.	ELEC. CHART
--------	-----------	----------	-----------	---------	------	-------------

Features

- Removable integral float check
- Direct Drive Low Noise Construction
- Energy Efficient Design
- Self-Adjusting
- No Mechanical Seal
- Universal Flange to Flange Dimensions
- Cast Iron or Stainless Steel Construction

Applications

The 007 Cartridge Circulator (CC) is a single shaft, non-reciprocating, non-rotating, non-impeller circulator pump. It is designed to operate in residential, light commercial, medium commercial, and industrial applications. It is suitable for use in hydronic heating and cooling systems. Available in Cast Iron or Stainless Steel construction and is suitable for use in residential, light commercial, medium commercial, and industrial applications.

Key Features & Benefits

Feature	Benefit
Removable integral float check	Eliminates need for separate float check
Direct Drive Low Noise Construction	Reduces noise levels
Energy Efficient Design	Reduces energy consumption
Self-Adjusting	Eliminates need for manual adjustment
No Mechanical Seal	Eliminates need for seal replacement
Universal Flange to Flange Dimensions	Increases compatibility
Cast Iron or Stainless Steel Construction	Increases durability

Materials of Construction

Casing Material: Cast Iron or Stainless Steel
 Shaft Material: Cast Iron or Stainless Steel
 Impeller: Cast Iron or Stainless Steel
 Seal: Cast Iron or Stainless Steel
 Flange: Cast Iron or Stainless Steel
 Motor: Cast Iron or Stainless Steel

Model Nomenclature

007 - Model Number
 IFC - Flange Orientation Type
 S - Stainless Steel Flanged

Performance Data

Flow Range: 1.0 - 10.0 gpm
 Head Range: 1 - 10 ft
 Max. Fluid Temperature: 200°F (77°C)
 Max. Working Pressure: 150 psi
 Connection Size: 1/2" to 2" (12.5 to 50.8 mm)

Performance Graph

Certifications & Listings

UL LISTED FOR INDOOR USE ONLY
 NSF Certified for Backflow Prevention
 Low Lead Compliant

Taco
Comfort of Solutions

TACO Group, Inc. 1900 Riverside Drive, Minneapolis, MN 55416
 TACO Canada, Ltd. 1000 Lakeshore Blvd. East, Toronto, Ontario M5G 1S7
 TACO Mexico, S.A. de C.V. Carretera a Toluca, km. 10.5, Toluca, Mexico

[\[pdf\]](#)

79104 PROD FILE tc 101 029 s3 supplyhouse manuals 1346941873830 pexuniverse docs

Submittal Data Information Model 007 Cartridge Circulators 101-029

ESffuecbtimvei:Jtuanel 6D, a20 ... Weights A B C D F G Ship Wt. Model Casing in.

mm in. mm in. mm in. mm in. mm in. mm lbs. Kg **007-F5** Cast Iron 6-3/8 162 4-1/2 114 3-3/16 81 2-15/16 75 4-3/4 121 6-3/8 162 8.0 3.6 **007-F5-5** Cast...

lang:en score:24 filesize: 233.71 K page_count: 1 document date: 2011-06-06

Water Circulation Pumps & Circulators

Model 007-IFC Cartridge Circulator

The 007-IFC features a removable integral flow check. Designed to improve energy performance, simplify piping and reduce installation costs. The spring loaded FIC replaces a separate in-line flow check to minimize pressure drops against reverse flow and gravity flow.



Stainless Steel



Circle 100 on Reader Service Card

Circle 101 on Reader Service Card

[\[pdf\]](#) Catalog

Taco Comfort Solutions 00 Series 1 25 HP Cast Iron Cartridge Circulator with Integral Flow Check 007 F5 7IFC The Home Depot 06c98383 3b64 4b59 85ec 280d9a076e3b images thdstatic catalog Images 06 ||| Water Circulation Pumps Circulators Model 007-IFC Cartridge Circulator The 007-IFC features a remo ... e easily accessed for removal and service. Pump Dimensions Weights Model Casing Flange Type* **007-F5-7** IFC Cast Iron S **007-F5-8** IFC Cast Iron R 007-SF5-7 IFC S. Steel S A in. mm 6-1/8 156 5-7/8...

lang:en score:24 filesize: 814.26 K page_count: 2 document date: 2023-01-30

Taco Replacement Parts List

00 Circulators

104-110

SUPERSEDES: 104-110, March 28, 2012 EFFECTIVE: August 1, 2012

NOTE: Capabilities, flow and voltage information information can include varying flow rates.

PUMP MODEL NUMBER	ORING	FLANGE GASKET SET (F5)	CAPACITOR (007)	VALUE ASSEY (007)
007-IFC	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-1	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-2	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-3	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-4	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-5	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-6	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-7	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-8	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-9	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-10	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-11	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-12	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-13	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-14	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-15	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-16	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-17	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-18	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-19	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-20	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-21	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-22	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-23	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-24	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-25	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-26	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-27	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-28	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-29	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-30	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-31	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-32	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-33	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-34	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-35	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-36	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-37	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-38	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-39	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-40	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-41	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-42	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-43	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-44	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-45	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-46	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-47	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-48	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-49	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL
007-IFC-50	007-IFC-OR	007-IFC-FG	007-IFC-CAP	007-IFC-VAL

[Taco 00 Circulator Replacement Parts List | Model Numbers & Specs](#)

Find detailed replacement part numbers for Taco 00 Circulator pumps, covering O-rings, gaskets, capacitors, and more. Essential for servicing and maintaining Taco HVAC circulator systems.

lang:de score:23 filesize: 230.78 K page_count: 24 document date: 2012-08-14

ARMSTRONG

ASTRO 2 | THREE SPEED CIRCULATORS | CROSS REFERENCE CHART

File No: 6010.22 Date: December 30, 2011

MODEL	ARMSTRONG PART NUMBER	ORING	FLANGE GASKET SET (F5)	CAPACITOR (007)	VALUE ASSEY (007)
ASTRO 280CI	110223-20A	2	—	—	007-IFC-VAL
ASTRO 280CI	110223-20B	2	—	—	007-IFC-VAL
ASTRO 280CI	110223-20C	2	—	—	007-IFC-VAL
ASTRO 280CI	110223-20D	2	—	—	007-IFC-VAL
ASTRO 280CI	110223-20E	2	—	—	007-IFC-VAL
ASTRO 280CI	110223-20F	2	—	—	007-IFC-VAL
ASTRO 280CI	110223-20G	2	—	—	007-IFC-VAL
ASTRO 280CI	110223-20H	2	—	—	007-IFC-VAL
ASTRO 280CI	110223-20I	2	—	—	007-IFC-VAL
ASTRO 280CI	110223-20J	2	—	—	007-IFC-VAL
ASTRO 280CI	110223-20K	2	—	—	007-IFC-VAL
ASTRO 280CI	110223-20L	2	—	—	007-IFC-VAL
ASTRO 280CI	110223-20M	2	—	—	007-IFC-VAL
ASTRO 280CI	110223-20N	2	—	—	007-IFC-VAL
ASTRO 280CI	110223-20O	2	—	—	007-IFC-VAL
ASTRO 280CI	110223-20P	2	—	—	007-IFC-VAL
ASTRO 280CI	110223-20Q	2	—	—	007-IFC-VAL
ASTRO 280CI	110223-20R	2	—	—	007-IFC-VAL
ASTRO 280CI	110223-20S	2	—	—	007-IFC-VAL
ASTRO 280CI	110223-20T	2	—	—	007-IFC-VAL
ASTRO 280CI	110223-20U	2	—	—	007-IFC-VAL
ASTRO 280CI	110223-20V	2	—	—	007-IFC-VAL
ASTRO 280CI	110223-20W	2	—	—	007-IFC-VAL
ASTRO 280CI	110223-20X	2	—	—	007-IFC-VAL
ASTRO 280CI	110223-20Y	2	—	—	007-IFC-VAL
ASTRO 280CI	110223-20Z	2	—	—	007-IFC-VAL

[\[pdf\]](#)

Astro2 280CI Cross Reference Chart 280 manuals totalhomesupply ||| A STRO 2 THREE SPEED CIRCULATORS CROSS REFERENCE CHART File no: 6010.22 Date: december 30, 2011 ... - - star 17x2 taco -- 0010-msf1-ifc s2, 0010-f3 - ifc 0010-msf1-ifc s3, 110 005-f2, 005-f2-2-ifc **007-f5**-7-ifc, 008-f6 -- 005-f2-3-ifc, 006-f4, 006-f7-ifc **007-f5**-5/-8-ifc, 008-f6-i-ifc, 00r/0015-f6...


lang:it score:23 filesize: 179.4 K page_count: 3 document date: 2022-05-19



[Armstrong Astro 2 3-Speed Circulator Models Technical Overview](#)

Technical overview and specifications for Armstrong Astro 2 series 3-speed circulator pumps, including motor data, materials, dimensions, weights, cross-reference tables, and performance curves.

lang:en score:23 filesize: 735.68 K page_count: 8 document date: 2022-02-17

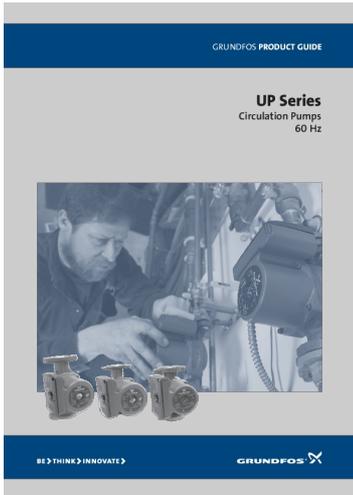


[\[pdf\] Guide Borchure](#)

UP Series Product Guide 5 06 qxd 24045 Brochure Grundfos UP26 96BF GRFUP2696BF 1 southernpipe ASSETS DOCUMENTS CMS EN |||

GRUNDFOS PRODUCT GUIDE UP Series Circulation Pumps 60 Hz CONTENTS
 Mission 18BUC5 4-3/8 UP15-18BUC7 1/2 Swt 6 1/2 3/4 Swt 7 3/4
 Closed Systems: Cast Iron Body Pumps 005-F2 **007-F5 007-F5** opt 008-F6 FIng-R
 FIng-R Flange FIng-R 6-3/8 6-3/8 6-3/8 6-3/8 UPS15-58FR SPD2 UPS1...

lang:en score:23 filesize: 2.59 M page_count: 63 document date: 2015-01-09

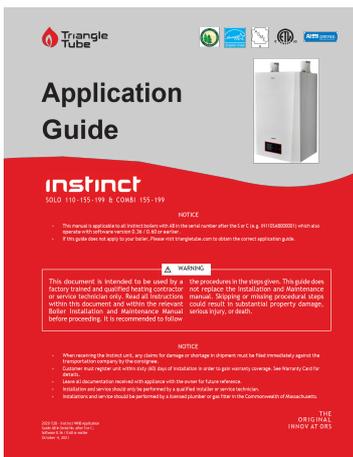

[\[pdf\] User Manual Instructions Documentation Guide Application Guide Warranty](#)


2 Instinct WHB Application Guide AB in Serial No after S or C Software 0 36 60 earlier Solo Wall Triangle Tube 2020 52B CSoftware 360 cdn triangetube 2021 10 04210123 |||

Application Guide SOLO 110 -155 -199 COMBI 155 -199 NOTICE This manual is applicable to all Inst ... os Taco Wilo 20F 10.2 GPM 1 UPS 15-58FC 0015-MSF3 Star S 21 F 25F 8.2 GPM 1 UPS 15-58FC **007-F5** Star S 21 F 30F 6.8 GPM 1 UPS 15-58FC **007-F5** Star S 21 F 35F 5.8 GPM 1 UPS 15-58F...

lang:en score:22 filesize: 2.8 M page_count: 25 document date: 2021-10-04

[pdf] Guide Borchure


UP SeriesGRFUP2696SF Brochuresouthernpipe ASSETS DOCUMENTS CMS EN GRFUP2696SF Brochure srsltid AfmBOopigVrkkgobQQco4FPk6hvhfHTV8FGNk3f6DQC6S9QJfgggw3H7 SeriesUP Seriessouthernpipe AfmBOopigVrkkgobQQco4FPk6hvhfHTV8FGNk3f6DQC6S9QJfgggw3H7southernpipe AfmBOop1t51T3XYAKGsmwVzMXf7sLCzO2QccysL80kR24mCDoExsIrGB AfmBOop1t51T3XYAKGsmwVzMXf7sLCzO2QccysL80kR24mCDoExsIrGBsouthernpipe AfmBOorOdZB76ul3TMvAK0nZeYMTe2QOn5RFLRGV1M9HEqIWva7hxJE0 Seriesv1southernpipe AfmBOorOdZB76ul3TMvAK0nZeYMTe2QOn5RFLRGV1M9HEqIWva7hxJE0southernpipe AfmBOopH01J5w5lnF9npQDhn3D61KQC3qFaF3 xolkBg8gvanvvg 0mT AfmBOoqdTK8FK yNPmoAEdgi7pYpUvCoHbkybl675TfC7OS4N2KKBI2southernpipe ||| ||| GRUNDFOS PRODUCT GUIDE UP Series Circulation Pumps 60 Hz CONTENTS Mission page 3 General data TACO CROSS REFERENCE . page 4 B G CROSS REFERENCE . page 5 ARMSTRONG CROSS REFERENCE page 6 LAING CROSS REFERENCE page 6 UP10-16 CROSS REFERENCE p ||| GRUNDFOS PRODUCT GUIDE UP Series Circulation Pumps 60 Hz CONTENTS Mission page 3 General data TACO CROSS REFERENCE . page 4 B G CROSS REFERENCE . page 5 ARMSTRONG CROSS REFERENCE page 6 LAING CROSS REFERENCE page 6 UP10-16 CROSS REFERENCE p ||| GRUNDFOS PRODUCT GUIDE UP Series Circulation Pumps 60 Hz CONTENTS Mission page 3 General data TACO CROSS REFERENCE . page 4 B G CROSS REFERENCE . page 5 ARMSTRONG CROSS REFERENCE page 6 LAING CROSS REFERENCE page 6 UP10-16 CROSS REFERENCE p ||| GRUNDFOS PRODUCT GUIDE UP Series Circulation Pumps 60 Hz CONTENTS Mission page 3 General data TACO CROSS REFERENCE . page 4 B G CROSS REFERENCE . page 5 ARMSTRONG CROSS REFERENCE page 6 LAING CROSS REFERENCE page 6 UP10-16 CROSS REFERENCE p GRUNDFOS PRODUCT GUIDE UP Series Circulation Pumps 60 Hz CONTENTS Mission 18BUC5 4-3/8 UP15-18BUC7 1/2 Swt 6 1/2 3/4 Swt 7 3/4 Closed Systems: Cast Iron Body Pumps 005-F2 007-F5 007-F5 opt 008-F6 009-F5 0011-F4 0012-F4 0012-F4-1 0013-F3 0014-F1 FIng-R FIng-R Flange FIng... lang:en score:22 filesize: 3.66 M page_count: 63 document date: 2020-03-11

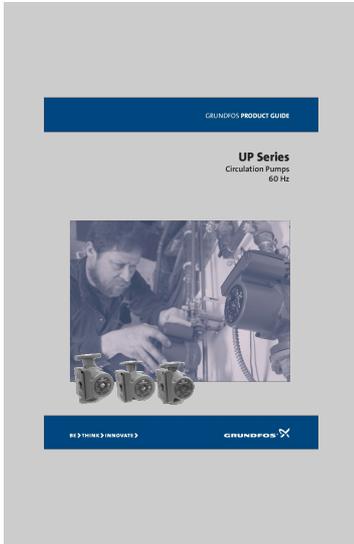

[pdf] Specifications Catalog

Query USE TYPE SPECIFICATION PRODUCT ID 3099108 3108063 79107 PROD FILE api ferguson dar step service s3 supplyhouse manuals 1346943362175 Water Circulation Pumps Circulators Model 007-IFC Cartridge Circulator The redesigned 007-IFC featu ... ily accessed for removal and service. Pump Dimensions Weights A B Model Casing in. mm in. mm 007-F5-7 IFC Cast Iron 6-1/8 156 4-1/2 114 007-F5-8 IFC Cast Iron 5-7/8 149 4-1/2 114 007-SF5 IFC S.... lang:en score:22 filesize: 449.54 K page_count: 2 document date: 2010-07-22




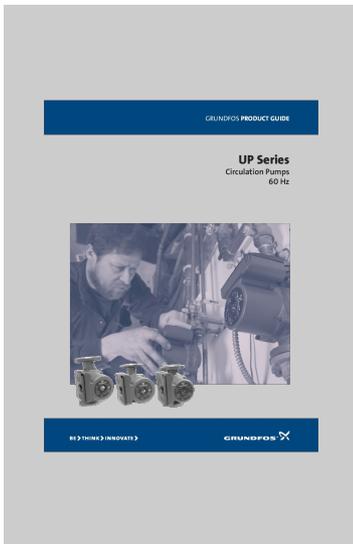

[pdf] Specifications Guide


UP Series Product Guide 5 06 qxd 24045 SupplyHouse Circulation Pumps 60 Hz Ferguson ntsupply Quick Reference Bronze and Stainless Open Systems page 11 Cast Iron Closed 12 Type keys GRUNDFOS PRODUCT GUIDE 2006 1 18 PM Page L PG 001 Query USE TYPE SPECIFICATION ID 190606 files products api ferguson dar step service

GRUNDFOS PRODUCT GUIDE UP Series Circulation Pumps 60 Hz CONTENTS Mission 18BUC5 4-3/8 UP15-18BUC7 1/2 Swt 6 1/2 3/4 Swt 7 3/4 Closed Systems: Cast Iron Body Pumps 005-F2 **007-F5 007-F5** opt 008-F6 009-F5 0011-F4 0012-F4 0012-F4-1 0013-F3 Fling-R Fling-R Flange Fling-R Flang... lang:en score:22 filesize: 3.67 M page_count: 63 document date: 2006-05-11

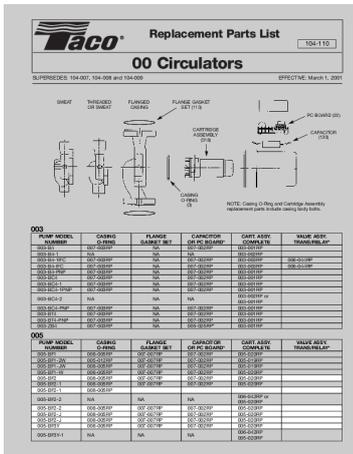

[pdf] Parts List


104 110 Graphic Images Inc 40830 PROD FILE s3 supplyhouse manuals 1288019151045 Replacement Parts List 104-110 00 Circulators SUPERSEDES: 104-007, 104-008 and 104-009 EFFECTIVE: ... 3-1W 007-F3-3W 007-F3-4 007-F3A 007-F3R 007-F3-W 007-F4 007-F4-2 007-F4-3 007-F4-7 007-F4-8 007-F4Y **007-F5 007-F5-10 007-F5-5 007-F5-8 007-F5-9** 007-F6A 007-F6Y 007-HBF1A-JA 007-HBF1A-JC 007-S22 007-S2... lang:en score:21 filesize: 101.83 K page_count: 8 document date: 2006-03-29

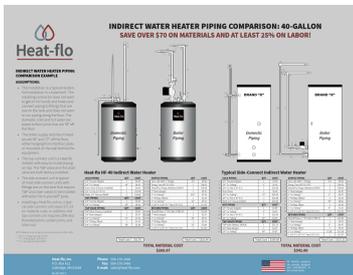

[pdf] Installation Guide Guide


40gal 80gal piping comparison heat flo documents 40 80 Gal Piping Comparison 3 Hole 8 5x11 s Buffer Tank Sizing Guide CANADA indirect water heater gallon Heat Flo Indirect GALLON INDIRECT WATER HEATER PIPING COMPARISON EXAMPLE ASSUMPTIONS The installation is a typical residential in basement 5 4 14 13 12 76 installing contractor does not BRAND X 8 installation Water Heaters Storage Tanks and Hydronic Wwww Radiant Floor Heating Navien |||

INDIRECT WATER HEATER PIPING COMPARISON: 40-GALLON SAVE OVER 70% ON MATERIALS AND AT LEAST 25% ON LABOR ... Cu Tubing** QTY COST SUPPLY PIPING 1 2.69 1 Taco 110-252F 1 Flange 34 4.82 2 Pump, Taco **007-F5-71FC** 1 0.00 3 Shutoff w/ Purge, Webstone 50414 1 12.98 4 1 Male Adapter 1 14.60 ... lang:en score:21 filesize: 607.01 K page_count: 2 document date: 2020-10-20

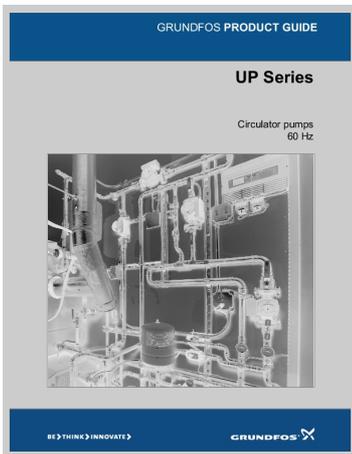


[pdf] Guide Accessories

C Documents and Settings Tom 5 DZMQBM5H L UP PG 001 1 GRUNDFOS PRODUCT GUIDE Cross reference Series 7 Bell Gossett * B G pump information taken from literature on website August 2002 Grundfos provides no guarantee as to the accuracy of competitor listed herein Circulation Pump Technical Guide documents alpinehomeair product 80 related GRUNDFOS PRODUCT GUIDE UP Series Circulator pumps 60 Hz Contents Mission Cross-reference Grundfos ... R 44 FIng-R 6 1/2 6 1/2 005-F2 UPS 15-58FR 47 FIng-R 6 1/2 UPS 15-42FR 44 FIng-R 6 1/2 **007-F5** UP 15-42FR 42 FIng-R 6 1/2 UPS 15-58F - Flange 6 1/2 UPS 15-42F 44 Flange 6 1/2 ... lang:en score:21 filesize: 6.86 M page_count: 76 document date: 2008-11-19

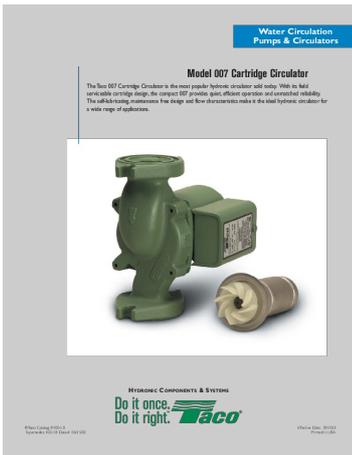


[pdf] Dimension Guide Catalog

Sht007 Reprint Taco 007 cat page pop7 iaqsource taco hvac 80 FileLibrary emersonswan ckfinder userfiles files Water Circulation Pumps Circulators Model 007 Cartridge Circulator The Taco 007 Cartridge Circulat ... Weights A B C D F G Ship Wt. Model Casing in. mm in. mm in. mm in. mm in. mm lbs. Kg **007-F5** Cast Iron 6-1/8 156 4-1/2 114 3-3/16 81 2-15/16 75 4-3/4 121 6-3/8 162 8.0 3.6 007-BF5 Bronze... lang:en score:21 filesize: 123.09 K page_count: 2 document date: 2003-08-29

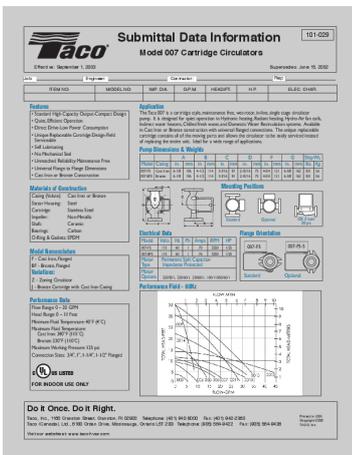


[pdf] Datasheet Dimension Guide

Taco 007 data sheet iaqsource Submittal Data Information Model 007 Cartridge Circulators 101-029 SuEfbfemctiivtet:aSlepDteamtbae ... Weights A B C D F G Ship Wt. Model Casing in. mm in. mm in. mm in. mm in. mm lbs. Kg **007-F5** Cast Iron 6-1/8 156 4-1/2 114 3-3/16 81 2-15/16 75 4-3/4 121 6-3/8 162 8.0 3.6 007-BF5 Bronze... lang:en score:20 filesize: 164.22 K page_count: 1 document date: 2005-09-23

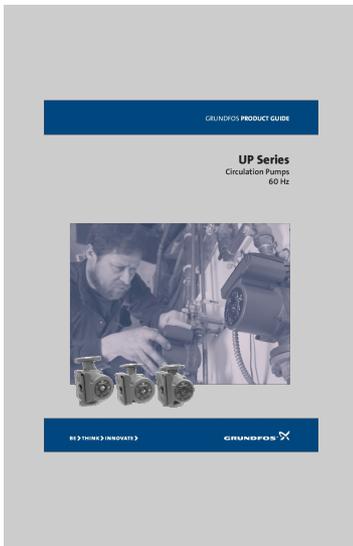

[pdf] Guide Catalog

UP Series Product Guide 5 06 qxd 24045 AF SupplyUPS 15 42F FR page 32 Grundfos provides no guarantee as to the accuracy of competitor information listed 98961756afsupply media catalog product grundfos 98961756 srslltid AfmBOoqX4hqPQgyf3GiZPlmwJRUKMiewzH0RNCq259ew76ekute9vQnD ||| GRUNDFOS PRODUCT GUIDE UP Series Circulation Pumps 60 Hz CONTENTS Mission 18BUC5 4-3/8 UP15-18BUC7 1/2 Swt 6 1/2 3/4 Swt 7 3/4 Closed Systems: Cast Iron Body Pumps 005-F2 **007-F5 007-F5** opt 008-F6 009-F5 0011-F4 0012-F4 0012-F4-1 0013-F3 Fling-R Fling-R Flange Fling-R Flang... lang:en score:20 filesize: 3.67 M page_count: 63 document date: 2006-05-11

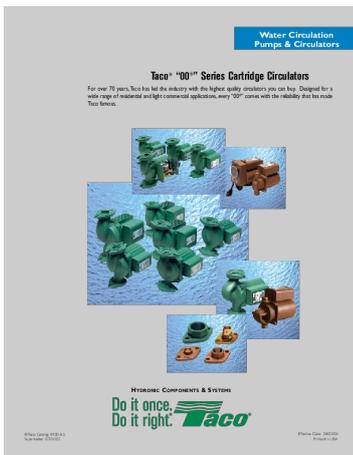

[pdf] Specifications Borchure Catalog

Taco 00 Series Cartridge Circulators Meet the 00@ Family Every cartridge circulator is designed to make your job easier Installation quick and easy maintenance a snap With no mechanical seal 100 8 5new Query ASSET ID 799372 USE TYPE SPECIFICATION PRODUCT 3624890 523777 1350168 3065185 3783989 46463 987709 85119 PROD FILE 00Brochure Circulator Pumps taco hvac FileLibrary api ferguson dar step service s3 supplyhouse manuals 1351086904867 product files inspectapedia heat 80 Water Circulation Pumps Circulators Taco 00 Series Cartridge Circulators For over 70 years, Taco ... 11 Feet Connection Sizes: 3/4 , 1 , 1-1/4 , 1-1/2 Flanged Pump Dimensions Weights Model Casing **007-F5** Cast Iron 007-BF5 Bronze A in. mm 6-1/8 156 6-1/8 156 B in. mm 4-1/2 114 4-1/2 114 C D F... lang:en score:20 filesize: 1.11 M page_count: 20 document date: 2006-08-02

[pdf] Product Description

Corey Kaplan Taco IMAP Pricing effective 05 01 20 tacocomfort 2020 07 ||| IMAP PRICING LIST - EFFECTIVE 5/1/2020 SKU # 0010-025RP 0010-F3 0011-BF4-J 0011-CF 0011-CF-USK 0011 ... -BC7-11FC 006-BC7-IFC 006-CT 006-CT-USK 006e3 006e3LC 006-ST4 007-042RP 007-BF5-J 007e-2F2 007e-2F4 **007-F5 007-F5-5 007-F5-7IFC 007-F5-8IFC** Product Description RP VALVE ASSEMBLY PLASTIC Taco Circul... lang:en score:20 filesize: 397.39 K page_count: 3 document date: 2020-04-24

