

[Manuals.plus](#) /

› [Salon Sundry](#) /

› Salon Sundry Portable Electric Hot Paraffin Wax Warmer Spa Bath Instruction Manual

Salon Sundry WAX-2041

Salon Sundry Portable Electric Hot Paraffin Wax Warmer Spa Bath Instruction Manual

Model: WAX-2041 | Brand: Salon Sundry

1. PRODUCT OVERVIEW

The Salon Sundry Portable Electric Hot Paraffin Wax Warmer Spa Bath is designed for professional-grade paraffin wax treatments, suitable for both salon and home use. This durable unit features a sleek composite frame and a metal interior, compatible with all types of paraffin salon wax.

It offers a large, open design to comfortably accommodate hands, feet, or elbows, providing a luxurious spa experience. The unit includes a power button and variable temperature controls for precise wax meltdown and temperature setting, displayed on a well-lit digital readout. A composite grill is provided to protect the heating surface, and integrated handles ensure safe and easy movement.



Front view of the Salon Sundry Paraffin Wax Warmer with its clear lid closed.



Power button and variable temperature controls that allow for fast wax meltdown (35°-65°C /95°-150°F). Digital display for accurate temperature readout



Transparent dust cover to monitor wax melting



Integrated side handles for easy & safe moving



Large, open design (approximately 12" x 7") to accommodate hands, feet, or elbows

Key features highlighted: digital temperature display, transparent dust cover, integrated side handles, and large opening.

2. SAFETY INFORMATION

WARNING: To reduce the risk of burns, electrocution, fire, or injury to persons:

- Always unplug the unit from the electrical outlet immediately after using and before cleaning.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Do not place or store appliance where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquid.
- Close supervision is necessary when this appliance is used by, on, or near children or invalids.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water.

- Keep the cord away from heated surfaces.
- Never use while sleeping or drowsy.
- Never drop or insert any object into any opening.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use on sensitive skin, open wounds, or areas with swelling, burns, or skin eruptions. Consult a physician for any skin conditions.
- Ensure wax is at a safe temperature before dipping. Recommended temperature range is 35-65 degrees C (95-150 degrees Fahrenheit).

3. SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Placement:** Place the wax warmer on a stable, flat, heat-resistant surface. Ensure it is away from water sources and out of reach of children.
3. **Insert Grill:** Place the composite grill at the bottom of the wax tank. This protects the heating element and prevents direct contact with the hot surface.
4. **Add Wax:** Fill the tank with your desired paraffin wax. The unit is designed for use with all types of paraffin salon wax.
5. **Connect Power:** Plug the US Standard 3-prong power cord into a suitable electrical outlet.



The wax warmer with its transparent lid open, revealing the internal protective grill.

4. OPERATING INSTRUCTIONS

1. **Power On:** Press the 'Power' button on the control panel to turn on the unit. The digital display will illuminate.
2. **Set Temperature:** Use the up and down arrow buttons next to the 'Temperature' display to set your desired wax temperature. The recommended operating temperature range is 35-65 degrees C (95-150 degrees Fahrenheit). For optimal comfort and safety, a temperature around 50 degrees C (122 degrees Fahrenheit) is often suitable.
3. **Melt Wax:** Allow time for the wax to fully melt. The transparent lid allows you to monitor the melting process. Melting time will vary depending on the amount and type of wax.
4. **Prepare Skin:** Ensure the skin area to be treated (hands, feet, or elbows) is clean and dry. Applying a thin layer of lotion before treatment can enhance moisturizing benefits.
5. **Dip Application:** Slowly dip the hand, foot, or elbow into the melted wax, ensuring not to touch the bottom or sides of the tank. Immediately withdraw the limb. Allow the wax to solidify for a few seconds. Repeat this dipping process 3-5 times to build up several layers of wax.

6. **Retain Heat:** For enhanced heat retention and deeper penetration, cover the waxed area with a plastic liner (not included) and then a thermal mitt or towel (not included).
7. **Treatment Duration:** Keep the wax on for 10-15 minutes, or until the heat dissipates.
8. **Remove Wax:** Gently peel off the solidified wax. The wax should come off easily, taking dead skin cells with it. Dispose of the used wax.
9. **Power Off:** Press the 'Power' button to turn off the unit and unplug it from the outlet when finished.



Digital display and control buttons for precise temperature adjustment.

SMOOTH, SOFTEN & REPAIR DRY SKIN


HANDS



FEET



ELBOWS

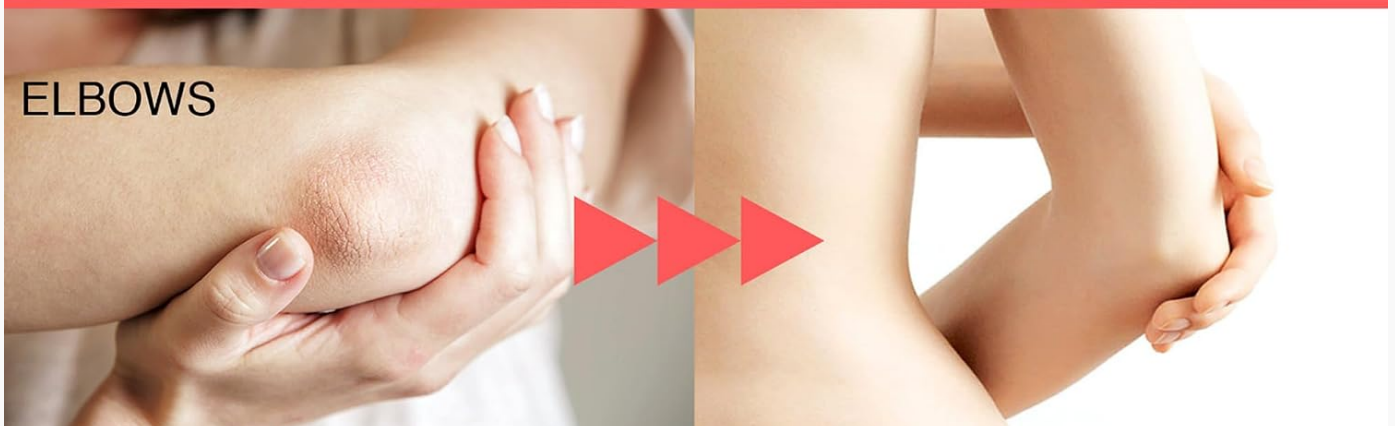

The wax warmer is suitable for treating hands, feet, and elbows to smooth, soften, and repair dry skin.

5. MAINTENANCE

- **Cleaning:** After the unit has cooled and the wax has solidified, remove the wax block. The smooth interior can be easily wiped clean with a soft cloth. Do not use abrasive cleaners or immerse the unit in water.
- **Wax Replacement:** Replace the paraffin wax periodically, or if it becomes contaminated.
- **Storage:** Store the unit in a cool, dry place when not in use. Ensure the lid is securely placed to keep the interior clean.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Unit does not power on.	Not plugged in; power button not pressed; power outage.	Ensure power cord is securely plugged into a working outlet. Press the 'Power' button. Check household circuit breaker.
Wax not melting or melting slowly.	Temperature set too low; insufficient time allowed for melting.	Increase the temperature setting using the arrow buttons. Allow adequate time for wax to melt (can take up to 2 hours for 6 lbs of wax).
Wax is too hot.	Temperature set too high.	Decrease the temperature setting. Allow wax to cool down before use. You can lift the lid to speed up cooling.
Wax not adhering properly to skin.	Skin not clean/dry; insufficient layers applied.	Ensure skin is clean and completely dry before dipping. Apply 3-5 layers of wax for best results.

7. SPECIFICATIONS

- **Product Dimensions:** 14.75 x 14.75 x 7.75 inches
- **Item Weight:** 5.5 Pounds
- **Item Model Number:** WAX-2041
- **UPC:** 609728832186
- **Manufacturer:** Salon Sundry
- **Country of Origin:** China
- **Temperature Range:** 35-65 degrees C (95-150 degrees Fahrenheit)

8. WARRANTY AND SUPPORT

For warranty information or technical support, please contact Salon Sundry customer service. Keep your purchase receipt for any warranty claims.

For further assistance, please visit the official Salon Sundry website or contact their support team directly.

© 2024 Salon Sundry. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question