

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [PetSafe](#) /

› [PetSafe Basic In-Ground Pet Fence System: Installation and Operation Manual](#)

PetSafe PIG00-14582

PetSafe Basic In-Ground Pet Fence System: Installation and Operation Manual

Model: PIG00-14582

1. INTRODUCTION

The PetSafe Basic In-Ground Pet Fence System is designed to provide a safe and effective containment solution for your pet within a designated area. This system utilizes a buried wire to create a boundary, a transmitter to send a signal through the wire, and a receiver collar worn by your pet. When your pet approaches the boundary, the collar delivers a warning tone, followed by a static correction if the boundary is crossed. Proper installation and training are crucial for the system's effectiveness and your pet's safety.

2. PACKAGE CONTENTS

Before beginning installation, verify that all components are present in your kit:

- Transmitter with power adapter
- PetSafe Deluxe UltraLight Receiver Collar
- 500 feet of boundary wire
- 50 training flags
- PetSafe RFA-67 battery (included for collar)
- Short and long contact points for various coat lengths
- Test light tool
- Surge protector
- 2 waterproof gel-filled splice capsules and 2 wire connectors
- Product Manual (this document)



Image 2.1: Overview of the PetSafe Basic In-Ground Pet Fence Kit components, including the transmitter, boundary wire, receiver collar, and training flags.

3. SYSTEM OVERVIEW

The PetSafe Basic In-Ground Pet Fence System operates by creating an invisible boundary around your property. The system consists of three main parts:

- 1. Transmitter:** This unit plugs into a standard electrical outlet indoors and sends a harmless radio signal through the boundary wire. It features controls for boundary width and power.
- 2. Boundary Wire:** Buried or secured above ground, this wire carries the radio signal from the transmitter, defining the pet's containment area. The included 500 feet of wire covers up to 1/3 acre, expandable to 5 acres with additional wire.
- 3. Receiver Collar:** Worn by your pet, this waterproof collar detects the radio signal from the boundary wire. It emits a warning tone when your pet approaches the boundary and a static correction if the pet attempts to cross it. The collar is adjustable for neck sizes 6-26 inches and suitable for dogs 8 lbs and up.



Transmitter is installed indoors to provide power and signal for buried wire



Waterproof replaceable battery collar has tone and 4 adjustable correction levels



500ft of wire to customize a boundary up to 1/3 acre. Purchase additional wire to increase the boundary up to 5 acres



Flags temporarily give a visual cue for learning the boundary

Image 3.1: Individual components of the PetSafe In-Ground Fence System, showing the transmitter, receiver collar, boundary wire spool, and training flags.

4. INSTALLATION

4.1 Planning Your Layout

Careful planning of your boundary layout is essential for effective containment. Consider areas where your pet should be contained and areas that should be off-limits. The system allows for various configurations:

- Backyard only
- Front yard only
- Custom shapes around landscaping or pools
- Along existing physical fences

Draw a diagram of your property and mark the desired boundary. Ensure the wire forms a continuous loop back to the transmitter.

Design and setup your pet's fence boundary in a weekend

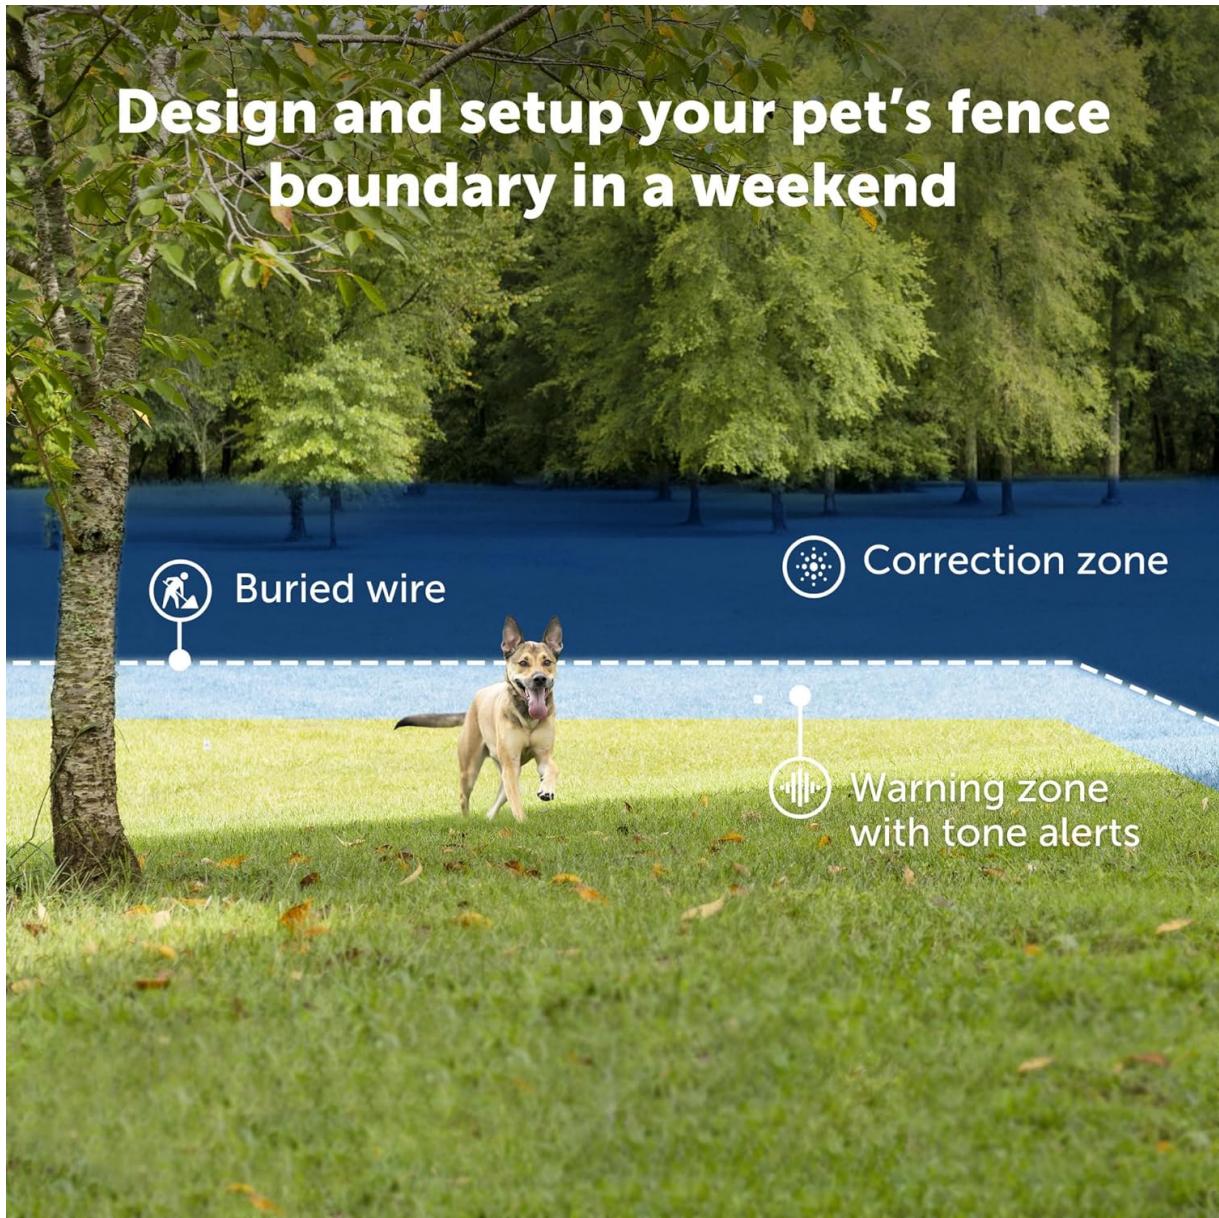


Image 4.1: Illustration of a typical in-ground fence boundary, showing the buried wire, the warning zone with tone alerts, and the correction zone.

Create a safe area for your pets to play




Back yard only



Front yard only



Customize around off-limit spaces

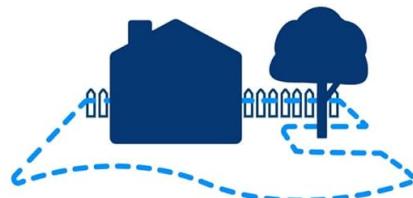

On a physical fence

Image 4.2: Examples of customizable fence layouts, including backyard only, front yard only, custom shapes, and integration with physical fences.

4.2 Transmitter Installation

The transmitter should be installed indoors in a dry, protected area, close to a standard electrical outlet. It must be connected to the boundary wire loop. Always use the provided surge protector to safeguard against power surges and lightning strikes.

1. Mount the transmitter to a wall using appropriate hardware.
2. Connect the boundary wire ends to the transmitter's terminals.
3. Plug the transmitter's power adapter into the surge protector, then plug the surge protector into a grounded electrical outlet.

4.3 Boundary Wire Installation

The boundary wire can be buried or secured above ground. Burying the wire is recommended for durability and aesthetics.

- **Burying:** Dig a shallow trench (1-3 inches deep) along your planned boundary. Place the wire in the trench and cover it with soil.
- **Above Ground:** Secure the wire to existing fences, walls, or use landscape staples to pin it to the ground. Ensure the wire is not a tripping hazard and is protected from damage.
- **Splicing:** If additional wire is needed or a break occurs, use the provided waterproof gel-filled splice

capsules and wire connectors to ensure a secure, weather-resistant connection.

4.4 Training Flag Placement

Place the training flags along the boundary wire, approximately 10 feet apart. These flags serve as visual cues for your pet during the initial training phase, helping them understand the invisible boundary.

5. COLLAR SETUP AND OPERATION

5.1 Battery Installation

The receiver collar uses one PetSafe RFA-67 battery. To install:

1. Twist the battery cap counter-clockwise with a coin to remove it.
2. Insert the new RFA-67 battery with the positive (+) side facing out.
3. Replace the battery cap and twist clockwise until snug. Do not overtighten.

The collar's indicator light will flash green to confirm proper battery installation. A red flashing light indicates a low battery, requiring replacement.

5.2 Fitting the Collar

Proper collar fit is crucial for consistent and effective static correction.

1. Position the collar so the contact points are centered on your pet's neck, underneath the jaw.
2. Adjust the strap to be snug, allowing only one finger to fit comfortably between the contact points and your pet's skin.
3. For long-haired pets, use the longer contact points provided to ensure proper skin contact.

5.3 Correction Levels

The Deluxe UltraLight Receiver Collar offers a tone-only mode and 4 levels of adjustable static correction. The appropriate level depends on your pet's temperament and response to training.

- **Tone-Only Mode:** Provides an audible warning without static correction. Useful for initial training.
- **Levels 1-4:** Increasing levels of static correction. Start with the lowest level and increase only if your pet does not respond.

Refer to the collar's specific instructions for adjusting correction levels, typically involving a button or dial on the collar unit.

6. PET TRAINING

Effective training is vital for your pet to understand and respect the boundary. A typical training program lasts about two weeks.

1. **Introduction to the Boundary (Days 1-3):** Walk your pet on a leash along the boundary flags. When the collar emits a warning tone, immediately guide your pet away from the boundary, praising them. Do not allow your pet to receive a static correction during this phase.
2. **Correction Introduction (Days 4-7):** Continue walking your pet on a leash. If your pet attempts to cross the boundary and receives a static correction, immediately pull them back into the safe zone, using a verbal command like "No!" or "Stay!" and praise them once they are back in the safe area.
3. **Off-Leash Supervision (Days 8-14):** Gradually introduce off-leash time within the containment area, always supervising closely. Reinforce the boundary if your pet tests it.
4. **Continued Reinforcement:** Periodically review the boundary with your pet, especially if there are

changes to the environment or if your pet's behavior changes.

Consistency and positive reinforcement are key to successful training.

7. MAINTENANCE

7.1 Collar Battery Replacement

The PetSafe RFA-67 battery typically lasts 1-3 months, depending on usage. Replace the battery when the collar's indicator light begins to flash red. Always use genuine PetSafe RFA-67 replacement batteries.

7.2 Wire Inspection

Periodically inspect the boundary wire for any damage, especially if your pet's collar is not activating correctly. Exposed wire can be damaged by lawn equipment, animals, or weather. Repair any breaks using the provided splice capsules and connectors to maintain system integrity.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Collar not activating at boundary	1. Collar battery low or dead. 2. Wire break in boundary loop. 3. Transmitter not powered on or faulty. 4. Boundary width setting too low.	1. Replace RFA-67 battery. 2. Check wire for breaks using the test light tool and repair with splice capsules. 3. Ensure transmitter is plugged in and power light is on. Check surge protector. 4. Increase boundary width on the transmitter.
Pet receives correction inside boundary	1. Collar fit too loose. 2. Contact points too short for pet's fur. 3. Interference from other electronic devices.	1. Tighten collar to ensure snug fit. 2. Install longer contact points. 3. Move transmitter away from large metal objects or other electronics.
Transmitter light off	1. No power to transmitter. 2. Transmitter faulty.	1. Check power adapter and electrical outlet. Ensure surge protector is functioning. 2. Contact customer support.
Collar indicator light flashing red	Collar battery is low.	Replace the RFA-67 battery immediately.

9. SPECIFICATIONS

- **Model Name:** PIG00-14582
- **Item Weight:** 4.84 pounds
- **Item Dimensions (LxWxH):** 11.97 x 4.37 x 6.06 inches
- **Brand Name:** PetSafe
- **Material:** Plastic
- **Target Audience:** Dogs
- **Collar Fit:** Adjustable, fits neck sizes 6-26 inches

- **Minimum Pet Weight:** 8 lbs and up
- **Correction Levels:** 4 static correction levels + tone-only mode
- **Battery Type (Collar):** 1 x PetSafe RFA-67 (included)
- **Battery Life (Collar):** 1-3 months (approximate)
- **Wire Included:** 500 feet (covers up to 1/3 acre)
- **Maximum Coverage:** Up to 5 acres (with additional wire purchase)
- **Compatibility:** Works with all PetSafe in-ground fence receiver collars except YardMax receiver collars.
- **Country of Origin:** China

10. WARRANTY AND CUSTOMER SUPPORT


10.1 Warranty Information

This PetSafe Basic In-Ground Pet Fence System comes with a 1 Year Limited Warranty. Please retain your proof of purchase for warranty claims. For detailed warranty terms and conditions, refer to the documentation included with your product or visit the official PetSafe website.

10.2 Customer Support


For any questions, assistance with installation, operation, or troubleshooting, PetSafe offers U.S.-based customer care. Our pet product experts are available by phone, email, or chat to help you and your pet. Please visit the official PetSafe website for contact information and support resources.

Related Documents - PIG00-14582

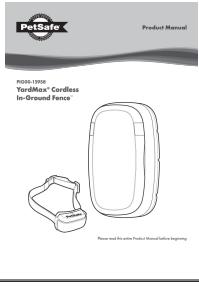	<p>PetSafe PIG00-11116 YardMax Rechargeable In-Ground Fence Receiver Collar Product Manual</p> <p>Comprehensive product manual for the PetSafe PIG00-11116 YardMax Rechargeable In-Ground Fence™ Receiver Collar. Covers setup, operation, safety, troubleshooting, and warranty information.</p>
	<p>PetSafe In-Ground Fence PIG00-13661 Operating and Training Guide</p> <p>Comprehensive operating and training guide for the PetSafe In-Ground Fence system (Model PIG00-13661), covering setup, installation, training, safety, troubleshooting, and warranty.</p>
	<p>PetSafe YardMax Cordless In-Ground Fence Product Manual</p> <p>Comprehensive product manual for the PetSafe YardMax Cordless In-Ground Fence system, detailing setup, training, features, and troubleshooting.</p>
	<p>PetSafe Wireless Pet Containment System: Operating and Training Guide</p> <p>A comprehensive guide to setting up and training your pet with the PetSafe Wireless Pet Containment System. Learn about system operation, component setup, boundary configuration, training phases, portability, accessories, troubleshooting, and safety guidelines.</p>

	<p>PetSafe Rechargeable In-Ground Fence PIG00-14673 Product Manual</p> <p>This product manual provides comprehensive instructions for setting up, installing, training, and troubleshooting the PetSafe Rechargeable In-Ground Fence System (Model PIG00-14673). It details safety precautions, system operation, boundary setup, collar fitting, training phases, and system testing to ensure safe and effective pet containment.</p>
	<p>PetSafe Stubborn Dog In-Ground Fence PIG00-10777 Operating and Training Guide</p> <p>Operating and training guide for the PetSafe Stubborn Dog In-Ground Fence system (Model PIG00-10777), covering installation, setup, and pet training for safe containment. Includes safety information and support resources.</p>

Documents - PetSafe – PIG00-14582

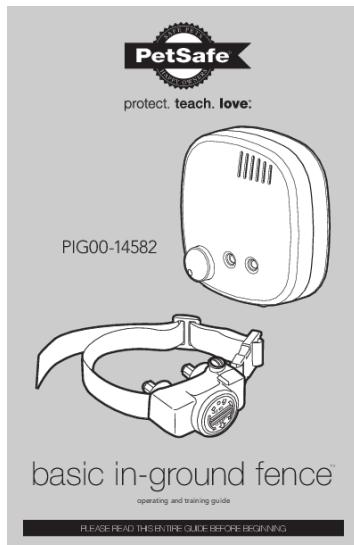


[\[pdf\] User Manual Instructions Guide Warranty](#)

Untitled Please read this entire guide before beginning operating and training PLEASE READ THIS ENTIRE GUIDE BEFORE BEGINNING BATTERY 6V RFA 67 2 1 800 732 2677 Thank you for choosing PetSafe® brand You your pet deserve a Check the t to prevent excessive pressure follow instructions in manual Never connect lead electronic collar it will cause on PetSafeBasicSystemManual flexpetz media wysiwyg manuals petsafe


PIG00-14582 basic in-ground fenceTM operating and training guide PLEASE READ THIS ENTIRE GUIDE BEFORE BEGINNING BATTERY 6V RFA-67 2 1-800-732-2677 Thank you for choosing PetSafe brand. You and your pet deserve a companionship that includes memorable moments and a shared understanding together....

lang:en score:51 filesize: 1.73 M page_count: 36 document date: 2015-01-06

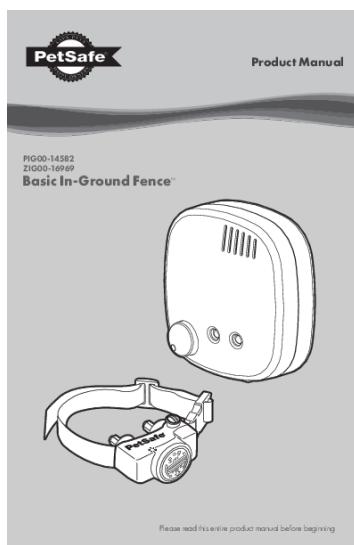

[\[pdf\] User Manual Quick Start Guide](#)


PIG00 14582 ZIG00 16969 Basic In Ground Fence PetSafe Please read this entire product manual before beginning Y 6V A 67 Product Manual ™ basic in ground fence 400 1751 2 petsafe net media ||| Product Manual **PIG00-14582** ZIG00-16969 Basic In-Ground FenceTM Please read this entire product manual before beginning BATTERY 6V RFA-67 Welcome You and your pet were made for each other. Our aim is to help you have the best companionship and the most memorable moments together. Your Basic In-Gro... lang:en score:42 filesize: 2.92 M page_count: 28 document date: 2020-08-04

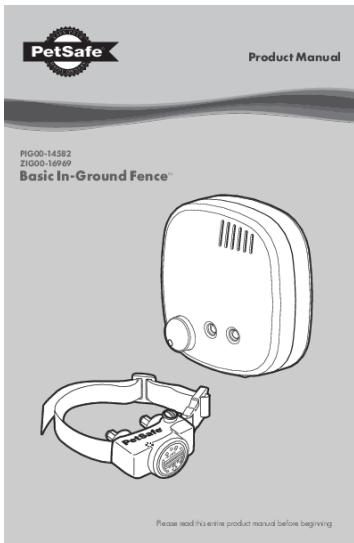

[\[pdf\] User Manual Quick Start Guide](#)

1106830 Man1 PIG00 14582 ZIG00 16969 Basic In Ground Fence Please read this entire product manual before beginning Y 6V A 67 Product Manual™ media tractorsupply is content TractorSupplyCompany tsc 1 10 68 30 |||

Product Manual **PIG00-14582 ZIG00-16969 Basic In-Ground Fence™** Please read this entire product manual before beginning BATTERY 6V RFA-67 Welcome You and your pet were made for each other. Our aim is to help you have the best companionship and the most memorable moments together. Your Basic In-Gro... lang:en score:36 filesize: 2.94 M page_count: 28 document date: 2020-08-18

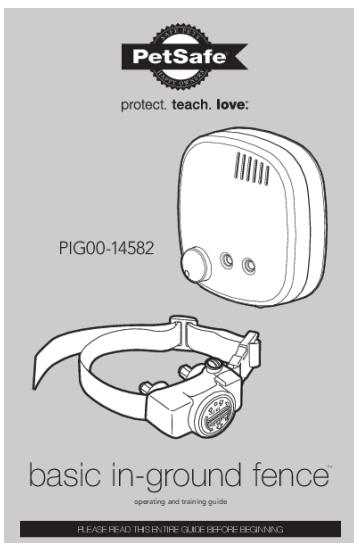

[\[pdf\] User Manual Instructions](#)

RF Y 6V basic in ground fence petsafe net fence™ Check the fit to prevent excessive pressure follow instructions this manual Never connect a lead electronic collar it will cause on contacts When using separate for don t put PIG00 14582 Basic In Ground Fence Manual media manuals 80

...

lang:en score:34 filesize: 2.83 M page_count: 36 document date: 2013-11-20




[\[pdf\] User Manual](#)

Manual HUElektronikus kutyakerítés PetSafe® Basic Elektronikus kerítések Reedog hu5548 petsafe R basic hui00 eu file 543 5548 hu HUManual huNyakörv és vevőkészülék Deluxe kis közepes méretű kutyáknak Vevőkészülék Elektro nyakörvek hu15927 403 15927 ||| ||| Termék kziknyv PIG00-14582 Basic In-Ground FenceTM RFA-67 AKKUMULTOR 6V Miellett elkezden, olvassa el a teljes termék kziknyvet dvzljk Te s kedvencet egymasnak lett teremtve. Clunk, hogy segtsnk nnek a legjobb trsasgban lni, s a legtbb rendszer

Termék kziknyv **PIG00-14582 Basic In-Ground FenceTM RFA-67 AKKUMULTOR 6V** Miellett elkezden, olvassa el a teljes termék kziknyvet dvzljk Te s kedvencet egymasnak lett teremtve. Clunk, hogy segtsnk nnek a legjobb trsasgban lni, s a legtbb rendszer gy alaktottuk ki, hogy pillanatokban. Az n alapvet fldbe...

lang:no score:30 filesize: 3.1 M page_count: 29 document date: 2024-06-11

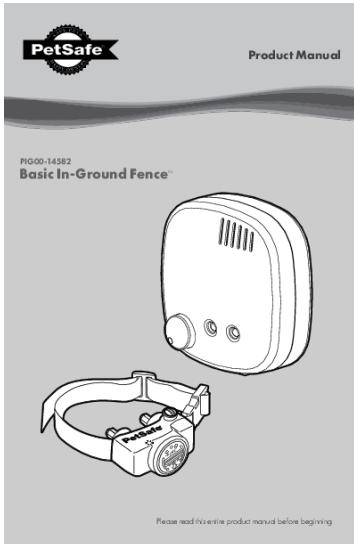

[\[pdf\] User Manual Quick Start Guide Instructions Borchure Catalog](#)


PIG00 14582 Basic In Ground Fence PetSafe Fence™ Catalog Explanation of attention words and symbols used in this product manual This is the safety alert symbol It to you potential personal injury hazards Obey all messages that follow avoid possible or death WARNING indicates a hazardous situation which if not avoided could result serious Please read entire before beginning BATTERY 6V RFA 67 Product Manual Your System designed give your pet more freedom while keeping him safe We know pets make happy owners Welcome You were made for each other Our aim help have best companionship most memorable moments together 77161 UseAndCareInstructions V1532461913 116 petsafe net media img chewy content catalog barkcontrol au assets brochures Product Manual **PIG00-14582** Basic In-Ground FenceTM Please read this entire product manual before beginning BATTERY 6V RFA-67 Welcome You and your pet were made for each other. Our aim is to help you have the best companionship and the most memorable moments together. Your Basic In-Ground FenceTM ... lang:en score:30 filesize: 2.57 M page_count: 28 document date: 2018-05-30



[PetSafe Product Guide: Solutions for a Happier, Safer Pet](#)

Discover the comprehensive PetSafe product catalog, featuring innovative solutions for pet containment, training, health, and comfort, including fencing, bark control, pet doors, fountains, feeders, toys, and accessories.

lang:en score:30 filesize: 8.66 M page_count: 120 document date: 2018-05-30

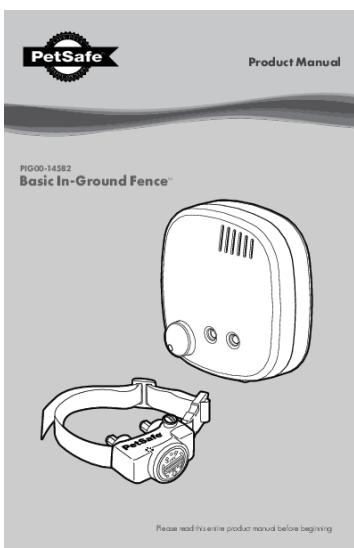


[\[pdf\] User Manual Quick Start Guide](#)

Manual ENPetSafe® Basic Electronic fences Reedog eu5547 petsafe R basic eni00 eu file 543 5547 en III

Product Manual **PIG00-14582** Basic In-Ground FenceTM Please read this entire product manual before beginning BATTERY 6V RFA-67 Welcome You and your pet were made for each other. Our aim is to help you have the best companionship and the most memorable moments together. Your Basic In-Ground FenceTM ...

lang:en score:29 filesize: 2.6 M page_count: 29 document date: 2018-05-30

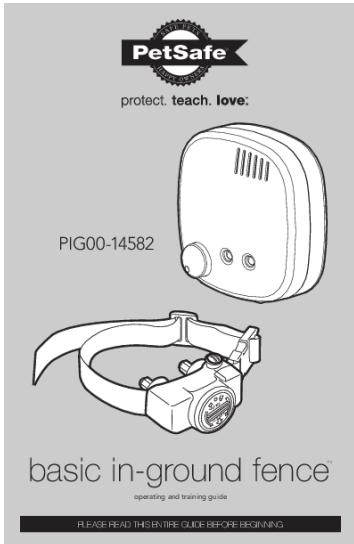


[\[pdf\]](#) Documentation Guide Warranty

Product Documentation PetSafe Basic In Ground Pet Fence from the Parent Company of INVISIBLE FENCE Brand Underground Electric System with Waterproof and Battery Operated Training Collar Supplies B1AHZ045MqS m media amazon images I |||

PIG00-14582 basic in-ground fence™ operating and training guide Please read this entire guide before beginning BATTERY 6V RFA-67 2 1-800-732-2677 Thank you for choosing PetSafe brand. You and your pet deserve a companionship that includes memorable moments and a shared understanding together....

lang:en score:22 filesize: 2.83 M page_count: 36 document date: 2014-01-29

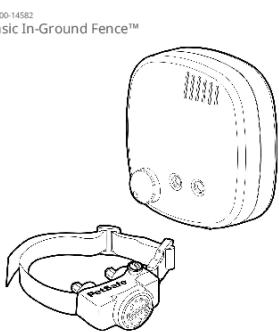


[\[pdf\]](#)

5568 petsafe R basic hu i00 eu file 543 |||

Termék kézikönyv **PIG00-14582** Basic In-Ground Fence™ RFA-67 AKKUMULTOR 6V Mielőtt elkezden, olvassa el a teljes termék kézikönyvet dvzljk Te s kedvencet egymásnak letölthető. Clunk, hogy segítsenek a legjobb tránszszíni liniára, s a legtöbb rendszert gyakoroltak ki, hogy pillanatokban. Az n alapvetően...

lang:no score:20 filesize: 3.1 M page_count: 29 document date: 2024-06-11

Mielőtt elkezden, olvassa el a teljes termék kézikönyvet

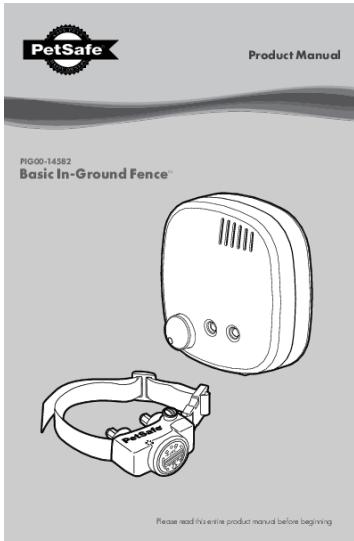


[\[pdf\]](#) User Manual Quick Start Guide

Basic In Ground Fence™ 15926 petsafe R basic en i00 eu file 403 |||

Product Manual **PIG00-14582** Basic In-Ground FenceTM Please read this entire product manual before beginning BATTERY 6V RFA-67 Welcome You and your pet were made for each other. Our aim is to help you have the best companionship and the most memorable moments together. Your Basic In-Ground FenceTM ...

lang:en score:20 filesize: 2.6 M page_count: 29 document date: 2018-05-30

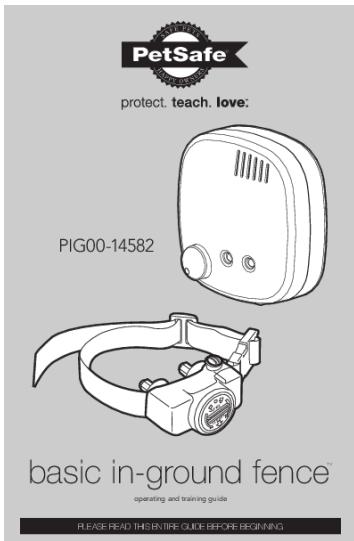


[\[pdf\]](#) Guide Warranty

RF Y 6V basic in ground fence fence™ collar is important A worn for too long or made tight on the pet s neck may cause skin damage Ranging from redness to pressure ulcers this condition commonly known as bed sores Avoid leaving dog more than 12 hours per day When possible reposition every 1 2 With Boundary Wire place and properly connected it time set containment field test system The Receiver Collar should NOT be your B14oDQWgXDS images na ssl amazon I m media

PIG00-14582 basic in-ground fenceTM operating and training guide Please read this entire guide before beginning BATTERY 6V RFA-67 2 1-800-732-2677 Thank you for choosing PetSafe brand. You and your pet deserve a companionship that includes memorable moments and a shared understanding together....


lang:en score:18 filesize: 2.83 M page_count: 36 document date: 2015-09-11

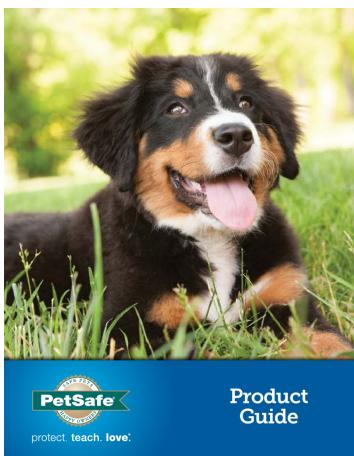

[PetSafe Product Guide: Comprehensive Range of Pet Care Solutions](#)

Explore the PetSafe Product Guide, featuring a wide array of innovative pet care solutions including fencing systems, bark control, training tools, pet doors, feeders, toys, and more. Enhance your pet's safety and well-being with PetSafe's quality products.


lang:en score:16 filesize: 7.99 M page_count: 53 document date: 2017-05-18

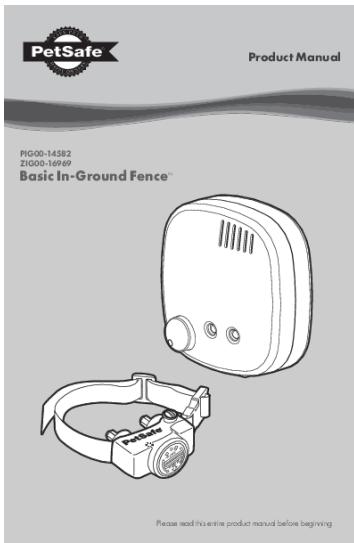

[\[pdf\] User Manual Quick Start Guide](#)

Basic In Ground Fence™ 1097686 Man1 media tractorsupply is content TractorSupplyCompany tsc product 1 09 76 86 |||


Product Manual **PIG00-14582** ZIG00-16969 Basic In-Ground Fence™ Please read this entire product manual before beginning BATTERY 6V RFA-67 Welcome You and your pet were made for each other. Our aim is to help you have the best companionship and the most memorable moments together. Your Basic In-Gro... lang:en score:14 filesize: 2.92 M page_count: 28 document date: 2021-04-08

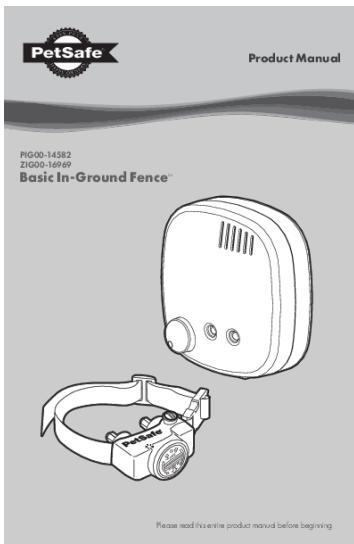

[\[pdf\] User Manual Quick Start Guide](#)

1106830 Man2 media tractorsupply is content TractorSupplyCompany tsc product 1 10 68 30 |||

Product Manual **PIG00-14582** ZIG00-16969 Basic In-Ground Fence™ Please read this entire product manual before beginning BATTERY 6V RFA-67 Welcome You and your pet were made for each other. Our aim is to help you have the best companionship and the most memorable moments together. Your Basic In-Gro... lang:en score:14 filesize: 2.95 M page_count: 28 document date: 2019-07-11

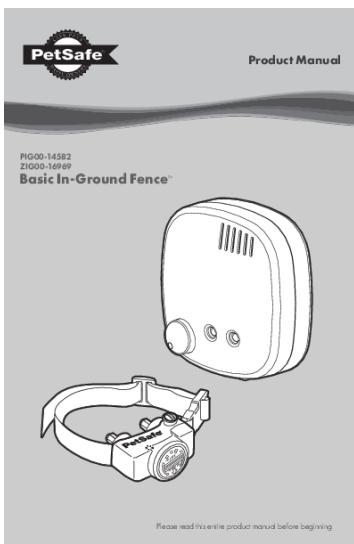

[\[pdf\] User Manual Quick Start Guide](#)

User guideMarshall Willen Portable Bluetooth Speaker with 15 Hour PlaytimeB1Pjrfmlqlm media amazon images | B1Pjrfmlql ref dp product quick view |||

Product Manual **PIG00-14582** ZIG00-16969 Basic In-Ground Fence™ Please read this entire product manual before beginning BATTERY 6V RFA-67 Welcome You and your pet were made for each other. Our aim is to help you have the best companionship and the most memorable moments together. Your Basic In-Gro... lang:en score:14 filesize: 2.92 M page_count: 28 document date: 2020-08-04