

Sunbeam GCSBCL-202-000

Sunbeam Turbo Steam Iron 1700W User Manual

Model: GCSBCL-202-000

IMPORTANT SAFEGUARDS

When using your iron, basic safety precautions should always be followed, including:

- Read all instructions before use.
- Use iron only for its intended use.
- To avoid the risk of electric shock, do not immerse the iron in water or other liquids.
- Always turn the iron OFF before plugging or unplugging from the electrical outlet. Never yank cord to disconnect from outlet; instead, grasp plug and pull to disconnect.
- Do not allow cord to touch hot surfaces. Let iron cool completely before putting away. Loop cord loosely around iron when storing.
- Always disconnect iron from electrical outlet when filling with water or emptying, and when not in use.
- Do not operate iron with a damaged cord or if the iron has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the iron. Contact customer service for examination and repair. Incorrect reassembly can cause a risk of electric shock when the iron is used.
- Close supervision is necessary for any appliance being used by or near children. Do not leave iron unattended while connected or on an ironing board.
- Burns can occur from touching hot metal parts, hot water, or steam. Use caution when you turn a steam iron upside down – there may be hot water in the reservoir.

PRODUCT OVERVIEW

The Sunbeam Turbo Steam Iron 1700W is designed for efficient wrinkle removal with its powerful features and user-friendly design. It includes a ceramic coated soleplate, various steam options, and an automatic shut-off for safety.



Figure 1: Main view of the Sunbeam Turbo Steam Iron.

- **1700 Watts of Power:** Ensures quick heating for immediate use.
- **Nonstick Ceramic Soleplate:** Provides smooth gliding over various fabrics and prevents sticking.
- **Precision Tip:** Allows for easy access to difficult areas like collars and seams.
- **Powerful Shot of Steam:** Can be used horizontally for flat ironing or vertically for hanging garments.
- **Spray Mist Feature:** Helps to dampen and smooth stubborn wrinkles.
- **3-Way Motion Smart Auto-Off:** Automatically shuts off the iron if left unattended or in an improper position for enhanced safety.
- **Easy-View Water Tank:** Transparent water reservoir for convenient monitoring of water levels.
- **Retractable Cord:** For easy storage and tangle-free use.

SETUP

1. **Before First Use:** Remove any labels, protective film, or stickers from the iron's soleplate. It is normal for a small amount of water to be present in the water tank due to factory testing.

2. Filling the Water Tank:

- Ensure the iron is unplugged from the electrical outlet.
- Set the steam selector to the "Dry Iron" position.
- Open the water fill cover.
- Using a clean measuring cup, slowly pour tap water into the water fill opening until the "MAX" fill line is reached. Do not overfill.
- Close the water fill cover securely.



Figure 2: The easy-view water tank allows for clear monitoring of water levels.

3. **Connecting to Power:** Extend the retractable cord and plug the iron into a standard electrical outlet.

OPERATING INSTRUCTIONS

Temperature Settings

1. **Selecting Fabric Type:** Turn the temperature dial to the desired fabric setting. Refer to the fabric guide on the iron or garment care labels.



Figure 3: The iron features multiple fabric settings including Linen, Cotton, Wool, Silk, and Synthetic.

2. **Heating Indicator:** The indicator light will illuminate while the iron is heating and turn off when the selected temperature is reached.

Steam Functions

- **Continuous Steam:** For continuous steam, ensure the water tank is filled and the temperature dial is set to a steam-compatible fabric (e.g., Cotton, Linen). Adjust the steam selector to the desired steam level.
- **Shot of Steam:** Press the ergonomic steam trigger for a powerful burst of steam. This feature is effective for removing stubborn wrinkles.



Figure 4: Demonstrating the powerful shot of steam feature during ironing.

- **Vertical Shot of Steam:** Hold the iron upright, approximately 6 inches from the garment. Press the steam trigger to release steam for vertical steaming of hanging clothes or draperies.



SPRAY MIST FEATURE

Figure 5: The iron can be used vertically to steam hanging garments.

- **Spray Mist:** Press the spray mist button to lightly dampen fabric, aiding in the removal of difficult creases.



VERTICAL SHOT OF STEAM® FEATURE

Figure 6: The spray mist function helps to moisten fabric for easier wrinkle removal.

Automatic Shut-Off

The iron is equipped with a 3-Way Motion Smart Auto-Off feature for safety. The iron will automatically turn off if:

- Left motionless on its soleplate for 30 seconds.
- Left motionless on its side for 30 seconds.
- Left motionless in an upright position for 15 minutes.

To reset the iron after auto-off, simply move the iron. The heating indicator light will illuminate, and the iron will begin to heat to the selected temperature.

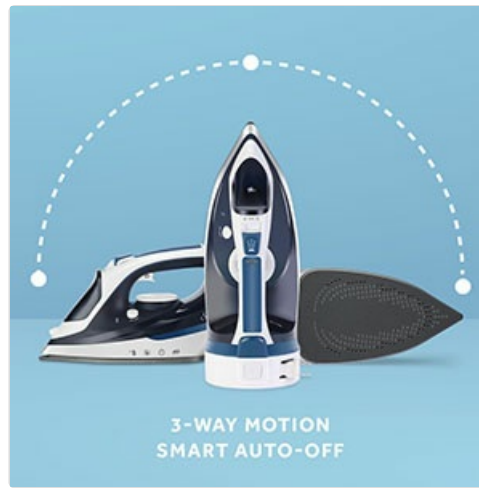


Figure 7: Diagram illustrating the 3-Way Motion Smart Auto-Off safety feature.

Official Product Video

Your browser does not support the video tag.

Video 1: An official product video demonstrating the features and operation of the Sunbeam 1700W Turbo Steam Iron.

MAINTENANCE AND CARE

• Self-Clean Function:

- Fill the water tank to the MAX line.
- Set the steam selector to "Dry Iron" and the temperature dial to "Linen" (maximum setting).
- Plug in the iron and wait for the indicator light to turn off, signaling it has reached temperature.
- Unplug the iron.
- Hold the iron horizontally over a sink. Press and hold the self-clean button. Hot water and steam will flush out mineral buildup.
- Gently rock the iron back and forth until the water tank is empty.
- Release the self-clean button and place the iron on its heel rest to cool.

- **Cleaning the Soleplate:** For starch or other residue, wipe the soleplate with a soft, damp cloth while the iron is warm (unplugged). Do not use abrasive cleaners or scouring pads.

- **Storage:** Ensure the iron is completely cool and empty the water tank before storing. Store the iron upright on its heel rest to prevent scratches to the soleplate. The retractable cord can be retracted for neat storage.



Figure 8: The retractable 8-foot cord simplifies storage and prevents tangles.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Iron does not heat.	Iron is unplugged or auto-off activated.	Ensure iron is securely plugged in. Move the iron to reset the auto-off feature.
No steam or insufficient steam.	Water tank empty, temperature too low, or steam selector set to "Dry Iron".	Fill water tank. Set temperature to a steam-compatible setting (e.g., Cotton, Linen). Adjust steam selector to desired steam level.
Water leaks from soleplate.	Temperature too low for steam, or water tank overfilled.	Ensure iron is at the correct temperature for steam. Do not overfill the water tank.
Iron sticks to fabric.	Temperature too high for fabric type, or soleplate has residue.	Adjust temperature to match fabric. Clean the soleplate as per maintenance instructions.

SPECIFICATIONS

Feature	Detail
Brand	Sunbeam
Model Name	Turbo Steam
Model Number	GCSBCL-202-000

Feature	Detail
Wattage	1700 watts
Soleplate Material	Ceramic
Special Feature	3-Way Auto Shutoff
Product Dimensions	9.3"L x 3.7"W
Item Weight	2.6 Pounds
Voltage	310 Volts
Frequency	50 Hz

WARRANTY AND SUPPORT

The Sunbeam Turbo Steam Iron comes with a manufacturer's warranty. Please refer to the product packaging or the official Sunbeam website for specific warranty details and registration information.

For customer support, service, or replacement parts, please visit the official Sunbeam website or contact their customer service line. Keep your purchase receipt as proof of purchase for warranty claims.

The product description mentions a 3-year warranty and a lifetime soleplate warranty. Please verify these details with the manufacturer's official documentation.