

Bonavita BV1500TS

Bonavita BV1500TS 5-Cup Drip Coffee Maker Instruction Manual

INTRODUCTION

Thank you for choosing the Bonavita BV1500TS 5-Cup Drip Coffee Maker. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new coffee maker. Please read all instructions carefully before first use and retain for future reference.

PRODUCT OVERVIEW


The Bonavita BV1500TS is designed to brew exceptional coffee with ease. Key features include:

- **5-Cup Capacity:** Brews a full 5-cup (25 fl oz / 1.0 L) carafe in approximately 5 minutes.
- **Optimal Brewing Temperature:** 1100-watt heater maintains an ideal brewing temperature of 194°–205°F (90°–96°C).
- **One-Touch Operation:** Simple on/off switch for straightforward brewing.
- **Pre-Infusion Mode:** Optional mode to gently pre-wet coffee grounds for enhanced flavor extraction.
- **Even Extraction:** Specially designed showerhead and flat-bottom filter basket ensure uniform saturation.
- **Thermal Carafe:** 1.0 L double-wall stainless steel thermal carafe for excellent heat retention.
- **Easy to Clean:** Carafe lid, filter basket, and showerhead are dishwasher-safe and BPA-free.


5 CUPS IN 5 MINS



Image showing the Bonavita BV1500TS 5-Cup Drip Coffee Maker with its dimensions: 6.2 inches deep, 12.3 inches wide, and 10.6 inches high. It highlights the 5-cup capacity and SCA certification.

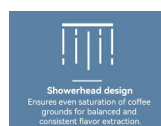


An icon illustrating the showerhead design, which ensures even saturation of coffee grounds for balanced flavor extraction.

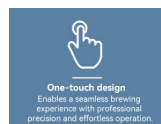

An icon depicting a finger pressing a button, symbolizing the one-touch design for effortless operation.



An icon showing a steaming coffee cup, indicating the 5-cup capacity of the coffee maker.

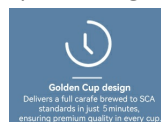

An icon featuring a clock and a coffee cup, signifying brewing to SCA Golden Cup standards in 5 minutes.

SETUP

1. **Unpack:** Carefully remove all packaging materials and ensure all components are present: main unit, water reservoir, thermal carafe, filter basket, and showerhead.
2. **Clean Components:** Wash the thermal carafe, carafe lid, filter basket, and showerhead in warm, soapy water. Rinse thoroughly and dry. The main unit can be wiped with a damp cloth.
3. **Position:** Place the coffee maker on a flat, stable, heat-resistant surface near an electrical outlet.
4. **First Use Rinse:** Fill the water reservoir to the 'Max' line with fresh, cold water. Place the empty filter basket and thermal carafe in position. Run a brew cycle without coffee grounds to clean the internal components. Discard the water.

OPERATING INSTRUCTIONS

Standard Brewing

1. **Fill Water Reservoir:** Open the water reservoir lid and fill with fresh, cold water to your desired level (up to 5 cups / 1.0 L).
2. **Add Coffee Grounds:** Place a #4 cone-shaped paper filter or a reusable filter (not included) into the filter basket. Add your preferred amount of medium-ground coffee. For optimal results, use approximately 28-36 grams (5-6 tablespoons) of coffee per 1.0 L of water.
3. **Assemble:** Place the filter basket onto the thermal carafe, ensuring it is seated correctly. Place the thermal carafe with the filter basket onto the heating plate. Ensure the showerhead is properly positioned over the filter basket.
4. **Start Brewing:** Press the ON/OFF switch. The indicator light will illuminate, and brewing will begin.
5. **Serve:** Once brewing is complete, the coffee maker will automatically shut off. Carefully remove the filter basket and discard the used grounds. Secure the lid onto the thermal carafe to maintain coffee temperature.

Optional Pre-Infusion Mode (Bloom for Richer Taste)

The pre-infusion mode allows the coffee grounds to bloom before full brewing, enhancing flavor. To activate:

1. Ensure the coffee maker is OFF.
2. Press and hold the ON/OFF switch for approximately 5 seconds until the indicator light flashes. This indicates pre-infusion mode is active.
3. Proceed with standard brewing steps (fill water, add grounds, assemble).
4. Press the ON/OFF switch to start brewing. The light will continue to flash during the pre-infusion and brewing cycle.
5. To deactivate pre-infusion mode, press and hold the ON/OFF switch again for 5 seconds until the light stops flashing, or unplug the unit.

Your browser does not support the video tag.

Official video demonstrating the features and ease of use of the Bonavita 5-Cup Drip Coffee Maker.

Your browser does not support the video tag.

Official video showcasing the Bonavita coffee maker in a home setting, emphasizing its role in daily routines.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and coffee taste.

- **Daily Cleaning:** After each use, wash the thermal carafe, carafe lid, filter basket, and showerhead in warm, soapy water. These parts are dishwasher-safe (top rack recommended). Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
- **Descaling:** Mineral deposits can build up over time, affecting performance. Descale your coffee maker every 1-3 months, depending on water hardness. Use a commercial descaling solution designed for coffee makers, following the product's instructions. Typically, this involves filling the reservoir with the solution and running a brew cycle, followed by several cycles with plain water to rinse.



Water Reservoir
(1 Cup $\approx$ 125ml)

Thermal Carafe

V-Shaped Dripper
(100% Virgin, BPA-Free Plastic)

An image displaying the main components of the coffee maker: the water reservoir, the stainless steel thermal carafe, and the V-shaped dripper made of BPA-free plastic. These components are easily removable for cleaning.

TROUBLESHOOTING

- **Coffee not brewing:** Ensure the unit is plugged in, the ON/OFF switch is pressed, and the water reservoir has sufficient water.

- **Coffee tastes weak or bitter:** Adjust coffee-to-water ratio, check coffee grind size (medium grind is recommended), or ensure descaling is performed regularly.
- **Water leaking:** Ensure the filter basket and thermal carafe are correctly seated. Check for any cracks or damage to the carafe or reservoir.
- **Brewing is slow:** Descale the coffee maker to remove mineral buildup that can impede water flow.

SPECIFICATIONS

Model Number	BV1500TS
Brand	Bonavita
Capacity	5 Cups (25 Fluid Ounces / 1.0 Liter)
Wattage	1100 watts
Voltage	110 Volts
Material	Plastic, Stainless Steel
Dimensions (D x W x H)	6.2" x 12.3" x 10.6"
Item Weight	5 Pounds
Filter Type	Reusable (uses #4 cone filters)
Operation Mode	Fully Automatic

WARRANTY AND SUPPORT

This Bonavita BV1500TS coffee maker comes with a **2-year limited warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal household use. For warranty claims or technical support, please refer to the contact information provided with your product packaging or visit the official Bonavita website. Do not attempt to repair the appliance yourself, as this may void the warranty.

For further assistance, please contact Bonavita customer service.