

Ikan DS1

Ikan DS1 Beholder Gimbal for DSLRs Instruction Manual

Model: DS1 | Brand: Ikan

1. INTRODUCTION

The Ikan DS1 Beholder Gimbal is a 3-axis gyro-stabilized brushless motor gimbal designed to provide smooth, stable footage for DSLR and mirrorless cameras. It is engineered for portability and ease of use, supporting cameras weighing up to 3.7 lbs (1.7 kg). This manual provides essential information for the proper setup, operation, and maintenance of your DS1 Beholder Gimbal.



Figure 1.1: The Ikan DS1 Beholder Gimbal with a DSLR camera attached, demonstrating its primary function as a camera stabilizer.

2. PACKAGE CONTENTS

Please verify that all the following items are included in your package:

- Gimbal Stabilizer
- Quick Release Plate
- Camera Offset Bracket
- Three Batteries (Type 18650)
- Battery Holder
- Battery Cap
- Micro USB Cable
- USB LED Light
- Laser Cut Foam Soft Carry Case



Figure 2.1: All components of the Ikan DS1 Beholder Gimbal stored within its protective carry case.

3. PRODUCT FEATURES

- **3-Axis Gyro Stabilized Brushless Motors:** Ensures smooth and stable video footage by counteracting unwanted camera movements across pan, tilt, and roll axes.
- **Camera Weight Capacity:** Supports DSLR and mirrorless cameras weighing up to 3.7 lbs (1.7 kg).
- **Lithium Battery Powered:** Utilizes rechargeable lithium-ion batteries for extended operation.
- **3/8" - 16 Tripod Mount Socket:** Allows for easy mounting on tripods, monopods, or other support systems.
- **Illuminated ON-OFF Switch/Battery Indicator:** Provides clear indication of power status and remaining battery life.

4. SETUP GUIDE

4.1 Battery Installation

1. Unscrew the battery cap from the bottom of the gimbal handle.
2. Insert the three 18650 lithium-ion batteries into the battery holder, ensuring correct polarity as indicated.
3. Place the battery holder with batteries into the gimbal handle.
4. Securely screw the battery cap back onto the handle.



Figure 4.1: The battery holder with three 18650 batteries being inserted into the gimbal handle.

4.2 Camera Mounting

1. Attach the quick release plate to the bottom of your camera using the provided screw. Ensure it is securely fastened.
2. If your camera setup requires it, use the camera offset bracket to adjust the camera's position for optimal balance.
3. Slide the quick release plate with the camera into the gimbal's camera mount.
4. Lock the quick release mechanism to secure the camera.



Figure 4.2: The quick release plate and camera mounting area, showing adjustment points for camera placement.

4.3 Balancing the Camera

Proper balancing is critical for optimal gimbal performance and to prevent motor strain. The camera must

be balanced on all three axes (tilt, roll, and pan) before powering on the gimbal.

1. **Tilt Axis Balance:** Adjust the camera's forward/backward position on the quick release plate until the camera remains level when tilted forward or backward.
2. **Roll Axis Balance:** Adjust the camera's left/right position until the camera remains level when rotated along its roll axis.
3. **Pan Axis Balance:** Hold the gimbal horizontally and adjust the pan arm until the gimbal remains stable without drifting to one side.

***Note:** Cameras with heavy front lenses may require careful adjustment or an offset bracket to achieve proper balance. Ensure the camera can move freely without obstruction from the gimbal body.*

5. OPERATION

5.1 Powering On/Off

Press and hold the illuminated ON-OFF switch located on the handle to power the gimbal on or off. The indicator light will show the battery status.

5.2 Operating Modes

The DS1 Beholder Gimbal typically features multiple operating modes to suit various shooting scenarios. Refer to the quick start guide or manufacturer's website for specific mode activation and functionality. Common modes include:

- **Follow Mode:** The camera smoothly follows the operator's pan and tilt movements.
- **Lock Mode:** The camera maintains a fixed direction, regardless of the operator's movements.
- **Inverted Mode:** Allows for underslung shots by holding the gimbal upside down.

***Tip:** Practice with the gimbal in a safe environment to familiarize yourself with its controls and modes before critical shoots.*

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the gimbal. Avoid using liquid cleaners or solvents.
- **Storage:** Store the gimbal in its protective carry case in a cool, dry place when not in use. Remove batteries if storing for extended periods.
- **Battery Care:** Charge batteries fully before each use. Do not overcharge or completely drain the batteries.
- **Firmware Updates:** Periodically check the Ikan website for any available firmware updates to ensure optimal performance and compatibility.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Gimbal shakes or vibrates uncontrollably.	Improper camera balance; camera weight exceeds limit; motor calibration issue.	Ensure camera is perfectly balanced on all axes. Verify camera weight is within 3.7 lbs. Perform a motor calibration as per manufacturer instructions.


Problem	Possible Cause	Solution
Gimbal does not power on.	Depleted batteries; incorrect battery installation.	Charge batteries fully. Re-install batteries, ensuring correct polarity.
Camera movement is not smooth.	Poor balance; obstruction; low battery.	Re-balance the camera. Check for any physical obstructions. Ensure batteries are sufficiently charged.
Gimbal motors make unusual noises.	Overloaded motors due to imbalance or excessive weight.	Immediately power off the gimbal. Re-balance the camera. Reduce camera payload if it exceeds the specified limit.


8. SPECIFICATIONS

Feature	Detail
Model Number	DS1
Brand	Ikan
Product Dimensions	3.9 x 14.8 x 7.9 inches (9.9 x 37.6 x 20.1 cm)
Item Weight	4 pounds (1.8 kg)
Compatible Devices	Cameras (DSLRs and Mirrorless up to 3.7 lbs / 1.7 kg)
Batteries	3 Lithium Ion batteries (Type 18650, included)
Tripod Mount	3/8" - 16 Socket
Color	Black
Manufacturer	Ikan
UPC	847983015429, 715658504151

9. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please contact Ikan customer support directly. Details can typically be found on the official Ikan website or within the product packaging.
Website: www.ikancorp.com

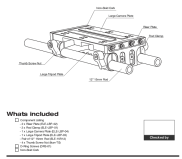
 PT-Elite-UL Universal Large Tablet Teleprompter QUICKSTART GUIDE ikan	ikan PT-Elite-UL Universal Large Tablet Teleprompter Quickstart Guide This quickstart guide from ikan Corporation details the assembly and usage of the PT-Elite-UL Universal Large Tablet Teleprompter. Learn about included components, setup steps, and warranty conditions for professional teleprompting.
 ELEMENTS SUPER FLY STARTER FLY KIT QUICKSTART GUIDE ikan	Elements Super Fly Starter Fly Kit Quickstart Guide - Ikan Quickstart guide for the Ikan Elements Super Fly Starter Fly Kit. Learn how to assemble your camera rig with detailed parts list and step-by-step instructions for the handle, cheese plate, and cold shoe components.
 ELE-LBP (EV2 Adjustable Camcorder Baseplate) QUICKSTART GUIDE ikan	ikan ELE-LBP (EV2) Adjustable Camcorder Baseplate Quickstart Guide This quickstart guide provides instructions for setting up and using the ikan ELE-LBP (EV2) Adjustable Camcorder Baseplate, including component listing, adjustment points, and quick release mounting options.
 PT4200 Quick Start Guide ikan	Ikan PT4200 Professional 12" Beam Splitter Teleprompter Quick Start Guide Quick start guide for the Ikan PT4200 professional 12-inch beam splitter teleprompter. Includes setup instructions, specifications, features, and warranty information.
 IDMX500T 500 LED Tungsten Studio Light with DMX Control QUICKSTART GUIDE ikan	IDMX500T 500 LED Tungsten Studio Light with DMX Control - Quickstart Guide Quickstart guide for the ikan IDMX500T 500 LED Tungsten Studio Light with DMX Control. Includes setup instructions, what's included, and warranty information.
 AX20-FK-V2 Atlas 21.5" Field and Studio 4K Monitor QUICK START GUIDE ikan	Ikan AX20-FK-V2 Atlas 21.5" Field and Studio 4K Monitor Quick Start Guide Quick start guide for the Ikan AX20-FK-V2 Atlas 21.5" Field and Studio 4K Monitor, detailing its features, specifications, and what's included.

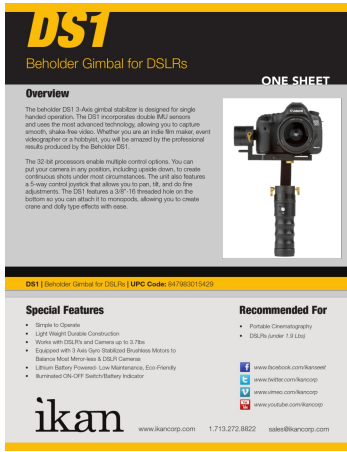

[pdf] Guide

Beholder Gimbal for DSLRs cvc de The beholder DS1 3 Axis gimbal stabilizer is designed single handed operation incorporates double IMU sensors ikan quickstart guide english OS ikancorp Downloads **DS1** Beholder Gimbal for DSLRs Overview The beholder **DS1** 3-Axis gimbal stabilizer is designed for single handed operation. The **DS1** incorporates double IMU sensors and uses the most advanced technology, allowing you to capture smooth, shake-free video. Whether you are an indie film maker, event videog...

lang:en score:28 filesize: 205.33 K page_count: 2 document date: 2016-01-08

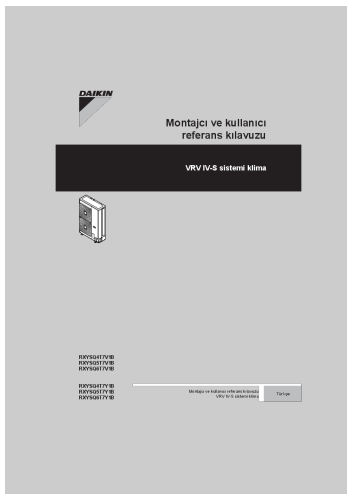

[pdf] Reference Guide Guide

4PTR404676 1 2015 05 RXYSQ4 5 6T7V1B Y1B Installer and reference guide Installation Manuals Turkish daikin eu content dam document library installation manuals ac vrv rxysq tv1 Montajci ve kullanıcı referans kılavuzu VRV IV-S sistemi klima RXYSQ4T7V1B RXYSQ5T7V1B RXYSQ6T7V1B ... H1P H2P H3P BS1 BS2 MODE SET H4P H5P H6P H7P H8P BS3 BS4 BS5 RETURN TEST RESET ON OFF **DS1** 12 Y1 A2P A1P MODE H1P TEST/ HWL H2P IND MASTER SLAVE L.N.O.P. DEMAND MULTI H3P H4P H5P H6...


lang:id score:27 filesize: 4.02 M page_count: 64 document date: 2015-07-13



[pdf] Reference Guide Guide

4PTR404225 1 2015 03 RXYSQ8 10 12TMY1B Installer and reference guide Installation Manuals Turkish daikin eu content dam document library installation manuals ac vrv rxysq ty1 Montajci ve kullanıcı referans kılavuzu VRV IV-S sistemi klima RXYSQ8TMY1B RXYSQ10TMY1B RXYSQ12TMY1 ... 2.2 Di niteyi amak iin sayfa 16. 7.2.3 Saha ayar bileenleri BLDRM DIP anahtarları A1P zerindeki **DS1** ve/veya DS2 kullanılmaz. Fabrika ayarını DETRMEYN. Saha ayarlarını yapmak iin bileenler modele ...

lang:id score:27 filesize: 5.77 M page_count: 72 document date: 2015-07-13

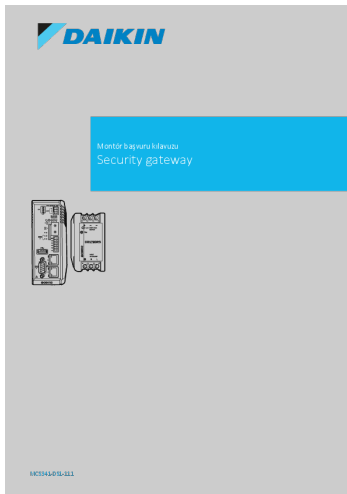

[pdf] Reference Guide Guide

Installer reference guide MCS341 DS1 111 security gateway 4P529063 1A Turkish Daikin Cloud Service daikin eu content dam document library ctrl daikincloudservice |||

Montr bavuru kilavuzu Security gateway MCS341-**DS1**-111 indekiler indekiler 1 Bu dokman hakkında 3 2 Montaj 5 2.1 Genel gvenlik nlemleri

5 2.1.1 Gen...

lang:id **score:27** filesize: 6.99 M page_count: 48 document date: 2021-02-16




[pdf] User Manual Frequently Asked Questions Specifications Diagram

ncheng Beholder EC1 cvc de 3 Axis handheld gimbal stabilizer The is the newest upgrade to popular DS1 It designed IKAN BEHOLDER User Manual 28218 ikanCorporationEC1UserManual fullcompass 80 common files ikancorp Downloads

3-axis Handheld Gimbal Stabilizer Beholder EC1 Instruction Manual Encoders V1.0 2016.07 1 Table ... is handheld gimbal stabilizer The Beholder EC1 is the newest upgrade to the popular gimbal Beholder **DS1**. It is designed specifically for professional filmmakers looking for a single handheld stabilize...

lang:en **score:26** filesize: 1.26 M page_count: 24 document date: 2016-07-14

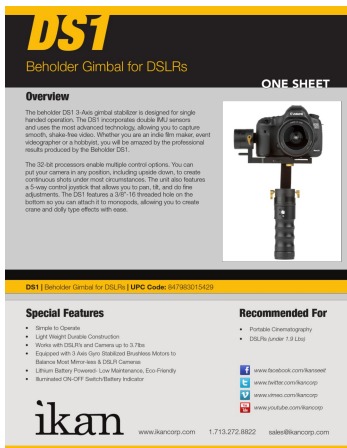

[pdf] Guide

Beholder Gimbal for DSLRs CVCThe beholder DS1 3 Axis gimbal stabilizer is designed single handed Equipped with Gyro Stabilized Brushless Motors to Balance Most ikan quickstart guide englishcvc de ikan english srsltid AfmBOOpLZP8yVPK7Akj9zU9jI55wyOziScfKjYbxudJEhvuSaxrGVuLm englishikan AfmBOOpLZP8yVPK7Akj9zU9jI55wyOziScfKjYbxudJEhvuSaxrGVuLmcvc AfmBOOrCTtwrp0hVOU240SeMoTz3IHJKVxFMz2nnanzlqf Y8rfTdVuo Y8rfTdVuocvc AfmBOOr2KT3UIIYdLkfu53Epe42ZWhZFbu 4HeeKc6GA j1KBtl7vG4m j1KBtl7vG4mcvc AfmBOOrLjDdl5Y8 X9AKjHr5EaFkeHXIQjRsClvKdsF8Zw8287d41cAh |||

DS1 Beholder Gimbal for DSLRs Overview The beholder **DS1** 3-Axis gimbal stabilizer is designed for single handed operation. The **DS1** incorporates double IMU sensors and uses the most advanced technology, allowing you to capture smooth, shake-free video. Whether you are an indie film maker, event videog...

lang:en **score:26** filesize: 205.33 K page_count: 2 document date: 2016-01-08



[\[pdf\]](#) Reference Guide Guide

4PTR384974 1 2015 01 EHBH X11 16CB ERLQ011 016CA ERHQ011 016BA Installer reference guide
Installation Manuals Turkish daikin eu content dam document library installation manuals heat air to water
pump low temperature ehbh cb

Montr bavuru kilavuzu Daikin Altherma Dk sıcaklıkli split ERHQ011-014-016BA ERLQ011-014-016CA EH ... in . 3 Simgeler aaiya bakın . 4 X6A ya kablo balantıları in seenek kilavuzuna bakın. 5 BS1-BS4 ve **DS1** anahtarlarının kullanımı konusunda kablo eması etiketine bakın servis kapainin arka tarafında

lang:id **score:24** filesize: 9.92 M page_count: 148 document date: 2015-06-04




[\[pdf\]](#) Reference Guide Guide

4PTR384975 1 2015 01 EHVH X11 16CB ERLQ011 016CA ERHQ011 016BA Installer reference guide
Installation Manuals Turkish qa denv daikin eu content dam document library installation manuals heat air to
water pump low temperature ehvh cb |||

Montr bavuru kilavuzu Daikin Altherma Dk sıcaklıkli split ERHQ011-014-016BA ERLQ011-014-016CA EH ... in . 3 Simgeler aaiya bakın . 4 X6A ya kablo balantıları in seenek kilavuzuna bakın. 5 BS1-BS4 ve **DS1** anahtarlarının kullanımı konusunda kablo eması etiketine bakın servis kapainin arka tarafında

lang:id **score:24** filesize: 10.07 M page_count: 144 document date: 2015-06-04

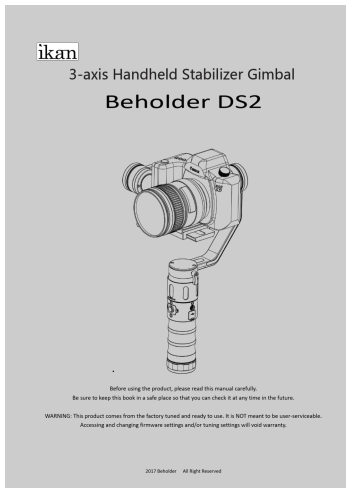

[\[pdf\]](#) User Manual Frequently Asked Questions Specifications Warranty

14 Ikan DS2 DGK E6 Beholder User Manual 3 Axis Gimbal and DH7 Monitor Kit 371179 bhphotovideo lit
files |||

V1.0 2017.07 3-axis Handheld Stabilizer Gimbal Beholder DS2 Instruction Manual Before using the pro ... hieve a very stable shoot. The Ikan Beholder DS2 is the newest upgrade to the popular Ikan Beholder **DS1** gimbal. It is a three-axis gyrostabilizer with an encoder motor and a 32-bit control board. The ...

lang:en **score:23** filesize: 1.34 M page_count: 19 document date: 2017-09-07



[pdf]

Dual Grip Gimbal Handle ONE SHEET Overview Controlling your MS1 DS1 or EC1 Beholder is a breeze with Ikan s DGH Handle! Constructed out of durable lightweight aluminum the sturdy View ikancorp 1 713 272 8822 sales@ikancorp Special Features Compatible ikan and Gimbals One Sheet cvc de ||| DGH Dual Grip Gimbal Handle Overview Controlling your MS1, **DS1** or EC1 Beholder Gimbal is a breeze with Ikan s DGH Dual Grip Gimbal Handle Constructed out of durable, lightweight, aluminum, the DGH s sturdy frame is specifically designed to make gimbal operation much easier. After mounting your MS1,... lang:en score:23 filesize: 182.82 K page_count: 2 document date: 2016-10-12



[pdf] Reference Guide Guide

4PTR404676 1A 2016 03 RXYSQ TV1 TY1 Installer and user reference guides Turkish Daikin daikin eu content dam document library guide ac vrv ||| Montajci ve kullanıcı referans kılavuzu VRV IV-S sistemi klima RXYSQ4T7V1B RXYSQ5T7V1B RXYSQ6T7V1B ... H1P H2P H3P BS1 BS2 MODE SET H4P H5P H6P H7P H8P BS3 BS4 BS5 RETURN TEST RESET ON OFF **DS1** 12 Y1 A2P A1P MODE H1P TEST/ HWL H2P IND MASTER SLAVE L.N.O.P. DEMAND MULTI H3P H4P H5P H6... lang:id score:21 filesize: 4.33 M page_count: 64 document date: 2016-03-14



[pdf]

Dual Grip Gimbal Handle Full Compass SystemsControlling your MS Pro DS1 or EC1 Beholder is a breeze with Ikan s DGH Handle! Comfort handles help reduce fatigue and loss 31123 ikanCorporationDGHDualGripGimbalHandleOneSheetfullcompass common files 31123 ikanCorporationDGHDualGripGimbalHandleOneSheet srsltid AfmBOorS zGtUjVFABuA0TkeZo7m3l2Q4 qtoZLgLG fnEMgst4c019 ||| DGH Dual Grip Gimbal Handle Overview Controlling your MS-Pro, **DS1**, or EC1 Beholder Gimbal is a breeze with Ikan s DGH Dual Grip Gimbal Handle Constructed out of durable, lightweight, aluminum, the DGH s sturdy frame is specifically designed to make gimbal operation much easier. After mounting your ... lang:en score:21 filesize: 167.43 K page_count: 2 document date: 2017-11-29



[\[pdf\]](#) Reference Guide Guide

4PTR404225 1B 2016 03 RXYSQ TY1 Installer and user reference guides Turkish daikin eu content dam document library guide ac vrv rxysq ty1

Montajcı ve kullanıcı referans kılavuzu VRV IV-S sistemi klima RXYSQ8TMY1B RXYSQ10TMY1B RXYSQ12TMY1 ... 2.2 Di niteyi amak iin sayfa 17. 7.2.3 Saha ayar bileenleri BLDRM DIP anahtarlari A1P zerindeki **DS1** ve/veya DS2 kullanilmaz. Fabrika ayarini DETRMEYN. Saha ayarlarini yapmak iin bileenler modele ...

lang:id score:21 filesize: 5.87 M page_count: 72 document date: 2016-03-14




[\[pdf\]](#) Reference Guide Guide

4PTR353997 1B 2016 02 REYQ T REMQ Installer and user reference guides Turkish Daikin daikin eu content dam document library guide ac vrv reyq t |||

Montajcı ve kullanıcı referans kılavuzu VRV IV sistemi klima REYQ8T7Y1B REYQ10T7Y1B REYQ12T7Y1B REY ... Saha ayar bileenleri 7 segmentli ekranlar, butonlar ve DIP anahtarlarinin konumu: ab BS1 BS2 BS3 **DS1** DS2 X27A BS1 BS2 BS3 **DS1**, DS2 a b MOD: Ayar modunu deitirmek iin AYAR: Saha ayari iin GER DN:...

lang:id score:21 filesize: 8.82 M page_count: 88 document date: 2016-03-14

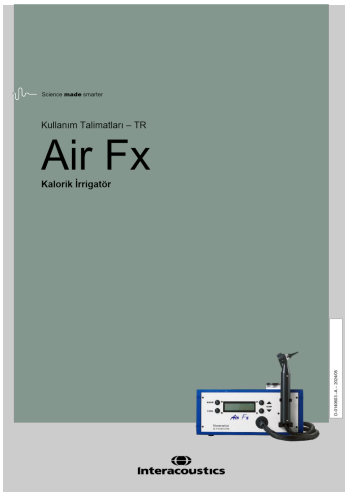


[\[pdf\]](#) Instructions

1 Kullanım Talimatları TR Kalorik İrrigatör Interacoustics 2 İrrigatörün üst kısmındaki su rezervuarının kapağını çıkarın Kapağı 12 AC güç kablosunu irrigatörün arkasına takın ve kablosunun yanındaki D 0140603 A 2024 05 Instructions for Use Air Fx Irrigator interacoustics images files manuals tr |||

Science made smarter Kullanım Talimatları TR Air Fx Kalorik rrigatr D-0140603 A 2024/05 Telif h ... alorik irrigratr ve sıcaklık kontroll hava yalnızca intakt ciltle temas iin tasarlanmıştır. Bu yüzden, **DS1** tarafından kullanılan Spaulding sınıflandırmasına göre, kontaminasyon kontrol açısından kritik olm...

lang:id score:20 filesize: 781.67 K page_count: 24 document date: 2024-05-23

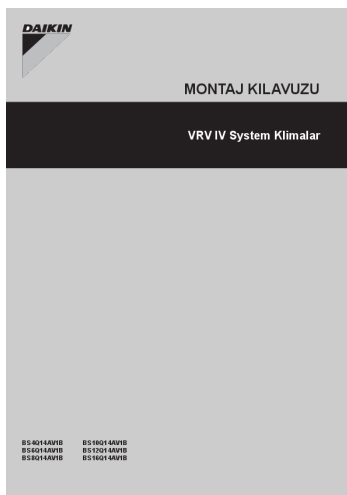


[\[pdf\]](#) User Manual Declaration of Conformity

BS Q14A 4PTR454403 1 Installation manual Turkish Q14AV1B Daikin daikin eu content dam document library
installation manuals ac vrv bs q14a |||

MONTAJ KILAVUZU VRV IV System Klimalar BS4Q14AV1B BS6Q14AV1B

BS8Q14AV1B BS10Q14AV1B BS12Q14AV1B ... alantisini kesin. 2. Aaidaki tabloya
bakarak, karilik gelen branman portlari iin DIP anahtarlarini **DS1**, DS2 arayin. 3. alima
tamamlandiktan sonra kontrol kutusunun kapaini kapattiinizdan emin olun. ...
lang:it **score:20** filesize: 1.97 M page_count: 28 document date: 2016-07-26

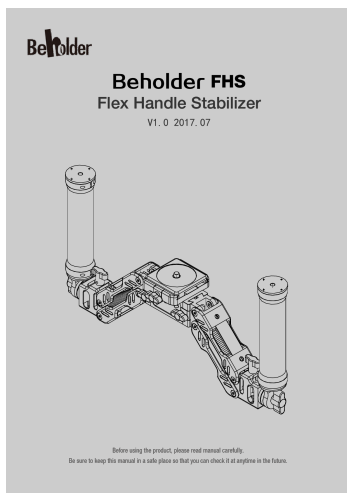


[\[pdf\]](#) User Manual Instructions Specifications

Beholder FHS Flex Handle Stabilizer V1 0 2017 07 Before using the product please read manual carefully Be sure to keep this in a safe place so that you can check it at anytime future A1m1fsX9oWL images na ssl amazon I lkan The stabilizer has quick release plate making easy for users switch between two handed and single operation fhs cvp

Beholder FHS Flex Handle Stabilizer V1.0 2017.07 Before using the product, please read manual carefu ... / 800g Package Weight2.6 lbs / 1.18 kg Max Payload15.8 lbs / 7.15kg Compatible GimbalsMS1 / MSPRO / **DS1** / DS2 / EC1 / DS2-A 3 2017 Beholder Operating Instructions 1. Loosen the locking screws on th...

lang:en score:20 filesize: 1.31 M page_count: 9 document date: 2017-08-16

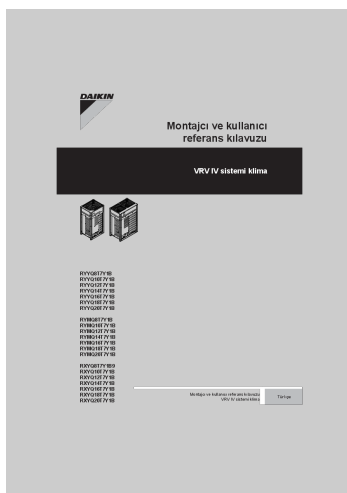

[\[pdf\]](#) Reference Guide Guide

4PTR370475 1A 2016 02 RYYQ T RXYQ T9 RYMQ Installer and user reference guides Turkish Daikin daikin
eu content dam document library guide ac vrv |||

Montajci ve kullanıcı referans kılavuzu VRV IV sistemi klima RYYQ8T7Y1B

YYYQ10T7Y1B RYYQ12T7Y1B RYY ... n gerekletirilmesi talep iletimi, dk grlt, vs. . Dip anahtarlar alitirilarak unlar yapılabilir: **DS1 1** : SOUTMA/ISITMA seici soutma/isitma seici anahtarının kilavuzuna bakın . KAPALI = takili...

lang: id score: 20 filesize: 9.48 M page_count: 92 document date: 2016-03-29



[\[pdf\]](#) Reference Guide Guide

4PTR351748 1D 2016 02 EGSQH A9W Installer Reference Guide Turkish Daikin daikin eu content dam document library reference guide heat ground to water pump egsh a9w |||

Montr bavuru kılavuzu Daikin Altherma toprak kaynakli isi pompasi EGSQH10S18AA9W
Montr bavuru kila ... 5A:1 2 3 4 5 6 X4A:1 2 3 4 A8P S1S S2S S3S S6S S7S S8S S9S
B1L X80A:1 2 3 4 5 6 7 8 9 10 11 12 **DS1** ON OFF 1234 1 2 3 4 5 X801M Talep PCB si
Yalnizca talep PCB si seenei iin G sinirlendirme dij...

lang:id score:20 filesize: 4.66 M page_count: 96 document date: 2016-03-14



[\[pdf\]](#) Reference Guide Guide

Installer reference guide ERHQ BA ERLQ CA EHVZ16S18CB 4PTR401677 1B Reference Guide Turkish EHVZ CB3V Daikin daikin eu content dam document library heat |||

Montr bavuru kılavuzu Daikin Altherma Dk sıcaklikli split ERHQ011-014-016BA ERLQ011-014-016CA EH ... imgeler aaiya bakın . 4 X6A ve X77A ya kablo balantıları iin seenek kılavuzuna bakın. 5 BS1-BS4 ve **DS1** anahtarlarının kullanımı konusunda kablo emasi etiketine bakın servis kapainin arka tarafında

lang:id score:20 filesize: 7 M page_count: 92 document date: 2017-06-23



[\[pdf\]](#) Reference Guide Guide

4PTR408445 1 2015 07 RKXYQ T Installer and user reference guides Turkish SB Daikin daikin eu content dam document library guide ac vrv sb rkxyq t |||

Montajcı ve kullanıcı referans kılavuzu Bina ii montaj iin VRV IV isi pompasi
RKXYQ5T7Y1B RDXYQ5T7V ... H4P H5P H6P H7P MULTI H8P BS1 MODE X1M X2M
BS2 BS3 BS4 BS5 SET RETURN TEST RESET ON OFF **DS1** 12 **DS1** BS1-BS5 H1P-H7P
H8P DIP anahtarları Basma butonlar 7 LED li ekran Balangi ilemleri sir...

lang:id score:20 filesize: 4.25 M page_count: 64 document date: 2015-09-24



[\[pdf\]](#) Reference Guide Guide

Installer reference guide ERHQ BA ERLQ CA EHVZ16S18CB 4PTR401677 1C Reference Guide Turkish EHVZ CB3V Daikin daikin eu content dam document library heat |||

Montr bavuru kılavuzu Daikin Altherma Dk sıcaklıklı split ERHQ011-014-016BA ERLQ011-014-016CA EH ... imgeler aaiya bakın . 4 X6A ve X77A ya kablo balantıları iin seenek kılavuzuna bakın. 5 BS1-BS4 ve **DS1** anahtarlarının kullanımı konusunda kablo emasi etiketine bakın servis kapainin arka tarafında

lang:id **score:20** filesize: 5.83 M page_count: 92 document date: 2018-03-16



[Daikin Altherma Düşük Sıcaklıklı Split Montör Başvuru Kılavuzu](#)

Daikin Altherma düşük sıcaklıklı split ısı pompası sistemlerinin montajı, yapılandırılması, bakımı ve sorun gidermesi için kapsamlı bir rehber. Bu kılavuz, yetkili montörlere yönelik teknik talimatlar ve güvenlik önlemleri sunar.

lang:id **score:19** filesize: 10.47 M page_count: 144 document date: 2016-04-12



[\[pdf\]](#) Reference Guide Guide

Installer reference guide AZQS B 8 V1 BY1 4PTR385529 1C 2019 04 Turkish daikin eu content dam document library ac sky air

Montr bavuru kılavuzu Split sistem klimalar AZQS100B8V1B AZQS125B8V1B AZQS140B8V1B AZQS100B7Y1B AZQ ... Renkler aiklayıcı bilgilere bakın . 3 Bu kablo emasi yalnızca di nite iin geerlidir. 4 BS1-BS4 ve **DS1** anahtarlarının nasıl kullanılacağı bilgisi iin kablo emasi etiketine servis kapainin arkasında b...

lang:id **score:19** filesize: 5.4 M page_count: 28 document date: 2019-08-21



[pdf] Reference Guide Guide

4PTR384974 1A 2016 03 ERHQ011 016BA ERLQ011 016 EHBH11 16CB EHBX11 Installer Reference Guide

Turkish EHBH CB Daikin daikin eu content dam document library reference guide heat air to water pump low temperature |||

Montr bavuru kilavuzu Daikin Altherma Dk sicaklikli split ERHQ011-014-016BA ERLQ011-014-016CA EH ... in . 3 Simgeler aaiya bakın . 4 X6A ya kablo balantilari iin seenek kilavuzuna bakın. 5 BS1-BS4 ve **DS1** anahtarlarinin kullanimi konusunda kablo emasi etiketine bakın servis kapainin arka tarafında

lang:id **score:19** filesize: 10.14 M page_count: 148 document date: 2016-03-14




[pdf] Reference Guide Guide

4PTR418663 1 2016 02 RZAG LV1 Installer reference guide Turkish Daikin daikin eu content dam document

library ac sky air rzag lv1 |||

Montr bavuru kilavuzu Split sistem klimalar RZAG71L7V1B RZAG100L7V1B RZAG125L7V1B RZAG140L7V1B Mon ... X1M L N Z1C N=5 GRN/YLW RED BLU LA NA F2U F1U H2P H4P H6P A2P 1 2 3 X1M H1P H3P H5P H7P **DS1** ON X205A OFF 1 2 BS1 BS2 BS3 BS4 Z2C N=3 Y1E M M Y3E Z3C R1T R2T R3T R4T R5T R6T N=1 Y...

lang:id **score:19** filesize: 5.03 M page_count: 40 document date: 2016-04-05

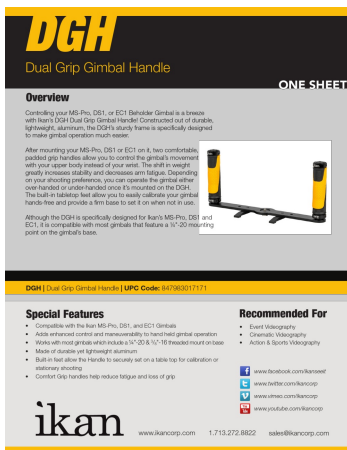


[pdf]

ikan Corporation DGH Dual Grip Gimbal Handle One Sheet Full Compass Systems 31123

ikanCorporationDGHDualGripGimbalHandleOneSheet fullcompass common files |||

DGH Dual Grip Gimbal Handle Overview Controlling your MS-Pro,**DS1**, or EC1 Beholder Gimbal is a breeze with Ikan s DGH Dual Grip Gimbal Handle Constructed out of durable, lightweight, aluminum, the DGH s sturdy frame is specifically designed to make gimbal operation much easier. After mounting your ...

lang:en **score:19** filesize: 167.43 K page_count: 2 document date: 2017-11-29

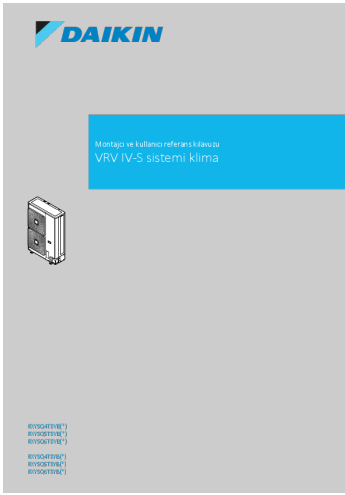

[\[pdf\]](#) Reference Guide Guide

User reference guide Installer RXYSQ T8V T8Y 4PTR482277 1B and user Turkish Daikin daikin eu content dam document library ac vrv |||

Montajci ve kullanıcı referans kılavuzu VRV IV-S sistemi klima RXYSQ4T8VB *

RXYSQ5T8VB * RXYSQ6T8V ... ıtma/ısıtma geii uzaktan kumanda anahtarı kullanılması durumunda, ana PCB üzerindeki DIP anahtarı 1 **DS1**-1 AIK konuma getirilmesi gerekir.

Balatmak iin 1 letim modunu, ısıtma/ısıtma gei anahtarı ile...

lang:id **score:18** filesize: 5.27 M page_count: 136 document date: 2020-11-30



[\[pdf\]](#) Reference Guide Guide

Installer reference guide AZQS B 8 V1 A BY1 4PTR385529 1B 2016 10 Turkish Daikin daikin eu content dam document library ac sky air |||

Montr başvuru kılavuzu Split sistem klimalar AZQS100B8V1B AZQS125B8V1B

AZQS140B8V1B AZQS100B7Y1B AZQ ... Renkler açıklayıcı bilgilere bakın . 3 Bu kablo emasi yalnızca di nite iin geerlidir. 4 BS1-BS4 ve **DS1** anahtarlarının nasıl kullanılacağı bilgisi iin kablo emasi etiketine servis kapainin arkasında b...

lang:id **score:18** filesize: 5.51 M page_count: 28 document date: 2016-12-22




[\[pdf\]](#) Quick Start Guide Reference Guide Guide

Installer reference guide RZQG L9V1 L 8 Y1 RZQSG L3 9V1 4PTR385522 1B 2019 04 Turkish daikin eu content dam document library ac sky air

Montr başvuru kılavuzu Split sistem klimalar RZQG71L9V1B RZQG100L9V1B

RZQG125L9V1B RZQG140L9V1B RZQG ... Renkler açıklayıcı bilgilere bakın . 3 Bu kablo emasi yalnızca di nite iin geerlidir. 4 BS1-BS4 ve **DS1** anahtarlarının nasıl kullanılacağı bilgisi iin kablo emasi etiketine servis kapainin arkasında b...

lang:id **score:18** filesize: 5.75 M page_count: 36 document date: 2019-08-21

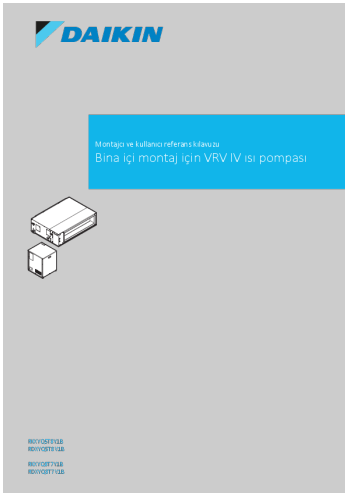


[\[pdf\]](#) Reference Guide Guide

User reference guide Installer RDXYQ T8 RKXYQ 4PTR499898 1A and user Turkish daikin eu content dam document library ac vrv rkxyq t

Montajci ve kullanıcı referans kılavuzu Bina içi montaj için VRV IV ısı pompası RKXYQ5T8Y1B RDXYQ5T8V1 ... ısıtma/soğutma için uzaktan kumanda anahtarı kullanılması durumunda, ana PCB üzerindeki DIP anahtarı 1 **DS1**-1 AIK konuma getirilmesi gerekir. Balatmak için 1 letim modunu, ısıtma/soğutma için anahtarı ile...

lang:id score:18 filesize: 8.14 M page_count: 156 document date: 2020-11-30

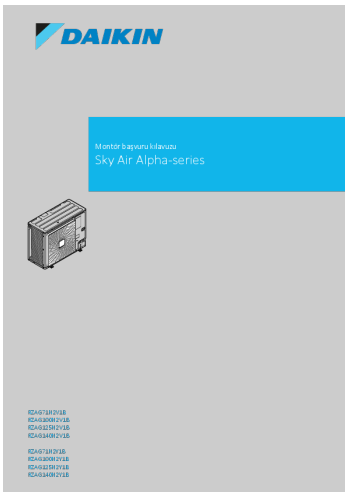

[\[pdf\]](#) Reference Guide Guide

Installer reference guide RZAG NV1 NY1 4PTR695307 1 Turkish Daikin daikin eu content dam document library ac sky air |||

Montaj ve kullanıcı referans kılavuzu Sky Air Alpha-series RZAG71N2V1B RZAG100N2V1B RZAG125N2V1B RZAG140N2V1B RZAG71 ... ısıtma/soğutma için uzaktan kumanda anahtarı kullanılması durumunda, ana PCB üzerindeki DIP anahtarı 1 **BS1**-BS3 ve **DS1** anahtarlarının nasıl kullanılacağı bilgisi için kablo emasi etiketine n plakanın arkasında bulunur...

lang:id score:18 filesize: 8.37 M page_count: 84 document date: 2022-06-28



[\[pdf\]](#) Reference Guide Guide

Installer reference guide AZAS MV1 MY1 4PTR486048 1C 2019 04 Turkish daikin eu content dam document library ac sky air

Montaj ve kullanıcı referans kılavuzu Sky Air Active-series AZAS71M2V1B AZAS100M7V1B AZAS125M7V1B AZAS140M7V1B AZAS ... ısıtma/soğutma için uzaktan kumanda anahtarı kullanılması durumunda, ana PCB üzerindeki DIP anahtarı 1 **BS1**-BS3 ve **DS1** anahtarlarının nasıl kullanılacağı bilgisi için kablo emasi etiketine n plakanın arkasında bulunur...

lang:id score:18 filesize: 3.86 M page_count: 32 document date: 2019-08-22



[\[pdf\]](#) Reference Guide Guide

User reference guide Installer RXYQQ U 4PTR546229 1A and user Turkish Daikin daikin eu content dam document library ac vrv rxyqq u |||

Montajcı ve kullanıcı referans kılavuzu VRV IV Q serisi ısı pompası RXYQQ8U7Y1B* RXYQQ10U7Y1B* RXYQ ... ıtma/ısıtma geii uzaktan kumanda anahtarı kullanılması durumunda, ana PCB zerindeki DIP anahtarı 1 **DS1**-1 AIK konuma getirilmesi gerekir. Balatmak iin 1 letim modunu, soutma/ısıtma gei anahtarı ile...

lang:id **score:18** filesize: 7.77 M page_count: 164 document date: 2020-11-30




[\[pdf\]](#) Reference Guide Guide

User reference guide Installer RXMLQ T RXYLQ 4PTR543427 1A and user Turkish Daikin daikin eu content dam document library ac vrv |||

Montajcı ve kullanıcı referans kılavuzu VRV IV sistemli klima RXMLQ8T7Y1B* RXYLQ10T7Y1B* RXYLQ12T7Y1B ... ıtma/ısıtma geii uzaktan kumanda anahtarı kullanılması durumunda, ana PCB zerindeki DIP anahtarı 1 **DS1**-1 AIK konuma getirilmesi gerekir. Balatmak iin 1 letim modunu, soutma/ısıtma gei anahtarı ile...

lang:id **score:18** filesize: 6.66 M page_count: 160 document date: 2020-11-30

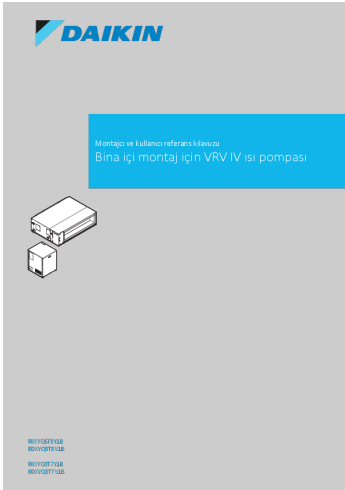

[\[pdf\]](#) Reference Guide Guide

User reference guide Installer RDXYQ T 8 RKXYQ and user 4PTR499898 1B Turkish Daikin daikin eu content dam document library ac vrv rkxyq t |||

Montajcı ve kullanıcı referans kılavuzu Bina ii montaj iin VRV IV ısı pompası RKXYQ5T8Y1B RDXYQ5T8V1 ... ıtma/ısıtma geii uzaktan kumanda anahtarı kullanılması durumunda, ana PCB zerindeki DIP anahtarı 1 **DS1**-1 AIK konuma getirilmesi gerekir. Balatmak iin 1 letim modunu, soutma/ısıtma gei anahtarı ile...

lang:id **score:18** filesize: 7.55 M page_count: 140 document date: 2022-02-15



[\[pdf\]](#) Reference Guide Guide

User reference guide Installer RYYQ U RYMQ RXYQ 4PTR546228 1B and user Turkish daikin eu content dam document library ac vrv

Montajci ve kullanıcı referans kılavuzu VRV IV isi pompası RYYQ8U7Y1B*

RYYQ10U7Y1B* RYYQ12U7Y1B* R ... utma/isitma geii uzaktan kumanda anahtari kullanilmasi durumunda, ana PCB zerindeki DIP anahtari 1 **DS1**-1 AIK konuma getirilmesi gerekir. Balatmak iin 1 letim modunu, soutma/isitma gei anahtari ile a...

lang:id score:18 filesize: 8.51 M page_count: 180 document date: 2020-11-30



[\[pdf\]](#) Reference Guide Guide

Installer reference guide RZAG MV1 MY1 4PTR486046 1C 2019 04 Turkish Daikin daikin eu content dam
document library ac sky air |||

Montr bavuru kilavuzu Sky Air Alpha-series RZAG71M7V1B RZAG100M7V1B

RZAG125M7V1B RZAG140M7V1B RZAG7 ... ha kablosu Modele gre kablo balantisi

Seenek Anahtar kutusu Baski devre karti NOTLAR: 1 BS1-BS3 ve **DS1** anahtarlarinin nasil kullanilacai bilgisi iin kablo emasi etiketine n plakanin arkasinda bulunu...

lang: id score: 17 filesize: 4.04 M page_count: 36 document date: 2019-08-22



[\[pdf\]](#) Reference Guide Guide

Installer reference guide RZASG MV1 MY1 4PTR486047 1C 2019 04 Turkish Daikin daikin eu content dam
document library ac sky air |||

Montr bavuru kilavuzu Sky Air Advance-series RZASG71M2V1B RZASG100M7V1B

RZASG125M7V1B RZASG140M7V1B ... ha kablosu Modele gre kablo balantisi Seenek

Anahtar kutusu Baski devre karti NOTLAR: 1 BS1-BS3 ve **DS1** anahtarlarinin nasil

kullanilacai bilgisi iin kablo emasi etiketine n plakanin arkasinda bulunu...

lang: id score: 17 filesize: 4.02 M page_count: 36 document date: 2019-08-22



[pdf] Quick Start Guide Reference Guide Guide

Installer reference guide RZQG L9V1 L 8 Y1 RZQSG L3 9V1 4PTR385522 1A 2016 10 Turkish daikin eu content dam document library ac sky air

Montr bavuru kılavuzu Split sistem klimalar RZQG71L9V1B RZQG100L9V1B RZQG125L9V1B RZQG140L9V1B RZQG ... Renkler aiklayici bilgilere bakın . 3 Bu kablo emasi yalnızca di nite iin geerlidir. 4 BS1-BS4 ve **DS1** anahtarlarının nasıl kullanılacai bilgisi iin kablo emasi etiketine servis kapainin arkasında b...

lang:id score:17 filesize: 5.76 M page_count: 36 document date: 2016-12-22



[pdf] Reference Guide Guide

User reference guide Installer RXYQQ U 4PTR546229 1 2018 09 and user Turkish Daikin daikin eu content dam document library ac vrv |||

Montajcı ve kullanıcı referans kılavuzu VRV IV Q serisi isi pompası RXYQQ8U7Y1B* RXYQQ10U7Y1B* RXY ... n gerekletirilmesi talep iletimi, dk grlt, vs. . Dip anahtarlar alitirilarak unlar yapılabilir: **DS1** 1 : SOUTMA/ISITMA seici soutma/isitma seici anahtarının kılavuzuna bakın . KAPALI = takili...

lang:id score:17 filesize: 5.8 M page_count: 64 document date: 2018-11-09



[pdf] Reference Guide Guide

Installer reference guide RZAG NV1 NY1 4PTR573381 1 2019 04 installer Turkish daikin eu content dam document library ac sky air |||

Montr bavuru kılavuzu Sky Air Alpha-series RZAG71N7V1B RZAG100N7V1B RZAG125N7V1B RZAG140N7V1B RZAG7 ... ha kablosu Modele gre kablo balantisi Seenek Anahtar kutusu Baski devre kartı NOTLAR: 1 BS1-BS3 ve **DS1** anahtarlarının nasıl kullanılacai bilgisi iin kablo emasi etiketine n plakanın arkasında bulunu...


lang:id score:17 filesize: 6.61 M page_count: 36 document date: 2019-09-02



[\[pdf\]](#) Reference Guide Guide

Installer reference guide AZAS MV1 MY1 4PTR486048 1B 2018 06 Turkish daikin eu content dam document library ac sky air


Montr bavuru kılavuzu Sky Air Active-series AZAS71M2V1B AZAS100M7V1B AZAS125M7V1B AZAS140M7V1B AZAS ... kablosu Modele gre kablo balantisi Seenek Anahtar kutusu Baski devre karti NOTLAR: 1 BS1-BS3 ve **DS1** anahtarlarinin nasil kullanilacai bilgisi iin kablo emasi etiketine n plakanin arkasinda bulunu...
lang:id **score:17** filesize: 4.1 M page_count: 32 document date: 2018-07-23

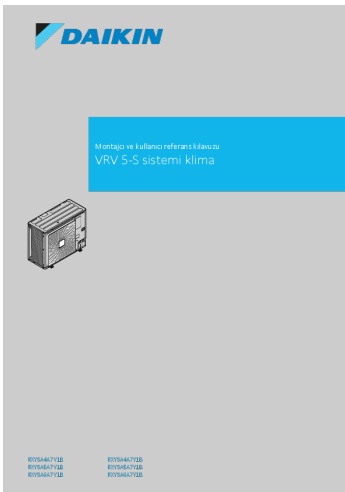

[\[pdf\]](#) Reference Guide Guide

User reference guide Installer RXYSA AV1 AY1 and user 4PTR600330 1B Turkish Daikin daikin eu content dam document library ac vrv |||


Montajcı ve kullanıcı referans kılavuzu VRV 5-S sistemi klima RXYSA4A7V1B RXYSA5A7V1B RXYSA6A7V1B ... utma/ısıtma geii uzaktan kumanda anahtari kullanilmasi durumunda, ana PCB zerindeki DIP anahtari 1 **DS1**-1 AIK konuma getirilmesi gerekir. Balatmak iin 1 letim modunu, soutma/ısıtma gei anahtari ile...
lang:id **score:17** filesize: 11.76 M page_count: 156 document date: 2021-01-06

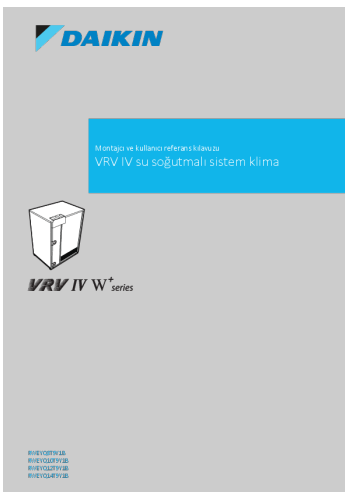

[\[pdf\]](#) Reference Guide Guide

User reference guide Installer RWEYQ T9 4PTR452191 1B and user Turkish Daikin daikin eu content dam document library ac vrv rweyq t9 |||

Montajcı ve kullanıcı referans kılavuzu VRV IV su soğutmalı sistem klima RWEYQ8T9Y1B RWEYQ10T9Y1B RWEYQ12T9Y1B RWEYQ14T9Y1B ... utma/ısıtma geii uzaktan kumanda anahtari kullanilmasi durumunda, ana PCB zerindeki DIP anahtari 1 **DS1**-1 AIK konuma getirilmesi gerekir. Balatmak iin 1 letim modunu, soutma/ısıtma gei anahtari ile...
lang:id **score:17** filesize: 5.91 M page_count: 148 document date: 2020-11-09

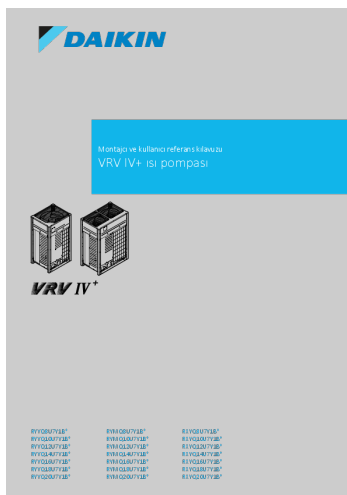

[\[pdf\]](#) Reference Guide Guide

User reference guide Installer RYYQ U RYMQ RXYQ 4PTR546228 1A and user Turkish daikin eu content dam document library ac vrv

Montajci ve kullanıcı referans kılavuzu VRV IV isi pompası RYYQ8U7Y1B*

RYYQ10U7Y1B* RYYQ12U7Y1B* R ... nin gerektirilmesi talep iletimi, dk grlt, vs. . Dip
anahtarlar alitirilerek unlar yapılabilir: **DS1 1** : SOUTMA/ISITMA seici soutma/isitma seici
anahtarının kilavuzuna bakın . KAPALI = takili dei...

lang:id score:17 filesize: 8.16 M page_count: 164 document date: 2020-01-08



[\[pdf\]](#) Reference Guide Guide


Title RZA D 4PTR573383 1 2019 04 Installer reference guide Turkish daikin eu content dam document library
ac sky air rza d

Montr bavuru kilavuzu Sky Air Advance-series RZA200D7Y1B RZA250D7Y1B Montr

bavuru kilavuzu Sky Air ... a Saha kablosu Kablo modele bali Opsiyon Anahtar kutusu

Baski devre kartı NOTLAR: 1 BS1-BS3 ve **DS1** DS2 anahtarlarının nasıl kullanılacağı bilgisi için kablo eması etiketine n plakanın arkasında bu...

lang: id score: 17 filesize: 8.34 M page_count: 36 document date: 2019-11-06

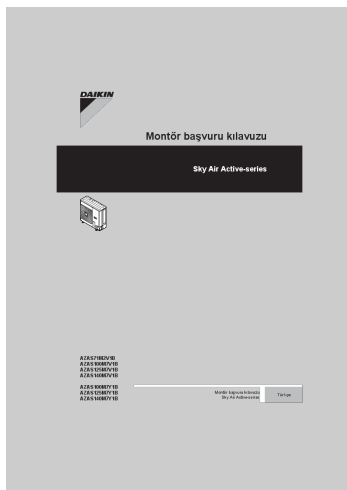

[\[pdf\]](#) Reference Guide Guide

Installer reference guide AZAS71 140MV1 AZAS100 140MY1 4PTR486048 1 2017 04 Turkish daikin eu
content dam document library ac sky air

Montr bavuru kilavuzu Sky Air Active-series AZAS71M2V1B AZAS100M7V1B

AZAS125M7V1B AZAS140M7V1B AZAS ... kablosu Modele gre kablo balantisi Seenek

Anahtar kutusu Baski devre karti NOTLAR: 1 BS1-BS3 ve **DS1** anahtarlarinin nasil

kullanilacai bilgisi iin kablo emasi etiketine n plakanin arkasinda bulunu...

lang: id score: 17 filesize: 3.84 M page_count: 32 document date: 2017-05-23



lang:it score:17 filesize: 2.11 M page_count: 24 document date: 2017-05-08