

[Manuals.plus](#) /

› [Conair](#) /

› Weight Watchers Scales by Conair Digital Bathroom Scale User Manual

Conair WW26

Weight Watchers by Conair Digital Bathroom Scale User Manual

Model: WW26

1. PRODUCT OVERVIEW

The Weight Watchers by Conair Digital Bathroom Scale (Model WW26) is designed to provide precise and accurate body weight measurements. Featuring a sleek design with tempered safety glass and a large blue backlit LCD, this scale offers clear and easy-to-read results. It is built for durability and has a maximum capacity of 400 lbs (182 kg). The scale operates on 3 AAA alkaline batteries, which are included.

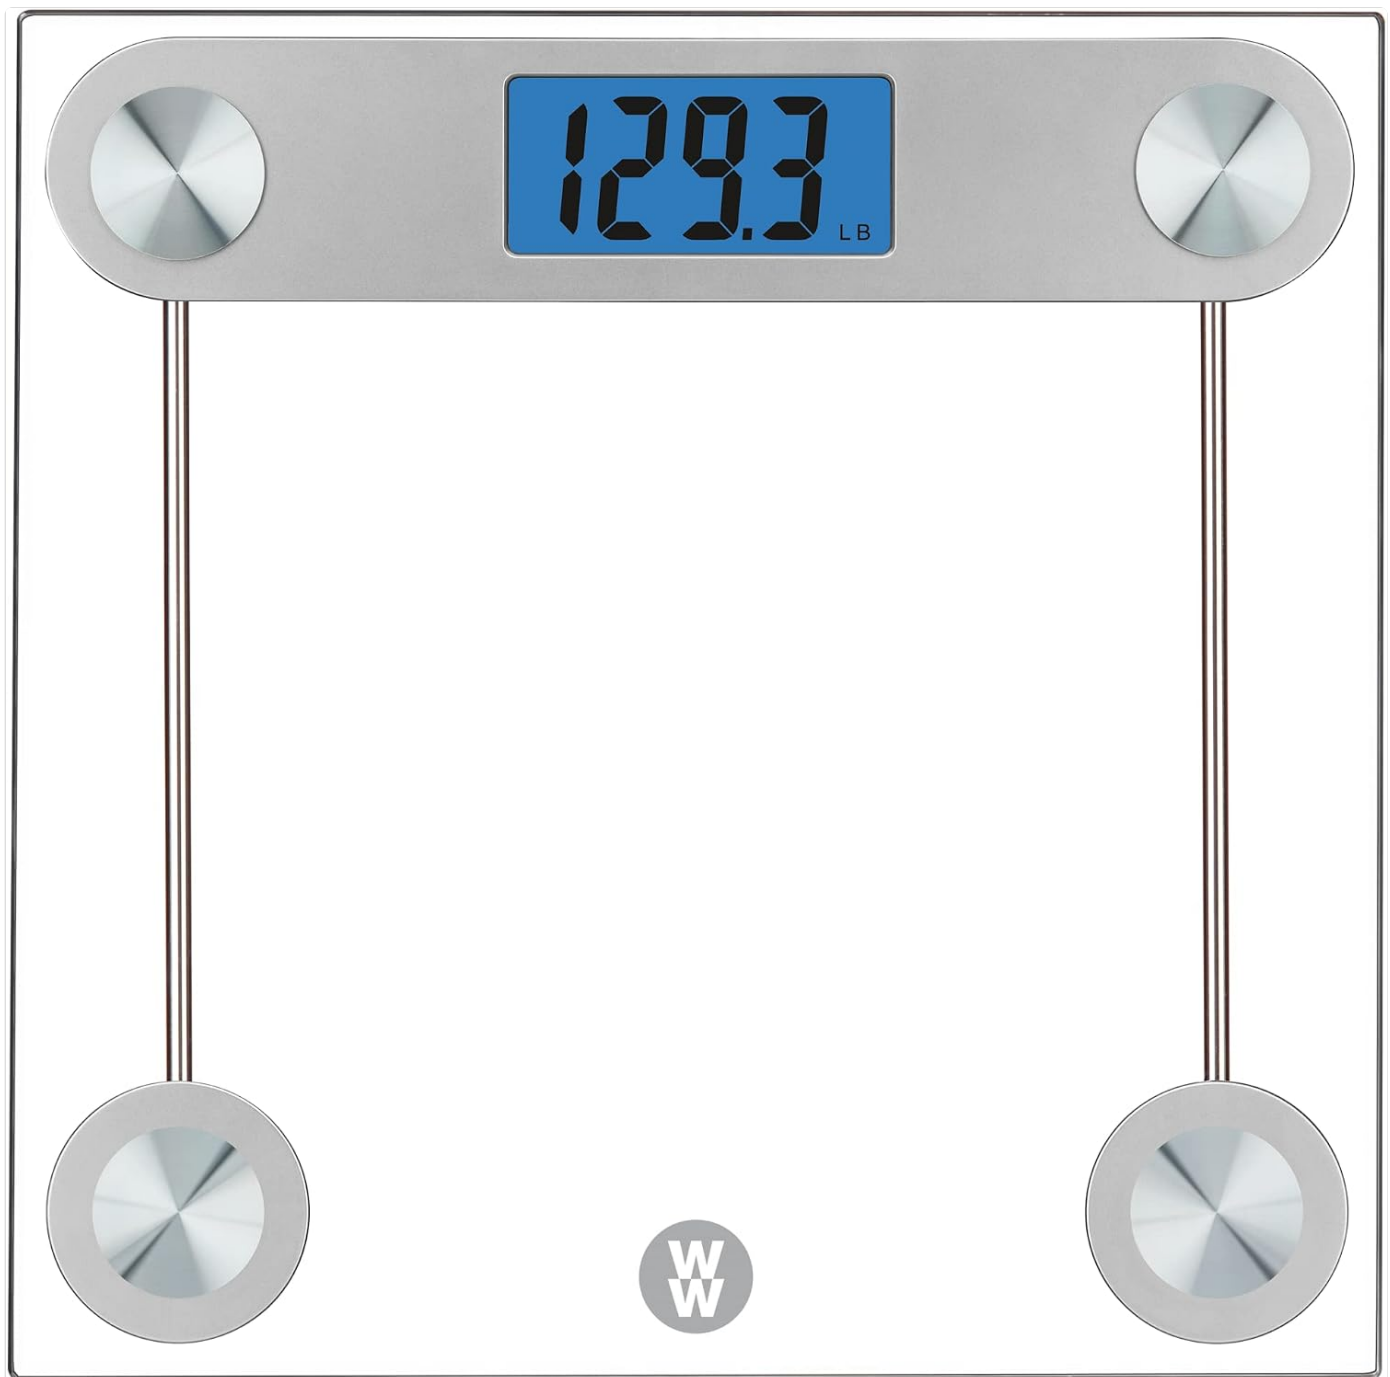


Image: Front view of the Weight Watchers by Conair Digital Bathroom Scale, showcasing its clear glass platform and blue digital display.

2. SETUP AND INITIAL USE

2.1 Battery Installation

Your scale comes with 3 AAA alkaline batteries. Locate the battery compartment on the underside of the scale. Open the compartment cover and insert the batteries, ensuring correct polarity (+/-) as indicated inside the compartment. Close the cover securely.

2.2 Scale Placement

For accurate readings, place the scale on a hard, flat surface. Avoid placing it on carpet, uneven flooring, or soft surfaces, as this can affect measurement accuracy.

2.3 First Use and Calibration

Before your first use, or if the scale has been moved, it is recommended to calibrate it. Gently tap the scale platform with your foot to activate it. Wait for the display to show '0.0' or '0.00'. Once '0.0' is displayed, the scale is ready for use. This process ensures

the scale is properly zeroed for accurate measurement.

3. OPERATING INSTRUCTIONS

3.1 Taking a Measurement

1. Ensure the scale is on a firm, flat surface.
2. Gently tap the scale with your foot to turn it on. Wait for the display to show '0.0'.
3. Step onto the scale with bare feet, centering your weight evenly on the platform. Stand still.
4. Your weight will be displayed on the large blue backlit LCD. The reading will flash a few times before locking in.
5. Step off the scale. The scale will automatically turn off after a few seconds to conserve battery life.



Image: A person's feet positioned on the scale, demonstrating proper usage for a weight measurement.

3.2 Key Features

- **Easy-to-Read Display:** Features a large 1.5-inch blue backlit LCD digital readout, displaying weight in 0.1 lb or 50 g increments.
- **Tempered Safety Glass:** Constructed with durable tempered safety glass and silver/brushed aluminum accents for a modern aesthetic.
- **Precision Accuracy:** Utilizes precision electronic strain gauges for highly accurate weight measurements.
- **High Capacity:** Supports weights up to 400 lbs (182 kg).



easy to read

**large 1.5 in./40 mm digital readout
displays weight in 0.1 lb. or 50 g increments**

**tempered safety glass
with silver and brushed aluminum accents
provides an elegant contemporary look**

**batteries
scale operates on 3 long-life
AAA batteries (included)**

**durable construction
sturdy, impact-resistant scale**

sturdy, impact-resistant scale
weighs up to 400 lb./182 kg

easy to use

simply step on scale to turn it on

Image: An infographic highlighting the scale's features, including its easy-to-read display, tempered safety glass, battery operation, and durable construction.

4. MAINTENANCE AND CARE

- **Cleaning:** Clean the scale with a damp cloth and mild detergent. Do not use abrasive cleaners or immerse the scale in water.
- **Storage:** Store the scale in a dry place. Avoid storing it upright against a wall, as this may affect its zero calibration. Horizontal storage is recommended.
- **Battery Replacement:** When the display shows a low battery indicator (e.g., 'Lo'), replace all three AAA batteries simultaneously. Do not mix old and new batteries.
- **Avoid Impact:** While durable, avoid dropping the scale or subjecting it to heavy impact, as this can damage the internal components or the glass platform.

5. TROUBLESHOOTING

- **Scale Not Turning On:**
Check if the batteries are correctly installed and not depleted. Replace batteries if necessary. Ensure you are tapping the scale firmly enough to activate it. Some users find tapping slightly forward of the center or near the display helps.
- **Inconsistent Readings:**
Ensure the scale is placed on a completely flat, hard, and stable surface. Uneven flooring or soft surfaces (like carpet) can cause variations. Try moving the scale to a different spot. Ensure you are standing still and centered on the scale during measurement.
- **'Lo' or 'Err' Display:**
'Lo' indicates low battery. Replace the batteries. 'Err' may indicate an overload (weight exceeds 400 lbs) or a measurement error. Step off the scale, wait for it to reset, and try again.
- **Display Shows '0:00' and Circles:**
This can indicate a calibration issue or a fault. Try removing the batteries for a few minutes, then reinserting them to reset the scale. Ensure the scale is on a stable surface.

6. SPECIFICATIONS

Feature	Detail
Model Number	WW26
Brand	Conair
Weight Limit	400 Pounds (182 kg)
Display Type	LCD with Blue Backlight
Power Source	3 AAA batteries (included)

Product Dimensions	11.8 x 11.8 x 1 inches (29.97 x 29.97 x 2.54 cm)
Product Weight	3.5 Pounds (1.59 kg)
Material	Tempered Safety Glass, Stainless Accents

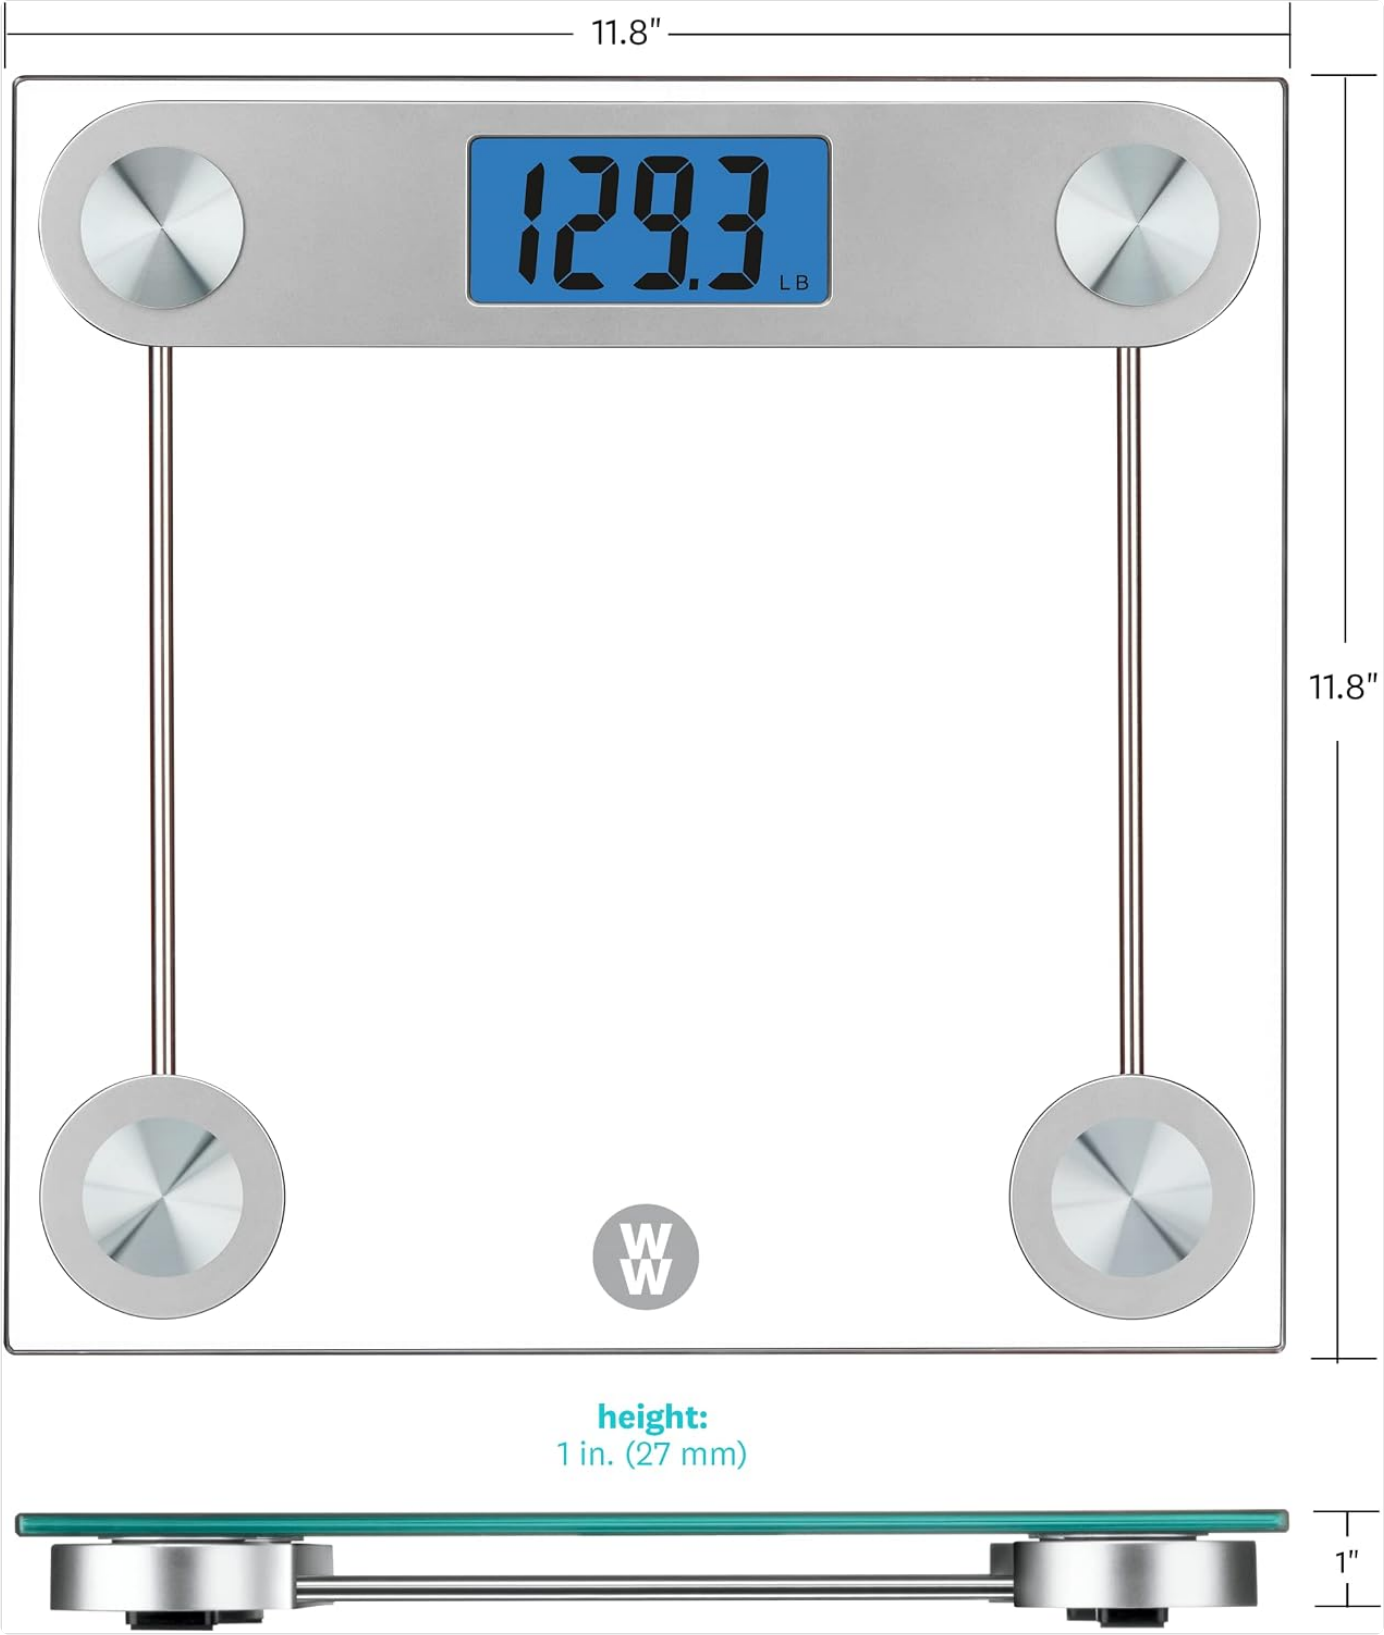


Image: Technical drawing showing the dimensions of the scale: 11.8 inches by 11.8 inches, with a height of 1 inch.

7. WARRANTY AND SUPPORT

For warranty information or technical support regarding your Weight Watchers by Conair Digital Bathroom Scale, please refer to the documentation included with your purchase or contact Conair customer service directly. Conair is the manufacturer of this product.

Manufacturer: Conair

Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.

© 2025 Conair. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

What is the button on the back of the Conair WW26 Weight Watchers scale used for?

On the Conair WW26 and similar Weight Watchers digital scales, the button located on the back (underside) of the unit is typically used to switch the unit of measurement.By pressing this button, you can...

[Read full answer](#)