

TAINO BASIC 4+1 Gasgrill

TAINO Basic 4+1 Gas Grill Instruction Manual

Model: BASIC 4+1 Gasgrill

INTRODUCTION

This instruction manual provides essential information for the safe and efficient use of your TAINO Basic 4+1 Gas Grill. Please read all instructions carefully before assembly and operation. This grill is designed for outdoor use and features four powerful stainless steel main burners and one side burner, offering versatile cooking options.

The TAINO Basic 4+1 Gas Grill is TÜV Rheinland certified (certificate number: Q 601088404), ensuring it meets safety and quality standards.

1. SETUP AND ASSEMBLY

The TAINO Basic 4+1 Gas Grill requires assembly. It is recommended to have two people for assembly due to the weight and size of the components. All individual parts are securely packaged and labeled to prevent confusion during assembly. A detailed assembly guide is included with the product.

- **Unpacking:** Carefully unpack all components and verify against the parts list in the assembly guide.
- **Tools:** Ensure you have the necessary tools as specified in the assembly guide.
- **Gas Connection:** A gas hose and pressure reducer are not included with the grill and must be purchased separately. Ensure these components are compatible with your gas supply (butane, propane, or LPG mixture) and meet local safety standards for 50 mbar gas pressure (common in DE, AT, CH).
- **Placement:** Position the grill on a stable, level surface outdoors, away from flammable materials. The grill features two large wheels for easy relocation.



Image 1: TAINO Basic 4+1 Gas Grill with the main lid and side burner lid open, showing the grill grates and control knobs. This view illustrates the grill's open configuration, ready for use.

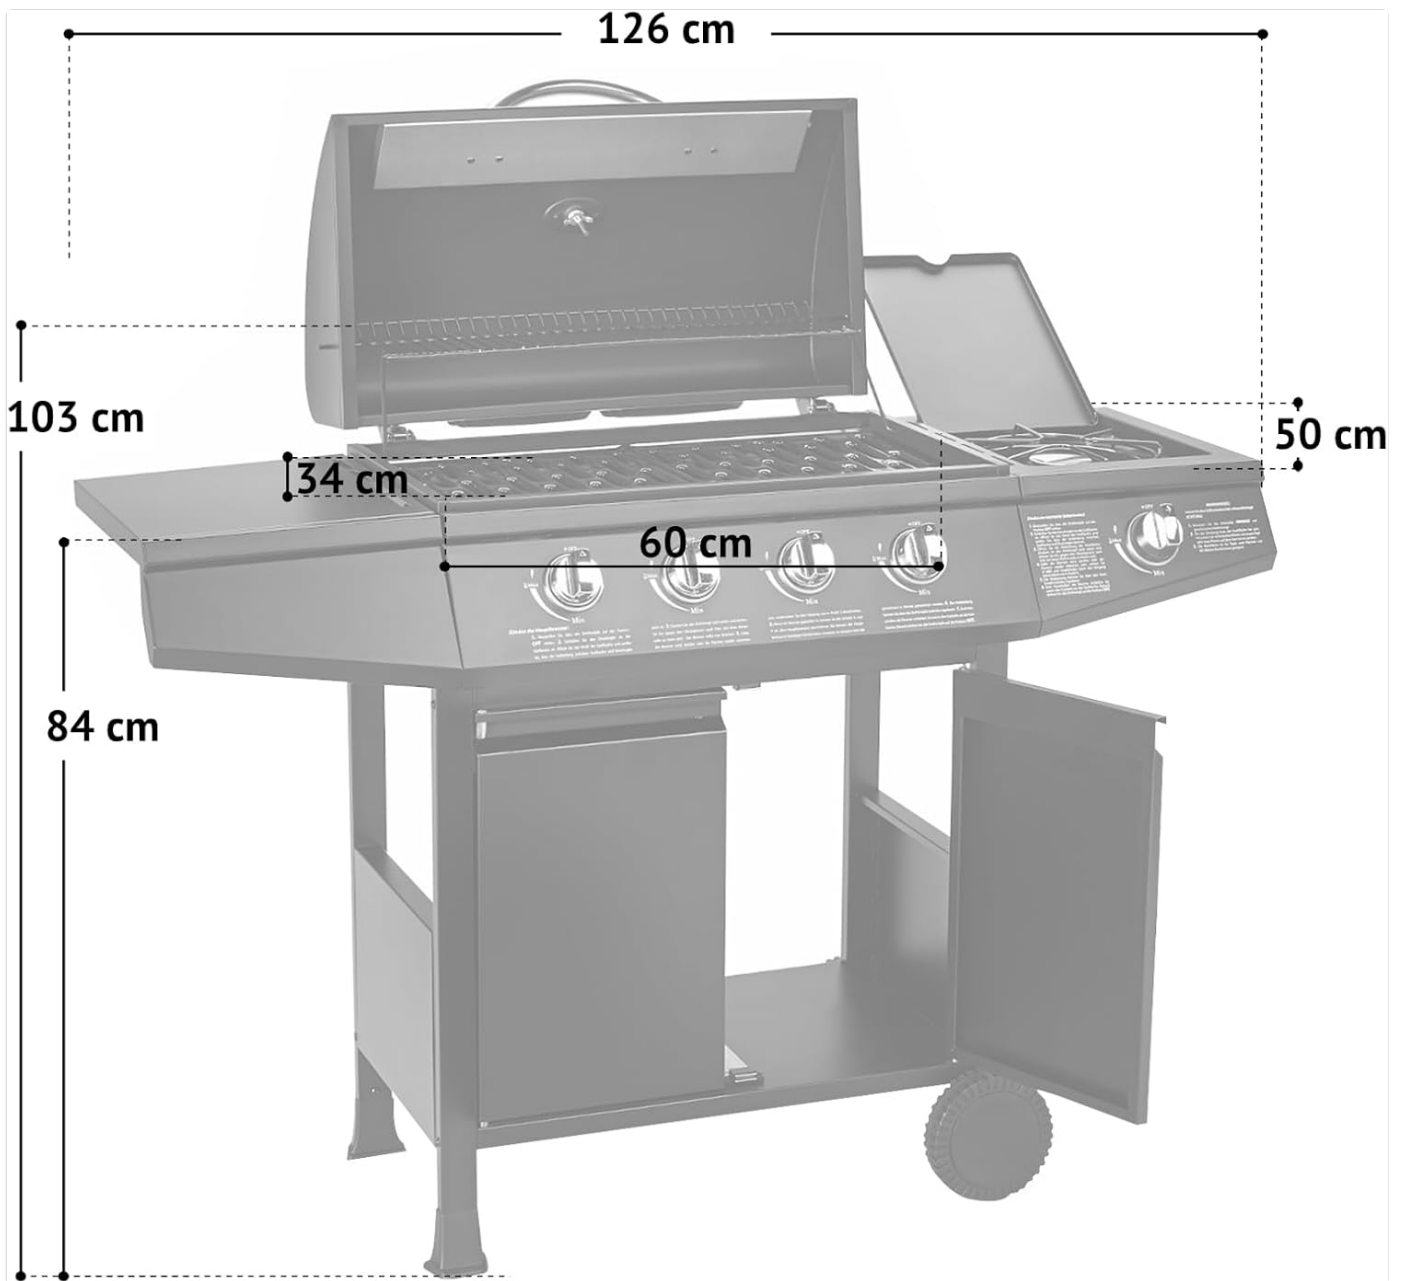


Image 2: Technical drawing showing the overall dimensions of the TAINO Basic 4+1 Gas Grill. Total width is approximately 126 cm, height 103 cm, and depth 50 cm. The working height is around 84 cm, and the main grill surface is approximately 60 cm wide by 34 cm deep.

2. OPERATING INSTRUCTIONS

Before each use, ensure all gas connections are secure and free from leaks. Only use the grill outdoors in a well-ventilated area.

2.1. Ignition

1. Open the grill lid.
2. Ensure all burner control knobs are in the "OFF" position.
3. Open the valve on your gas cylinder.
4. Push in and turn one main burner control knob counter-clockwise to the "HIGH" position. The integrated piezo ignition will spark, igniting the burner.
5. If the burner does not ignite within 5 seconds, turn the knob to "OFF", wait 5 minutes, and repeat the process.
6. Once the first burner is lit, you can ignite other main burners by simply turning their respective control knobs to "HIGH".

7. The side burner also features piezo ignition and can be lit similarly.

2.2. Temperature Control

- Each of the four main burners is continuously adjustable, allowing for precise temperature control and indirect grilling.
- The integrated thermometer in the lid displays the internal temperature of the grill, enabling reliable monitoring.
- The side burner is ideal for heating sauces or preparing side dishes.

2.3. Shutting Down the Grill

1. Turn all burner control knobs to the "OFF" position.
2. Close the valve on the gas cylinder.
3. Allow the grill to cool completely before cleaning or covering.



Image 3: Front view of the TAINO Basic 4+1 Gas Grill with the main lid and side burner lid closed. This image highlights the control panel with four main burner knobs and one side burner knob, along with the integrated thermometer on the main lid.

3. MAINTENANCE

Regular cleaning and maintenance will extend the life of your gas grill and ensure safe operation.

- **Cleaning Grill Grates:** After each use, once the grill has cooled, clean the enameled steel grill grates with a grill brush. For stubborn residue, use warm soapy water.

- **Grease Collection Tray:** The removable grease collection tray should be emptied and cleaned regularly to prevent grease fires. It is easily accessible from the back of the grill.
- **Exterior Cleaning:** Wipe down the stainless steel surfaces and other exterior parts with a damp cloth and mild detergent. Avoid abrasive cleaners that can scratch the finish.
- **Burner Maintenance:** Periodically inspect the burners for blockages (e.g., from insects) and clean them if necessary. Ensure gas ports are clear.
- **Storage:** When not in use for extended periods, store the grill in a dry, protected area. Consider using a grill cover to protect it from the elements.



Image 4: Close-up view of the removable grease collection tray, located beneath the main grill area. This tray collects drippings and can be easily pulled out for cleaning, which is crucial for hygiene and safety.

4. TROUBLESHOOTING

If you encounter issues with your TAINO Basic 4+1 Gas Grill, consult the following common troubleshooting steps:

- **Burner Not Igniting:**

- Check if the gas cylinder valve is fully open.
- Ensure the gas hose and regulator are properly connected and not leaking.
- Verify that the piezo igniter is sparking. If not, check the igniter electrode and wiring.
- Clean any debris from the burner ports.
- Ensure there is sufficient gas in the cylinder.

- **Low Flame or Uneven Heat:**

- Check for blockages in the burner tubes or gas orifices.
- Ensure the gas cylinder is not running low.
- Verify that the pressure regulator is functioning correctly.

- **Gas Leak Smell:**

- Immediately turn off the gas supply at the cylinder.
- Do not attempt to light the grill.
- Check all gas connections for tightness.
- Apply a soapy water solution to connections; bubbles indicate a leak. Tighten connections or replace faulty parts.
- If the smell persists, contact a qualified technician.

For issues not covered here, please refer to the comprehensive troubleshooting section in your full product manual or contact customer support.

5. PRODUCT SPECIFICATIONS

Model:	TAINO Basic 4+1 Gasgrill
Brand:	TAINO (Clic-Trade GmbH)
Product Dimensions (L x W x H):	Approx. 126 x 50 x 103 cm (49.6 x 19.7 x 40.6 inches)
Grill Surface:	Approx. 61 x 34 cm (2-piece enameled steel grates)
Working Height:	Approx. 84 cm (33.1 inches)
Weight:	Approx. 27 kg (59.52 lbs)
Main Burners:	4 x Stainless Steel Burners with Piezo Ignition
Side Burner:	1 x Side Burner with Lid and Piezo Ignition
Total Wattage:	4000 watts
Fuel Type:	Butane, Propane, or LPG Mixture
Gas Pressure:	50 mbar (DE, AT, CH standard)
Material:	Alloy Steel (frame), Stainless Steel (burners, handle, finish)
Color:	Black
Special Features:	Integrated Thermometer, Warming Rack, Removable Grease Tray, 2 Wheels

6. WARRANTY INFORMATION

Specific warranty details for the TAINO Basic 4+1 Gas Grill are typically provided with your purchase documentation. Please refer to the warranty card or contact your retailer for information regarding coverage, duration, and claims procedures. The product is TÜV Rheinland certified, indicating compliance with recognized safety standards.

7. CUSTOMER SUPPORT

For technical assistance, spare parts, or any questions regarding your TAINO Basic 4+1 Gas Grill, please contact the seller or manufacturer directly. Contact information can usually be found on your purchase receipt or the product packaging. When contacting support, please have your model number (BASIC 4+1 Gasgrill) and ASIN (B01CIKRLJC) ready.

