

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [noblechairs](#) /

› [noblechairs EPIC Gaming and Office Chair User Manual](#)

noblechairs NBL-PU-BLA-002

noblechairs EPIC Gaming and Office Chair User Manual

Model: NBL-PU-BLA-002

1. INTRODUCTION

Welcome to the noblechairs EPIC Gaming and Office Chair user manual. This guide provides detailed instructions for assembly, operation, maintenance, and troubleshooting to ensure you get the most out of your chair. The noblechairs EPIC is designed for comfort and ergonomics, suitable for both gaming and office environments.

Key features include a robust steel frame, high-density cold foam upholstery, adjustable 4D armrests, and a sophisticated rocking mechanism. It supports users up to 120 kg (265 lbs) and comes with neck and lumbar support cushions.

2. ASSEMBLY INSTRUCTIONS

Assembly of the noblechairs EPIC is straightforward, though two people are recommended due to the weight of some components. Please follow these steps carefully.

2.1. Unpacking and Component Check

Carefully unpack all components and verify against the parts list. Ensure no parts are missing or damaged. Keep packaging for future transport or returns.

- Base with casters
- Gas lift cylinder
- Seat base
- Backrest
- Armrests (pre-attached or separate)
- Mechanism plate
- Screws and tools
- Neck and lumbar cushions

2.2. Attaching Casters to the Base

Insert the 60mm casters into the holes on the five-star base. Push firmly until they click into place.





Image: Fully assembled noblechairs EPIC Gaming and Office Chair.

2.3. Installing the Gas Lift

Place the gas lift cylinder into the center hole of the five-star base. Ensure it is seated securely.

2.4. Attaching the Mechanism to the Seat Base

Align the mechanism plate with the pre-drilled holes on the underside of the seat base. Secure it with the provided screws. Ensure the front of the mechanism faces the front of the seat.

2.5. Connecting the Backrest to the Seat Base

Attach the backrest to the seat base using the side brackets and screws. Do not fully tighten until both sides are aligned. Once aligned, tighten all screws securely.




Image: Adjustable backrest and rocking mechanism, allowing recline from 90° to 125°.

2.6. Placing the Seat Assembly onto the Gas Lift

Carefully place the assembled seat and backrest onto the gas lift cylinder. The tapered end of the gas lift should fit snugly into the mechanism on the seat base.

2.7. Attaching Cushions

Attach the neck and lumbar support cushions. The lumbar cushion straps can be threaded through the seatbelt holes in the backrest and secured. The neck cushion typically attaches to the headrest area.

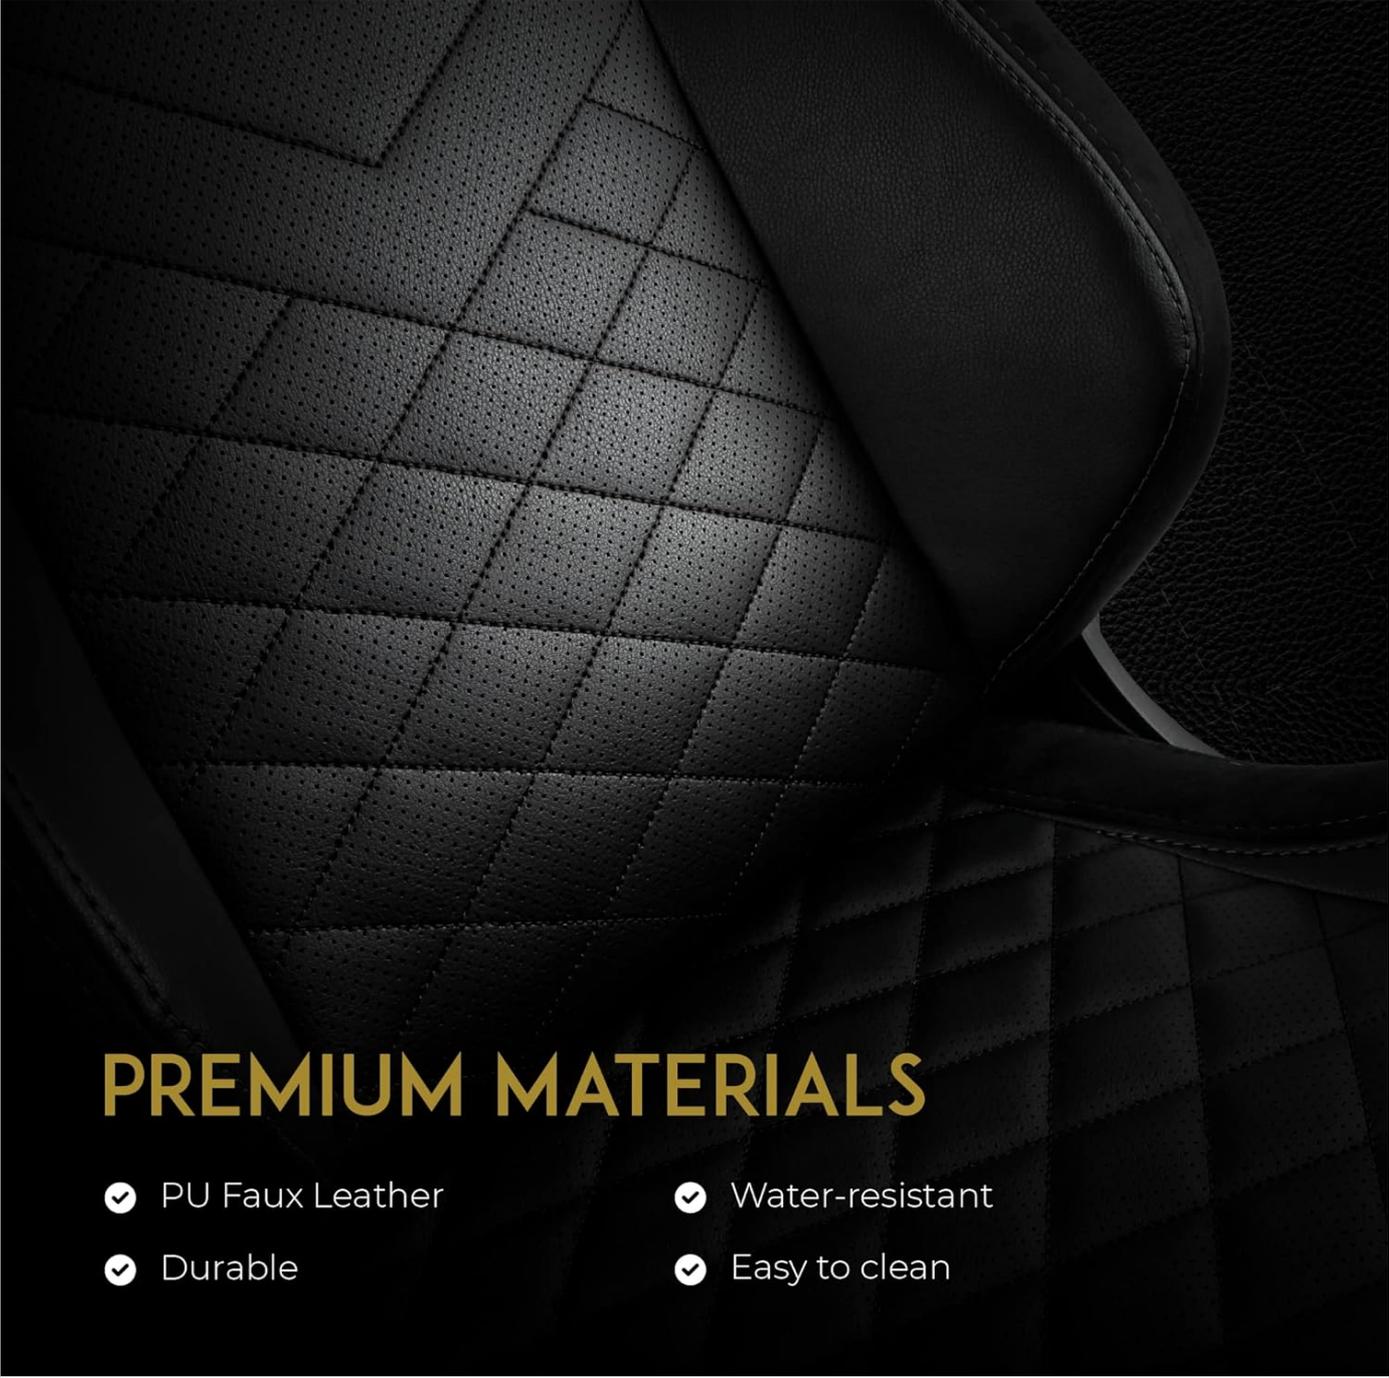

PREMIUM MATERIALS

- ✓ PU Faux Leather
- ✓ Water-resistant
- ✓ Durable
- ✓ Easy to clean

Image: Ergonomic design features, including integrated adjustable lumbar support and memory-foam headrest.

3. OPERATING INSTRUCTIONS

Your noblechairs EPIC chair offers several adjustment options for personalized comfort.

3.1. Height Adjustment

To adjust the seat height, pull the lever located on the right side of the seat (when seated) upwards. To raise the seat, lift the lever while standing. To lower the seat, lift the lever while seated.

3.2. Backrest Recline

The backrest can be reclined up to 135°. Pull the lever on the right side of the chair (similar to a car seat lever) to adjust the angle. Release the lever to lock the backrest in place.

3.3. Rocking Mechanism

To activate the rocking function, pull the lever on the left side of the seat outwards. Push it inwards to lock the rocking mechanism. The tension of the rocking mechanism can be adjusted by turning the large knob located underneath the seat.

3.4. 4D Armrest Adjustment

The armrests are adjustable in four dimensions:

- **Height:** Press the button on the side of the armrest and move it up or down.
- **Depth (Forward/Backward):** Slide the armrest pad forward or backward.
- **Angle (Swivel):** Rotate the armrest pad left or right.
- **Width (In/Out):** Slide the entire armrest assembly inwards or outwards.

4. MAINTENANCE

Proper maintenance will extend the lifespan of your noblechairs EPIC chair.

4.1. Cleaning

The chair's PU Faux Leather material is water-resistant and easy to clean.

- For general cleaning, wipe with a soft, damp cloth.
- For stubborn stains, use a mild soap solution and wipe immediately with a clean, damp cloth, then dry thoroughly.
- Avoid harsh chemicals, abrasive cleaners, or solvents, as these can damage the material.



ELEGANT AESTHETICS

- ✓ Subtle design that emphasizes uncompromising quality
- ✓ Filigree diamond-pattern stitching on the back and headrest
- ✓ Individually customizable lumbar support and rocking mechanism



Robust aluminum base

Image: Premium PU Faux Leather material, durable, water-resistant, and easy to clean.

4.2. Fastener Check

Periodically check all screws and fasteners to ensure they are tight. Re-tighten if necessary to prevent wobbling or instability.

4.3. Caster Care

Keep the casters clean and free of debris (hair, dust, etc.) to ensure smooth movement. You may occasionally lubricate the caster axles with a silicone-based spray if they become stiff.

5. TROUBLESHOOTING

This section addresses common issues you might encounter with your noblechairs EPIC chair.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Chair wobbles or feels unstable.	Loose screws or uneven assembly.	Check and tighten all assembly screws, especially those connecting the backrest to the seat and the mechanism to the seat base. Ensure the gas lift is properly seated in the base.
Gas lift does not adjust height.	Lever not fully engaged or gas lift malfunction.	Ensure the height adjustment lever is pulled completely. If the issue persists, the gas lift may need replacement. Contact customer support.
Backrest does not recline or lock.	Recline lever not fully engaged or mechanism issue.	Ensure the recline lever is pulled firmly. Check for any obstructions in the recline mechanism.
Armrests are stiff or difficult to adjust.	Debris or lack of lubrication.	Clean around the armrest mechanisms. A small amount of silicone spray can be applied to moving parts if necessary.
Squeaking noises.	Loose connections or friction between parts.	Tighten all screws. Apply a small amount of silicone spray to pivot points or areas where metal parts rub together.

6. SPECIFICATIONS

Detailed technical specifications for the noblechairs EPIC Gaming and Office Chair.

Feature	Detail
Model Number	NBL-PU-BLA-002
Color	Black
Material	PU Faux Leather (Poliuretano)
Product Dimensions (D x W x H)	Approx. 67 cm x 71 cm x 140 cm (26.4 in x 28 in x 55.1 in)
Product Weight	27 kg (59.5 lbs)
Maximum Recommended Weight	120 kg (265 lbs)
Backrest Recline Angle	90° - 135°
Armrests	4D Adjustable
Casters	60mm, suitable for soft or hard floors
Assembly Required	Yes

DIMENSIONS



Image: Detailed dimensions and weight support for the noblechairs EPIC chair.

7. WARRANTY AND SUPPORT

noblechairs products are built to high standards and come with a manufacturer's warranty. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official noblechairs website. For technical support, spare parts, or any inquiries not covered in this manual, please contact noblechairs customer service. Contact information can typically be found on the official noblechairs website or on your purchase documentation.

Official Website: www.noblechairs.com