

Fischer 15740-27309

Fischer Infinity 50L Built-in Electric Oven with Air Fryer Function

Model: 15740-27309 | Brand: Fischer

1. INTRODUCTION

This instruction manual provides essential information for the safe and efficient operation of your Fischer Infinity 50L Built-in Electric Oven with Air Fryer function. Please read this manual thoroughly before installation and use, and keep it for future reference. Proper installation, use, and maintenance will ensure optimal performance and longevity of your appliance.

Important Safety Information

- Ensure the oven is installed by a qualified technician in accordance with local regulations.
- Do not operate the oven if it is damaged. Contact customer support.
- Keep children away from the appliance during operation, as surfaces can become hot.
- Always use oven mitts when handling hot dishes or oven components.
- Disconnect the power supply before cleaning or performing any maintenance.

2. PRODUCT OVERVIEW

The Fischer Infinity 50L Built-in Electric Oven is designed for modern kitchens, offering a 50-liter capacity and multiple cooking functions, including an integrated Air Fryer. Its stainless steel finish provides a sleek aesthetic.



Figure 2.1: Front view of the Fischer Infinity 50L Built-in Electric Oven. This image displays the oven's control panel with three rotary knobs for function, timer, and temperature, along with the large glass door and stainless steel handle.

Key Features

- **Capacity:** 50 Liters, suitable for various cooking needs.
- **Functions:** Defrost, Turbo, Turbo Plus, Turbo Grill, Grill, and Air Fryer.
- **Temperature Control:** Adjustable from 50°C to 300°C.
- **Interior:** Easy-clean black enameled body for simplified maintenance.
- **Illumination:** Internal lamp with protective cover for clear visibility.
- **Pilot Light:** Indicates when the oven is operating.


Components Included

- 1 x Enameled Residue Tray
- 1 x Instruction Manual (this document)
- 2 x Oven Racks
- 1 x Electric Oven Unit

3. SETUP AND INSTALLATION

The Fischer Infinity oven is designed for built-in installation. Proper ventilation and electrical connection are crucial for safe operation. Refer to the installation diagram for precise measurements and requirements.

NICHO DE INSTALAÇÃO FORNO ELETRICO FISCHER INFINITY EMBUTIR 50L
MODELO INOX: 15740-27308 - 127V / 15740-27309 - 220V
MODELO PRETO: 15740-17055 - 127V / 15740-17056 - 220V
MODELO BRANCO: 15740-19296 - 127V / 15740-19297 - 220V

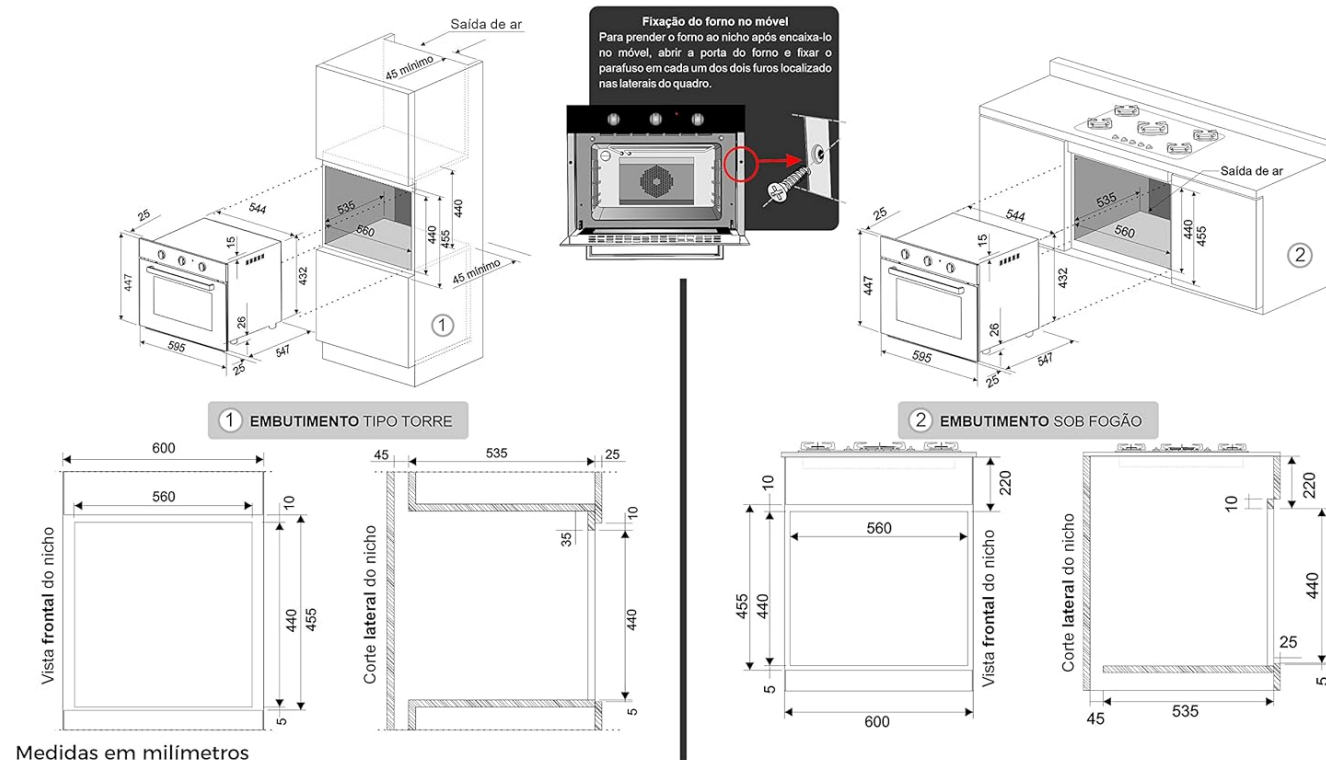

QUEM TEM,
FAZ BEM.

Rev. 03

Figure 3.1: Installation diagram showing dimensions for built-in oven placement. This diagram illustrates two common installation types: tower installation and under-counter installation, with detailed measurements in millimeters for the niche.

Installation Requirements

- **Niche Dimensions:** Follow the dimensions provided in Figure 3.1 for both tower and under-counter installations. Ensure adequate space for air circulation.
- **Electrical Connection:** The oven requires a 220V electrical supply. Ensure the circuit is properly grounded and can handle the oven's power rating (2422 Watts).
- **Ventilation:** Maintain proper clearance around the oven as indicated in the diagram to prevent overheating.
- **Securing the Oven:** Secure the oven within the niche using the provided screws, as shown in the detailed inset of Figure 3.1.

4. OPERATING INSTRUCTIONS

Familiarize yourself with the control panel before operating the oven. The oven features three main rotary knobs for function selection, timer settings, and temperature control.



Figure 4.1: Interior view of the oven with the door open, showing the two oven racks, internal light, and the convection fan at the back. The heating elements are also visible at the top.

Control Panel Overview

- **Left Knob (Functions):** Select desired cooking mode (Defrost, Turbo, Turbo Plus, Turbo Grill, Grill, Air Fryer).
- **Middle Knob (Timer):** Set cooking duration. The oven will automatically turn off when the timer expires.
- **Right Knob (Temperature):** Adjust temperature from 50°C to 300°C.
- **Pilot Light:** Illuminates when the oven is active.

Cooking Functions

1. **Defrost:** Uses the internal fan to circulate air at room temperature, gently thawing frozen foods.
2. **Turbo (Convection):** Circulates hot air evenly throughout the oven, ideal for baking and roasting multiple dishes simultaneously without flavor transfer.
3. **Turbo Plus:** Enhanced convection mode for faster and more intense cooking.
4. **Turbo Grill:** Combines the grill element with convection for crispy exteriors and thoroughly cooked interiors.
5. **Grill:** Uses the top heating element for browning, toasting, and grilling.
6. **Air Fryer:** Utilizes high-speed hot air circulation for frying with minimal oil, achieving crispy results.

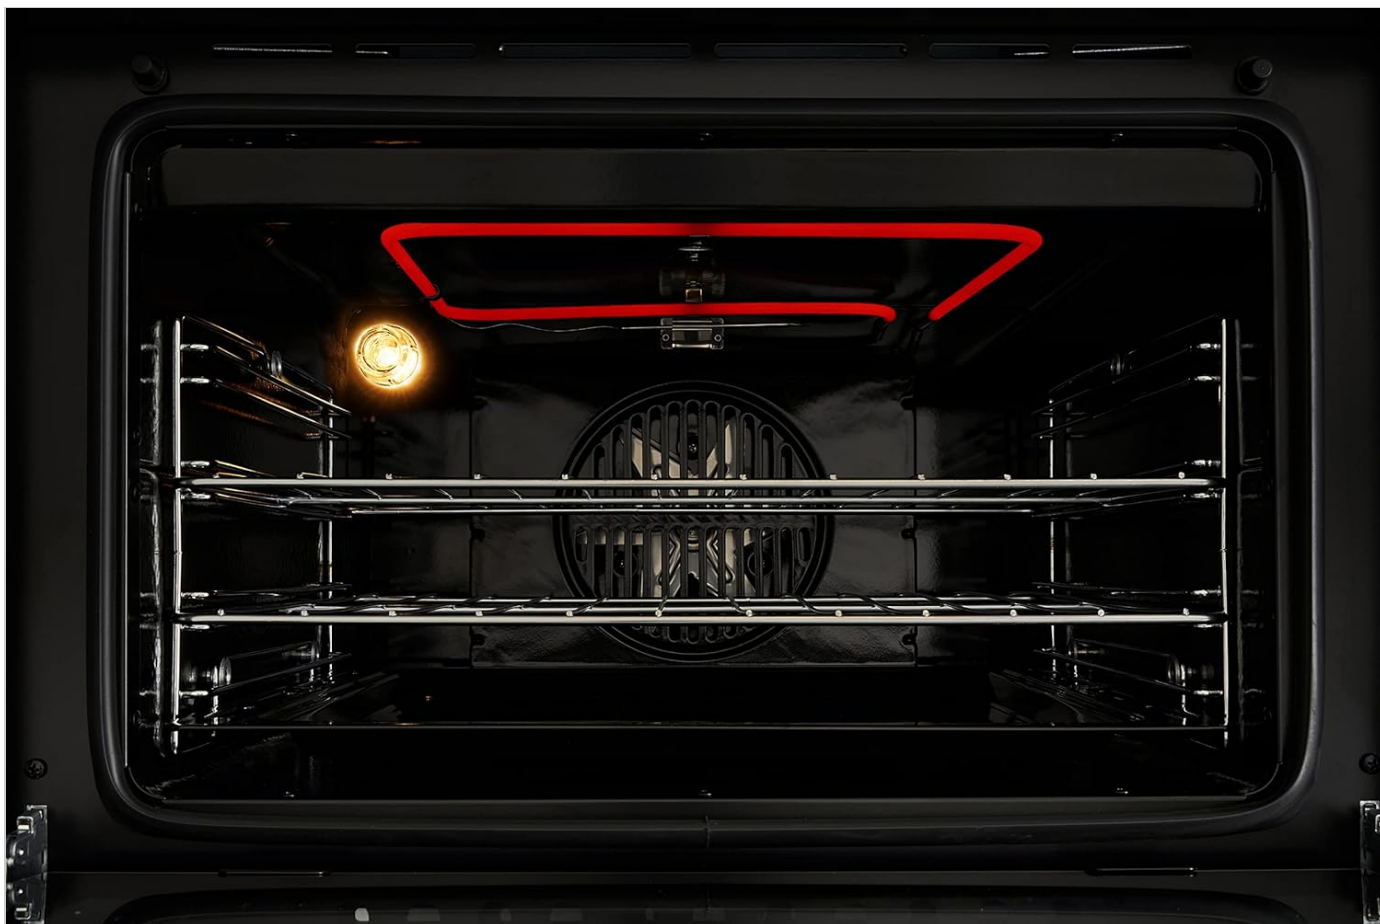


Figure 4.2: Close-up view of the oven interior, highlighting the top heating element (red), the internal light, and the convection fan at the rear. Two adjustable racks are also visible.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your oven and ensure hygienic operation. Always ensure the oven is cool and disconnected from the power supply before cleaning.

Cleaning the Interior

The oven features an "Easy Clean" black enameled interior. This smooth coating prevents grease absorption, making cleaning easier.

- Wipe the interior with a soft cloth and mild detergent after each use.
- For stubborn stains, use a non-abrasive oven cleaner specifically designed for enameled surfaces. Follow the cleaner's instructions carefully.
- Remove oven racks and the residue tray for separate cleaning in warm, soapy water.
- Do not use abrasive pads, harsh chemicals, or steam cleaners, as these can damage the enamel.

Cleaning the Exterior

- Clean the stainless steel exterior with a soft cloth dampened with water and a mild, non-abrasive cleaner.
- Wipe in the direction of the grain to avoid streaks.
- Avoid using abrasive cleaners or scouring pads on the stainless steel.

Replacing the Oven Lamp

Ensure the oven is cool and unplugged. Unscrew the protective cover, replace the bulb with a suitable high-temperature oven lamp, and reattach the cover.

6. TROUBLESHOOTING

This section addresses common issues you might encounter. If the problem persists after following these steps, contact Fischer customer support.

Problem	Possible Cause	Solution
Oven does not turn on.	No power supply; oven door not closed properly; timer not set.	Check power connection and circuit breaker. Ensure the oven door is fully closed. Set the timer if required for the selected function.
Food not cooking evenly.	Incorrect temperature or function; improper rack placement; oven overloaded.	Verify temperature and function settings. Use appropriate rack positions. Avoid overcrowding the oven. Utilize convection functions for better heat distribution.
Oven light not working.	Bulb is faulty or loose.	Ensure the oven is cool and unplugged. Check if the bulb is securely screwed in. Replace the bulb if necessary (refer to Maintenance section).
Excessive smoke during cooking.	Food residue or grease buildup.	Clean the oven interior thoroughly (refer to Maintenance section). Use the residue tray to catch drips.

7. SPECIFICATIONS

Detailed technical specifications for the Fischer Infinity 50L Built-in Electric Oven.

Brand Name	Fischer
Model Information	15740-27309
Certification	BRA19/00760
Product Dimensions (LxWxH)	57.3 x 59.4 x 44.5 cm
Capacity	50 Liters
Installation Type	Built-in
Special Features	Compatible with gas, electric, and induction cooktops; Manual control; Programmable
Oven Mode Options	Convection
Heating Element Type	Resistance
Color	INOX (Stainless Steel)
Voltage	220V
Power (Watts)	2422W
Fuel Type	Electric
Defrost Feature	Automatic Defrost
Door Hinges	Frontal
Material Type	Steel
Item Weight	28.87 Kilograms
Available for purchase since	July 1, 2017


8. WARRANTY AND SUPPORT


Fischer products are manufactured to high-quality standards. For warranty information, please refer to the warranty card included with your purchase or visit the official Fischer website. For technical assistance, spare parts, or service inquiries, please contact Fischer customer support.

Fischer Official Website: [Visit Fischer Store on Amazon](#) (This link directs to the brand's store on Amazon, which may contain further support information).



Related Documents - 15740-27309

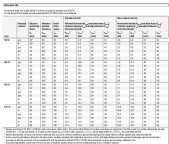	Manual de Instruções e Instalação do Forno a Gás Fischer Infinity de Embutir com Grill Este manual detalha as instruções de uso, instalação, segurança, manutenção e garantia para o Forno a Gás Fischer Infinity de Embutir 50L com Grill. Inclui especificações técnicas e solução de problemas.
	Fischer FBZ Bolt Anchors: Permissible Load Data and Technical Specifications Comprehensive technical data and permissible load tables for Fischer FBZ series bolt anchors, including cracked and non-cracked concrete performance, material specifications, and design considerations.
	Fischer 36330-102673 4-Burner Gas Cooktop Installation Niche Dimensions Detailed installation niche dimensions in millimeters for the Fischer 36330-102673 4-burner gas cooktop (TC Fit Line Trempe Iron, 127-220V Black). Includes width, depth, and clearance specifications.
	Fischer PFCN Push-Through Connector for FUS Channel Systems Discover the Fischer PFCN push-through connector, designed for quick and secure connections in FUS channel systems. Explore technical specifications, load capacities, and installation guides for various models including PFCN 41, PFCN 41 zl, and PFCN 41 A4.

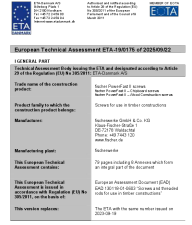	fischer PowerFast II Screws: European Technical Assessment ETA-19/0175 This European Technical Assessment (ETA-19/0175) provides comprehensive technical data, performance specifications, and application guidelines for fischer PowerFast II screws, including Chipboard and Wood Construction variants, designed for structural timber applications by fischerwerke GmbH & Co. KG.
	Coifa de Parede Fischer Infinity 90 CM - Manual de Instruções Manual de instruções detalhado para a Coifa de Parede Fischer Infinity 90 CM, cobrindo instalação, uso, segurança, manutenção e garantia. Informações sobre a marca Fischer e considerações ambientais.

Documents - Fischer – 15740-27309

	[pdf] User Manual 26392 MANUAL INSTRUÇÕES MICRO ONDAS FISCHER DE EMBUTIR 25L COM DOURADOR INOX E PRETO REV02 cdr Jeanne Maria dos Santos Alves Marowski wea0z10s 4tgcnd disloja br products 2496 instruction 4tg PRATO DE VIDRO ROTATIVO ANEL DE ROTA O Pot ncia Dourador Tempo Peso Pot ncia Dourador ... xternas Dimens es Internas cavidade 15740-17055 15740-17056 15740-19296 15740-19297 15740-27308 15740-27309 19A 127V 11,0A 220V 127V 220V 28,57 kg 28,87 kg 2422 W 750 W 1600 W 60Hz 50 litros A... lang:pt score:34 filesize: 32.9 M page_count: 32 document date: 2023-10-23
	[pdf] User Manual 15647 MANUAL INSTRUÇÕES FORNO Jeanne alves Magazine Luiza 2022 05 25 — 03 três primeiros meses de garantia legal · 09 nove últimos contratual especial Durante o período vigência da forno embutir fischer infinity 15740 27309 taqi br file general Garantia O seu forno Eltrico Fischer garantido contra defeitos e vcios de fabricao, pelo prazo de 12 doze meses contados a partir da data de emissão da Nota Fiscal ao consumidor, compreendido da seguinte forma: 03 trs primeiros meses de garantia legal; 09 nove ltimos meses de garantia cont... lang:pt score:34 filesize: 11.15 M page_count: 6 document date: 2017-08-09

[\[pdf\]](#) User Manual

15647 MANUAL INSTRUÇÕES FORNO INFINITY REV07 cdr Marcia Aparecida Caldas INSTRU ES loja

fischer br media wysiwyg

Garantia O seu forno Eltrico Fischer garantido contra defeitos e vcios de fabricao, pelo prazo de 12 doze meses contados a partir da data de emissao da Nota Fiscal ao consumidor, compreendido da seguinte forma: 03 trs primeiros meses de garantia legal; 09 nove ltimos meses de garantia cont...

lang:pt **score:27** filesize: 1.5 M page_count: 6 document date: 2017-06-13



[\[pdf\]](#) User Manual

27619 MANUAL INSTRUÇÕES FORNO EMBUTIR INFINITY 50L REV 02 cdr Jeanne Maria dos Santos

Alves Marowski 31 oct 2021 — Brasileira de coração e origem a Fischer está há mais 50 anos no mercado com produtos voltados para diversos ramos atividades document 89944743 user manual forno

eletrico 50l inox 220v infinity fischer cdn leroym Merlin br medias |||
Forno Eltrico de Embutir INFINITY Cdigo do manual: 27619 rev: 02 Imagens meramente ilustrativas IN ... Externas Dimenses Internas cavidade 15740-17055 15740-17056 15740-19296 15740-19297 15740-27308 **15740-27309** 19A 127V 11,0A 220V 127V 220V 26,39 kg 26,70 kg 2422 W 750 W 1600 W 60Hz 50 litros A...

lang:pt **score:26** filesize: 1.08 M page_count: 16 document date: 2021-03-03



[\[pdf\]](#) User Manual

27619 MANUAL INSTRUÇÕES FORNO EMBUTIR INFINITY 50L cdr Jeanne Maria dos Santos Alves

Marowski forno eletrico de embutir 50l fischer infinity 2422w 162107481934 gazin marketplace s3 amazonaws midias manuais |||

Forno Eltrico de Embutir INFINITY Cdigo do manual: 27619 rev: 00 Imagens meramente ilustrativas IN ... Externas Dimenses Internas cavidade 15740-17055 15740-17056 15740-19296 15740-19297 15740-27308 **15740-27309** 19A 127V 11,0A 220V 127V 220V 28,57 kg 28,87 kg 2422 W 750 W 1600 W 60Hz 50 litros A...

lang:pt **score:24** filesize: 1.71 M page_count: 16 document date: 2019-05-16



[\[pdf\]](#) User Manual

31732 MANUAL INSTRUÇÕES FORNOS EMBUTIR INFINITY IF 01 Rev curvas cdr Jeanne Maria dos Santos Alves Marowski 4 feb 2023 — Este produto não deve ser instalado em armários que estejam fora do padrão especificado neste manual Bolo de fubá inglês 3 2 ou 200 16 pagine

imVCjjbbbA0LSwERX7ei3msJvu4BmVjk loja fischer br media amasty amfile attach aparelho · Não utilizar máquinas a vapor para limpeza Antes ligar o forno verificar se tensão da rede czlr2mwv pql srsltid

AfmBOooTSDeD2p KT7mzRLqaXBDy4zhcfzJd9qBjcg2pzj1VhpyfxHww AfmBOooFTnd49

3Dytr4LX1FGCgg 6Zm82i2 EEIkOFSTkNxp2E2BAX AfmBOooaj

YZWGIXw9zLtaqrDkbzfgo7NjyZzIzCsuL6A9xKL5M9oJO AfmBOorqjM70t6jFy

iNwohGzFDcxLhRbyFN5w70I1kkCiKiw6ZtepMk AfmBOopfXMMXNJBIXbCHHTdT

mn3hBO1QUSVi51CCCbE3SYW7oCBKn3R AfmBOorz8vNxO9Yy4zYvN9CXEnsk

z3mtFPeYK1SiydGV01anhcy8oG cdn disloja products 2034 instruction O lugar e forma elétrico embutir será são muito importantes bom desempenho mesmo segurança usuário rede O usuário 4

pagineimVCjjbbbA0LSwERX7ei3msJvu4BmVjk

KT7mzRLqaXBDy4zhcfzJd9qBjcg2pzj1VhpyfxHwwimVCjjbbbA0LSwERX7ei3msJvu4BmVjk

EEIkOFSTkNxp2E2BAXimVCjjbbbA0LSwERX7ei3msJvu4BmVjk

YZWGIXw9zLtaqrDkbzfgo7NjyZzIzCsuL6A9xKL5M9oJOimVCjjbbbA0LSwERX7ei3msJvu4BmVjk

iNwohGzFDcxLhRbyFN5w70I1kkCiKiw6ZtepMkimVCjjbbbA0LSwERX7ei3msJvu4BmVjk

mn3hBO1QUSVi51CCCbE3SYW7oCBKn3RimVCjjbbbA0LSwERX7ei3msJvu4BmVjk

z3mtFPeYK1SiydGV01anhcy8oGdocument 89944736 user eletrico 50l com grill timer turbo convection

infinity 15740 27308 inoxcdn pqlfischer KT7mzRLqaXBDy4zhcfzJd9qBjcg2pzj1VhpyfxHwwcdn pqlloja

imVCjjbbbA0LSwERX7ei3msJvu4BmVjkfischer EEIkOFSTkNxp2E2BAXfischer

YZWGIXw9zLtaqrDkbzfgo7NjyZzIzCsuL6A9xKL5M9oJOfischer

iNwohGzFDcxLhRbyFN5w70I1kkCiKiw6ZtepMkfischer

mn3hBO1QUSVi51CCCbE3SYW7oCBKn3Rfischer z3mtFPeYK1SiydGV01anhcy8oGcdn leroymerlin

medias document inox 127v 110vfischer imVCjjbbbA0LSwERX7ei3msJvu4BmVjkloja Manual uso Clique

Baixaraparelho pagineForno Elétrico Embutir 50L Fischer Grill Timer Turbo Convection Infinity Inox 127V

110V Leroy MerlinimVCjjbbbA0LSwERX7ei3msJvu4BmVjk inoxdocument 110vcdn Baixar VISUALIZAR

NICHO Forno Merlin 50 litros Air Fryer 110v BaixarManual MerlinForno 17056 Preto 220V

FryerimVCjjbbbA0LSwERX7ei3msJvu4BmVjk 89944701 pretcdn preto 220vfischer |||

Forno Eltrico de Embutir INFINITY Cdigo do manual: 31732 rev: 01 Imagens

meramente ilustrativas IN ... Externas Dimenses Internas cavidade 15740-17055

15740-17056 15740-19296 15740-19297 15740-27308 **15740-27309** 15740-82007

15740-82006 19A 127V 11,0A 220V 127V 220V 26,39 kg 26,70 kg 2422 W 750 W...

lang:pt score:24 filesize: 3.6 M page_count: 16 document date: 2022-11-10

[\[pdf\]](#) User Manual

15647 MANUAL INSTRUÇÕES FORNO Jeanne alves forno embutir fischer infinity 15740 27309taqi br

file general 27309 srsltid AfmBOOp6dR6LYZirZzwxzKS0E88m5RP CF3zBkOQ nz6jM46yDygaqHE taQiO

Forno elétrico Fischer Infinity de 50L possui 04 alturas disponíveis para posicionamento das grades e da bandeja É possível assar dois alimentos forno 27309forno AfmBOOpw6smGD4WalObJvReBbBFnZef

JQfgyeSVI1o3u5gQHP99Bnkytaqi nz6jM46yDygaqHEtaqi AfmBOooBolSL9Zj6PfFQ Np7JQ0 VvYd w688

nXJLJEaTZ7yh IFA5M taQi15647 O AfmBOOpv GSpZklmQn2WgC2

ecs9elFk5YLQzfjqzOoKGMheG3D1cWhtaqi |||

Garantia O seu forno El trico Fischer garantido contra defeitos e v cios de fabrica o, pelo prazo de 12 doze meses contados a partir da data de emiss o da Nota Fiscal ao consumidor, compreendido da seguinte forma: 03 tr s primeiros meses de garantia legal; 09 nove ltimos me...


lang:pt score:23 filesize: 11.15 M page_count: 6 document date: 2017-08-09





[\[pdf\]](#) User Manual

27619 MANUAL INSTRUÇÕES FORNO EMBUTIR INFINITY 50L cdr Jeanne Maria dos Santos Alves Marowski Manual do usuárioFISCHER ELÉTRICO COM DOURADOR GRILL PRETO 220V 28349 64928 Amazon brA1bF8D1OL7Lm media amazon images I A1bF8D1OL7L ref dp product quick view ||| Forno El trico de Embutir INFINITY C digo do manual: 27619 rev: 00 Imagens meramente ilustrativas ... xternas Dimens es Internas cavidade 15740-17055 15740-17056 15740-19296 15740-19297 15740-27308 **15740-27309** 19A 127V 11,0A 220V 127V 220V 28,57 kg 28,87 kg 2422 W 750 W 1600 W 60Hz 50 litros A... lang:pt score:23 filesize: 1.71 M page_count: 16 document date: 2019-05-16

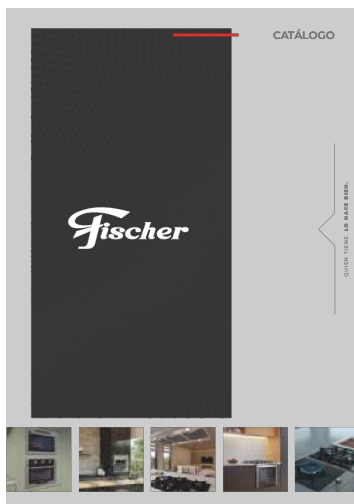

[\[pdf\]](#) Catalog

CATÁLOGO COCINA ANAFE FISCHER 2Q GAS MESADA DE VIDRIO CON SUPERVISOR HORNALLA Voltaje Bivoltios Cantidad de quemadores 2 Potência dos 1 Catalogo Fischer 2024 Espanhol pub mediabox storage rxweb prd exhibitor document exh 086a67e7 a6c3 4181 8656 a0a1ad13d61a 08f02d72 acdd 4a6e ac9c 260a700e73f4 ||| CATLOGO QUIEN TIENE, LO HACE BIEN. Quien tiene el compromiso que nosotros tenemos Evolucionar s, pero nunca cambiar nuestra esencia: con nuestra historia, hace bien todo lo que hace. este parece ser uno de los secretos del xito. Desde el proyecto de cada producto, pasando por la relacin con los... lang:es score:13 filesize: 4.54 M page_count: 103 document date: 2024-07-05



[\[pdf\]](#) User Manual

27619 MI FORNO EMBUTIR INFINITY 50L REV 03 cdr Jeanne Maria dos Santos Alves Marowski 0643fec2 b300 417d 9142 3b59f636c792rnoembutirinfinity50lrev03product hub prd madeiramadeira br 874473 documents 3b59f636c792rnoembutirinfinity50lrev03 ||| Forno El trico de Embutir INFINITY C digo do manual: 27619 rev: 03 Imagens meramente ilustrativas ... xternas Dimens es Internas cavidade 15740-17055 15740-17056 15740-19296 15740-19297 15740-27308 **15740-27309** 19A 127V 11,0A 220V 127V 220V 26,39 kg 26,70 kg 2422 W 750 W 1600 W 60Hz 50 litros A... lang:pt score:13 filesize: 18.63 M page_count: 16 document date: 2022-11-03



[\[pdf\]](#)

CATÁLOGO Messe FrankfurtDEPURADOR FISCHER SLIM 60 CM Voltagem 127 V ou 220 Tipo de instalação como fonte calor SEM FUMAÇA Pode ser instalada bancada de 1701088414512

22185886301701088414512 2218588630exhibitorsearch messefrankfurt images original mics

10000001202401 0012361331 1701088414512 2218588630 |||

CATLOGO SUMRIO Nesses quase 60 anos de história, tivemos a oportunidade de acompanhar de perto a rotina de muitos lares e famílias. Comportamentos e hábitos de consumo evoluem constantemente, mas tem algo que permanece: a busca da Fischer pela excelência e alta qualidade. Fazer bem feito exige muita r...

lang:pt score:12 filesize: 20.19 M page_count: 48 document date: 2023-07-19