

[Manuals.plus](#) /

› [NGOSEW](#) /

› NGOSEW 1/8" Narrow Hemmer Hem Foot Instruction Manual for Singer Simple Series and Other Low Shank Sewing Machines

NGOSEW Narrow Hemmer Hem Foot (Universal Low Shank)

NGOSEW 1/8" Narrow Hemmer Hem Foot Instruction Manual

For Singer Simple Series and Other Low Shank Sewing Machines

1. INTRODUCTION

This instruction manual provides comprehensive guidance for the proper use and care of your new NGOSEW 1/8" Narrow Hemmer Hem Foot. This accessory is designed to create professional-looking narrow rolled hems on various fabrics with ease. Please read this manual thoroughly before installation and operation to ensure optimal performance and longevity of the product.

2. PRODUCT OVERVIEW

The NGOSEW 1/8" Narrow Hemmer Hem Foot is a specialized presser foot designed for sewing machines with a low shank system. It features a unique scroll mechanism that automatically folds the fabric edge twice, creating a neat 1/8-inch (approximately 3mm) rolled hem as you sew. This foot is compatible with a wide range of low shank sewing machines, including:

- Singer Simple Series: 2263, 3116, 3221, 3223, 3232, 3337
- Other low shank models from brands such as Brother, Kenmore, Elna, Babylock, White, Juki, Consew, Janome, Pfaff, Necchi, Simplicity, and Viking.



Figure 1: The NGOSEW 1/8" Narrow Hemmer Hem Foot. This image displays the metal presser foot from an angled perspective, highlighting its polished silver finish and the distinctive scroll mechanism at the front, designed to guide fabric for narrow hems.

3. SETUP AND INSTALLATION

Follow these steps to properly install the narrow hemmer foot on your sewing machine:

1. **Power Off:** Ensure your sewing machine is turned off and unplugged for safety.
2. **Raise Needle and Presser Foot:** Use the handwheel to raise the needle to its highest position. Lift the presser foot lever to raise the existing presser foot.
3. **Remove Current Presser Foot:** Locate the presser foot release lever or screw at the back of the presser foot holder. Press the lever or loosen the screw to detach the current presser foot.
4. **Attach Narrow Hemmer Foot:** Position the NGOSEW Narrow Hemmer Hem Foot under the presser foot holder, aligning the pin on the foot with the groove on the holder. Lower the presser foot lever until the foot snaps into place or tighten the screw securely.
5. **Verify Attachment:** Gently tug on the foot to ensure it is firmly attached and does not wobble.

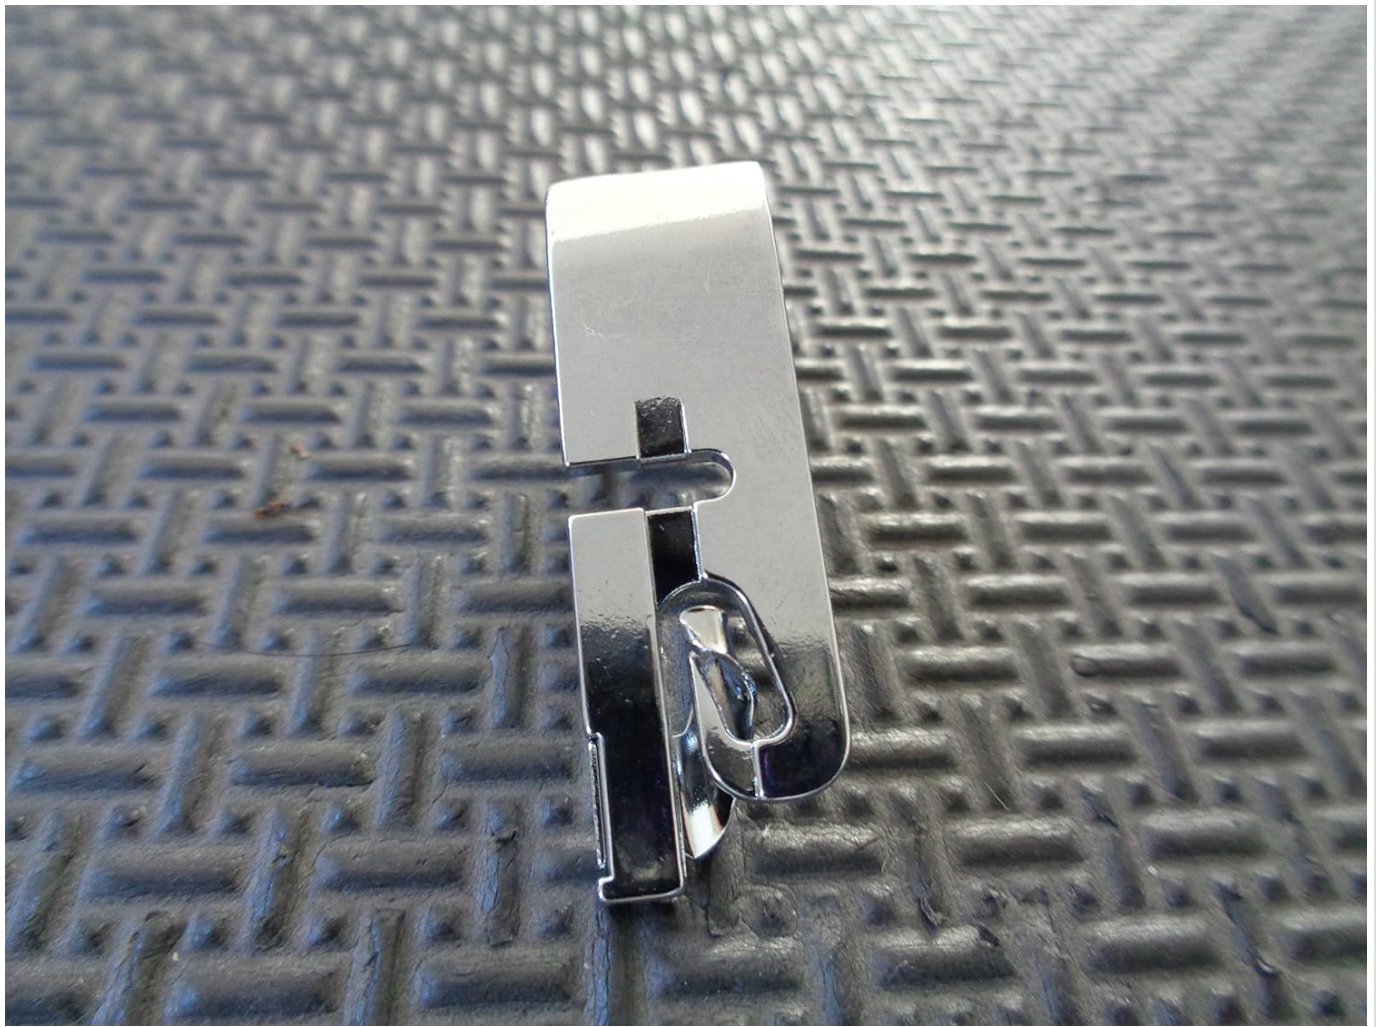


Figure 2: Top view of the NGOSEW Narrow Hemmer Hem Foot. This image shows the top surface of the metal presser foot, resting on a dark, textured mat. The attachment mechanism is visible, indicating where it connects to the sewing machine's presser foot holder.

Note: For specific instructions on changing presser feet, refer to your sewing machine's owner's manual.

4. OPERATING INSTRUCTIONS

Achieving a perfect narrow hem requires a bit of practice. Follow these steps for best results:

1. **Prepare Fabric:** Trim the edge of your fabric straight. For very lightweight fabrics, you may want to press a small initial fold (about 1/8" to 1/4") along the edge to help guide it into the foot.
2. **Position Fabric:** Place the fabric under the presser foot with the raw edge slightly to the right of the foot's scroll.
3. **Initial Fold:** Lower the needle into the fabric. Take the raw edge of the fabric and manually fold it into the scroll of the foot. You may need to use a stiletto or tweezers to help guide the fabric into the scroll, ensuring it folds twice to create the narrow hem.
4. **Begin Sewing:** Start sewing slowly. As the fabric feeds, the scroll will continue to fold the fabric edge for you. Gently guide the fabric, keeping the raw edge aligned with the right side of the scroll. Do not pull or push the fabric forcefully; allow the feed dogs to do most of the work.
5. **Maintain Tension:** Ensure your machine's tension is appropriate for your fabric type. Incorrect tension can lead to puckering or loose stitches.
6. **Practice:** Practice on scrap fabric before working on your final project to get a feel for the foot and your machine's settings.

Tips for Success:

- Use a straight stitch.

- Adjust stitch length as needed; a slightly shorter stitch can create a more secure hem.
- For delicate or slippery fabrics, consider using a temporary adhesive or starch to stabilize the edge before hemming.

5. MAINTENANCE

To ensure your NGOSEW Narrow Hemmer Hem Foot remains in excellent working condition:

- **Cleaning:** Periodically wipe the foot with a soft, dry cloth to remove any lint or dust accumulation. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the presser foot in a dry, clean place, preferably in a dedicated sewing accessory box, to prevent damage or loss.
- **Inspection:** Before each use, inspect the foot for any signs of damage or wear. If the foot is bent or damaged, it may affect its performance and should be replaced.

6. TROUBLESHOOTING

If you encounter issues while using the narrow hemmer foot, consider the following:

Problem	Possible Cause	Solution
Uneven or crooked hem	Fabric not guided consistently; pulling/pushing fabric; incorrect fabric preparation.	Ensure the raw edge stays aligned with the scroll. Allow feed dogs to move fabric. Practice on scrap fabric.
Fabric not feeding into scroll	Fabric too thick or stiff; initial fold not set correctly; foot not properly installed.	Manually guide the initial fold. Ensure foot is securely attached. This foot is best for light to medium-weight fabrics.
Skipped stitches or thread breaks	Incorrect needle size/type; tension issues; damaged needle.	Change needle to appropriate size for fabric. Adjust tension. Replace bent or dull needle.

7. SPECIFICATIONS

- **Product Type:** Narrow Hemmer Hem Presser Foot
- **Hem Size:** 1/8 inch (approximately 3mm)
- **Shank Type:** Low Shank (Universal)
- **Material:** Metal
- **Compatibility:** Singer Simple Series (2263, 3116, 3221, 3223, 3232, 3337) and most other low shank home sewing machines.

8. WARRANTY AND SUPPORT

For any questions regarding the NGOSEW 1/8" Narrow Hemmer Hem Foot, or if you require assistance, please contact the manufacturer directly through their official channels. Specific warranty information may be provided at the point of purchase or on the manufacturer's website.

Manufacturer: NGOSEW

Please retain your proof of purchase for any warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question