

[Manuals.plus](#) /

› [Yuanshikj](#) /

› Yuanshikj Electronic Digital Security Safe Box User Manual

Yuanshikj YSKJ-SAFE-17K-SFB

Yuanshikj Electronic Digital Security Safe Box User Manual

Model: YSKJ-SAFE-17K-SFB

Brand: Yuanshikj

1. INTRODUCTION AND OVERVIEW

This manual provides comprehensive instructions for the installation, operation, and maintenance of your Yuanshikj Electronic Digital Security Safe Box. Designed for home, office, hotel, and business use, this compact safe offers secure storage for valuables such as jewelry, cash, and important documents. It features a digital keypad for easy access and comes with emergency keys for backup.



Image: The Yuanshikj Electronic Digital Security Safe Box, showcasing its black exterior, electronic keypad, and traditional keyhole. The safe is compact and designed for secure storage.

The safe is constructed from reinforced solid steel with dual security steel door locking bolts, ensuring robust protection. Its durable powder-coated finish resists corrosion and stains. The compact design allows for versatile placement in various environments.



Image: A detailed diagram highlighting key features of the safe, including the solid locking bolts, special steel plate construction, the internal reset button, the digital locking button, and visual indicators for correct password, low battery, and password error on the keypad.

2. SAFETY INFORMATION

- This safe is designed for security against unauthorized access and is not fireproof or water-resistant. Do not store highly flammable or water-sensitive items without additional protection.
- Always keep the emergency keys in a secure location, separate from the safe itself, and away from unauthorized individuals.
- Ensure the safe is placed on a stable, level surface or securely mounted to prevent tipping.
- Do not attempt to force the safe open if the electronic lock malfunctions. Use the emergency key.
- Keep the keypad clean and dry. Avoid using abrasive cleaners.

3. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- 1 x Yuanshikj Electronic Digital Security Safe Box
- 1 x Operation Instruction Manual (this document)
- 2 x Emergency Keys
- 2 x Expansion Screws (for mounting)

4. SETUP

4.1. Initial Opening

Upon receiving your safe, it will be in a locked state. To open it for the first time:

1. Locate the emergency keyhole, usually hidden behind a small cover on the keypad panel.
2. Insert one of the provided emergency keys into the keyhole and turn it counter-clockwise.
3. While holding the key turned, rotate the knob on the safe door clockwise to open the safe.

4.2. Battery Installation

The electronic keypad requires batteries to function. The battery compartment is located inside the safe door.

1. Open the safe door using the emergency key (if not already open).
2. Locate the battery compartment cover on the inside of the door.
3. Remove the cover and insert 4 x AA batteries (not included), ensuring correct polarity (+/-).
4. Replace the battery compartment cover.

A low battery indicator will typically light up on the keypad when batteries need replacement.

4.3. Setting Your Personal Passcode

You can set a personal passcode (3-8 digits) for electronic access. It is recommended to change the factory default code immediately.

1. With the safe door open, locate the red reset button on the inside of the door, near the hinge.
2. Press the red reset button. You will hear a beep, and the yellow light on the keypad will illuminate.
3. Within 5 seconds, enter your desired 3-8 digit passcode on the keypad.
4. Press the "E" or "#" button to confirm. You will hear a confirmation beep, and the yellow light will turn off.
5. Test your new passcode with the door open to ensure it works correctly before closing the safe.

If the yellow light flashes and you hear a series of beeps, the code was not set correctly. Repeat the steps.

5. OPERATING INSTRUCTIONS

5.1. Opening the Safe with Your Passcode

1. Enter your 3-8 digit personal passcode on the keypad.
2. Press the "E" or "#" button to confirm.
3. If the code is correct, the green light will illuminate. Within 5 seconds, rotate the knob on the safe door clockwise to open.
4. If the code is incorrect, the yellow light will flash, and you will hear a beep. After three incorrect attempts, the system will lock for 20 seconds. After three more incorrect attempts, it will lock for 5 minutes.

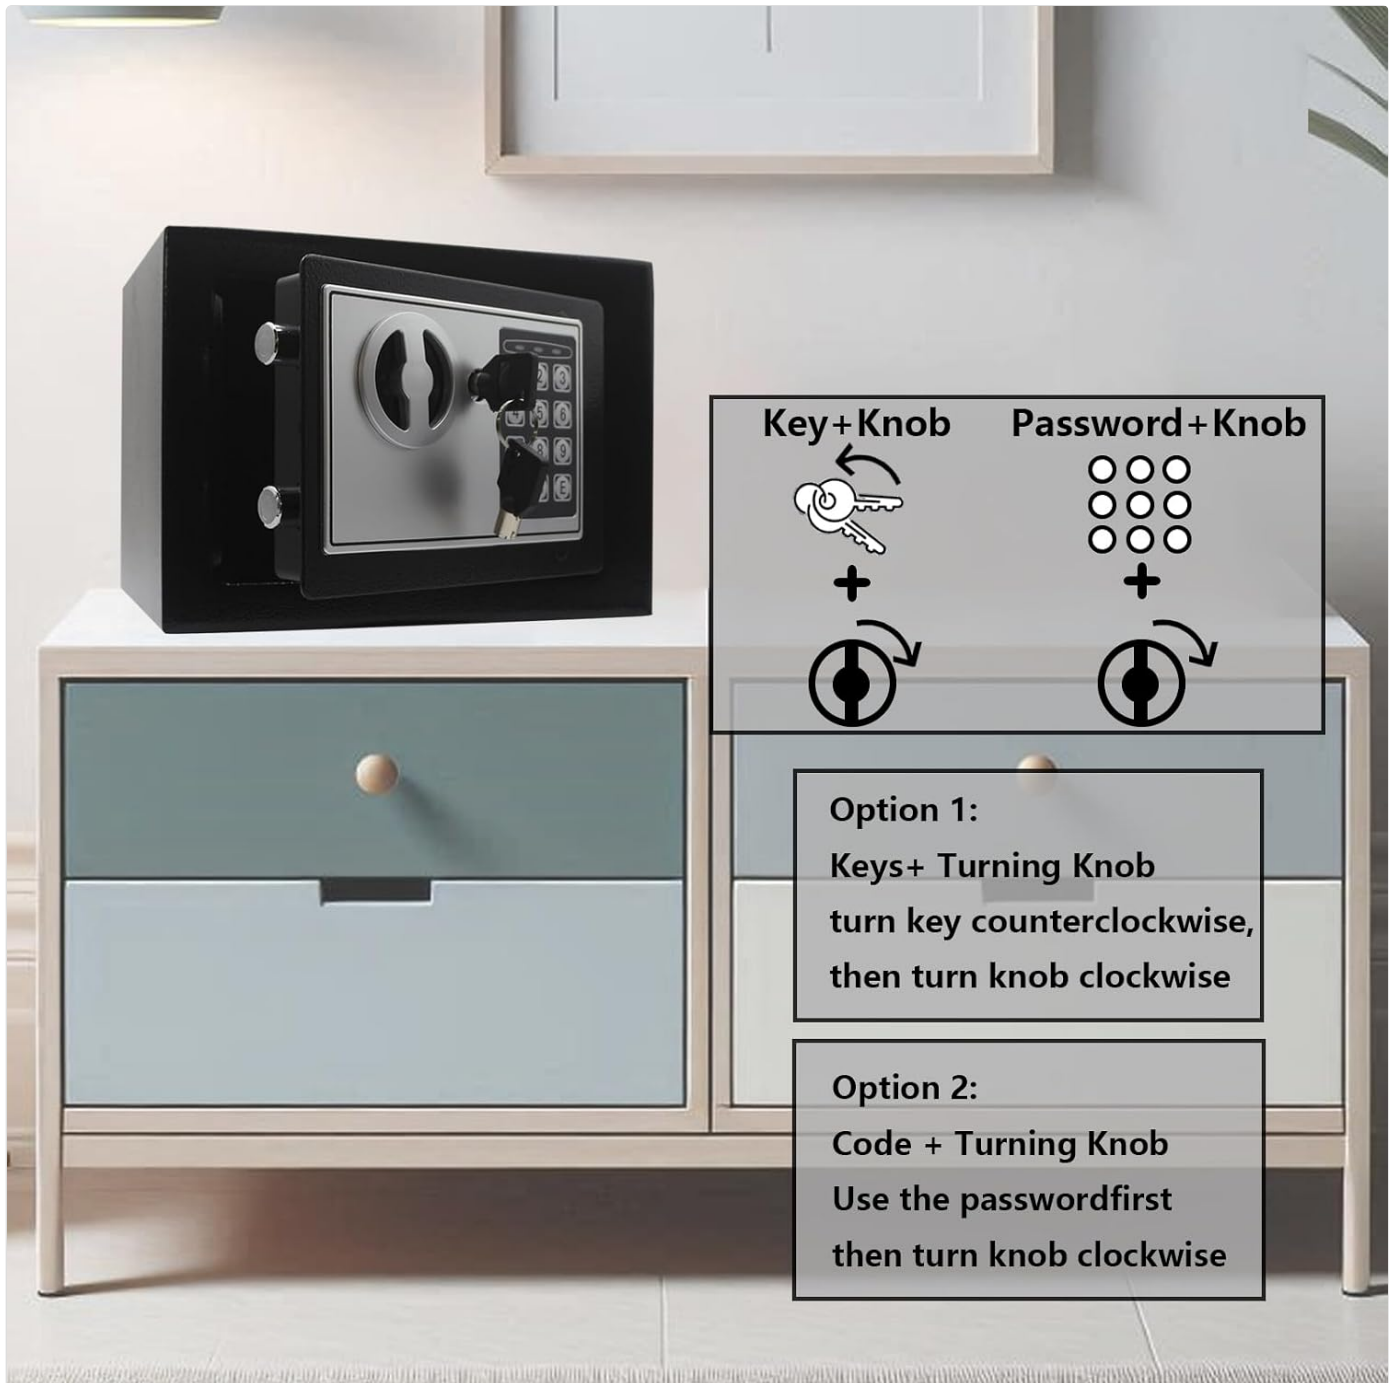


Image: Illustration demonstrating the two methods of opening the safe: using the emergency key in conjunction with turning the knob, or entering the digital password followed by turning the knob.

5.2. Opening the Safe with Emergency Key

The emergency key provides immediate access in case of forgotten passcode, dead batteries, or electronic malfunction.

1. Remove the small cover on the keypad panel to reveal the emergency keyhole.
2. Insert the emergency key and turn it counter-clockwise.
3. While holding the key turned, rotate the knob on the safe door clockwise to open.

5.3. Locking the Safe

To lock the safe, simply close the door firmly. The locking bolts will automatically engage.

6. MOUNTING INSTRUCTIONS



For enhanced security, the safe can be mounted to a wall or floor using the pre-drilled holes and included expansion screws.



Image: Visual guide illustrating how the safe can be mounted to a wall or secured to the floor, showing the placement of mounting holes.


1. Choose a suitable location for mounting. Ensure the surface is solid and can support the weight of the safe and its contents.
2. Open the safe door. Locate the pre-drilled holes on the back or bottom of the safe.
3. Mark the drilling points on the wall or floor through the pre-drilled holes.
4. Drill holes at the marked points using an appropriate drill bit for your wall/floor material.
5. Align the safe with the drilled holes and insert the expansion screws through the safe's holes into the wall/floor.
6. Tighten the screws securely to fasten the safe in place.

How to Secure a Safe

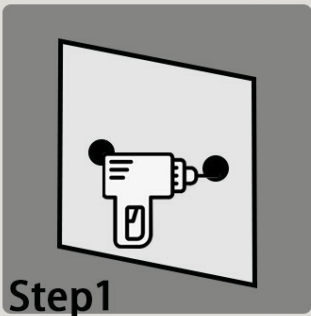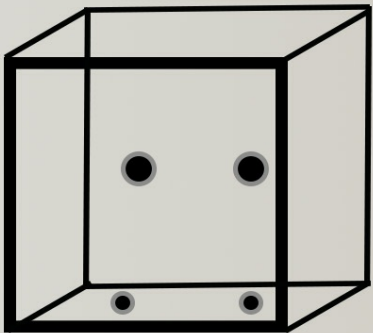


Step1

Punching Holes

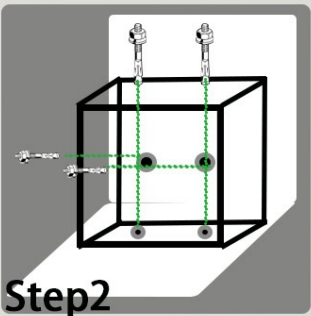

Step2

Installing Screws

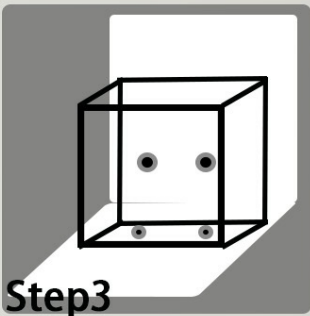

Step3

Complete

Image: A step-by-step visual guide demonstrating the process of securing the safe, from punching holes in the mounting surface to installing and tightening the screws.

7. MAINTENANCE

- **Battery Replacement:** Replace batteries promptly when the low battery indicator appears to ensure continuous electronic access. Frequent battery replacement may be necessary depending on usage.
- **Cleaning:** Wipe the exterior of the safe with a soft, damp cloth. Avoid harsh chemicals or abrasive materials that could damage the finish.
- **Key Storage:** Store emergency keys in a secure, hidden location known only to trusted individuals. Do not store them inside the safe.
- **Door Operation:** Avoid slamming the safe door, as this can potentially dislodge batteries or affect the electronic locking mechanism.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Safe does not open with passcode.	Incorrect passcode entered; low batteries; batteries dislodged.	Re-enter passcode carefully. Replace batteries. Ensure batteries are seated correctly. Use emergency key to open.
Keypad is unresponsive.	Dead or improperly installed batteries.	Replace batteries with new ones, ensuring correct polarity.
Safe door does not close/lock properly.	Obstruction in the door frame; locking bolts misaligned.	Check for any objects blocking the door. Gently push the door firmly to ensure bolts engage.
Forgotten passcode.	Passcode has been forgotten.	Use the emergency key to open the safe. Once open, reset the passcode using the red reset button inside the door.

9. SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Brand	Yuanshikj
Model Number	YSKJ-SAFE-17K-SFB
Product Dimensions (External)	9.1"W x 6.7"D x 6.7"H (23.1cm W x 17cm D x 17cm H)
Interior Dimensions (Chamber)	8.9"W x 6.5"D x 6.5"H (22.6cm W x 16.5cm D x 16.5cm H)
Capacity	0.2 Cubic Feet
Lock Type	Electronic Keypad or Key
Color	BLACK
Material	Alloy Steel
Item Weight	5.3 Pounds (2.4 kg)
Mounting Type	Wall Mount (pre-drilled holes)
Control Type	Push Button Control
Alarm	Anti-theft (audible alert for incorrect entries)
Water Resistance Level	Not Water Resistant
Included Components	Safe Box, Operation Instruction, 2 Expansion Screws, 2 Keys

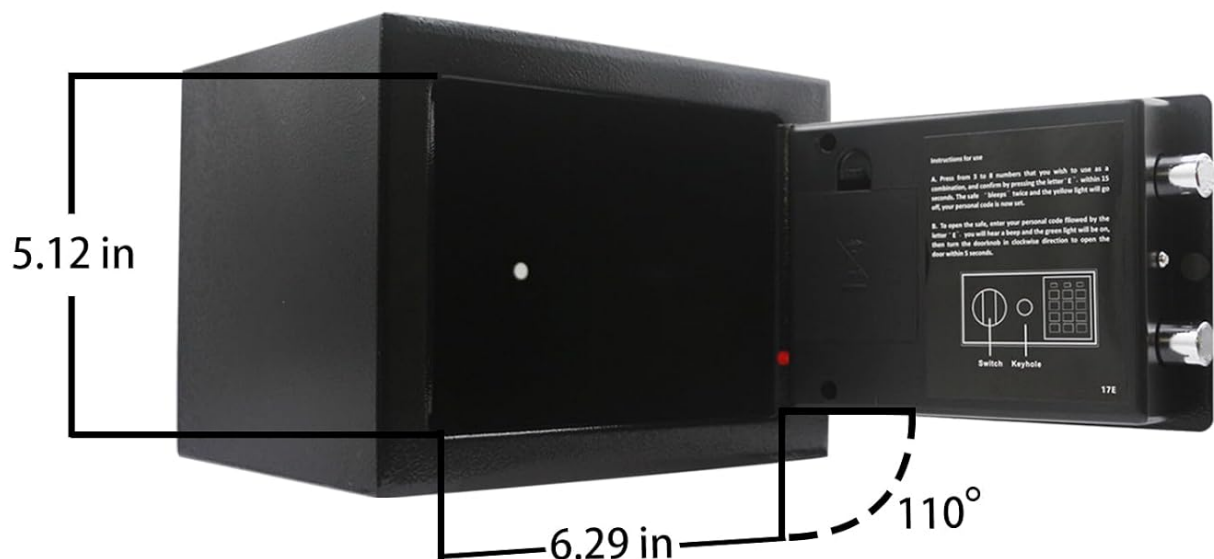
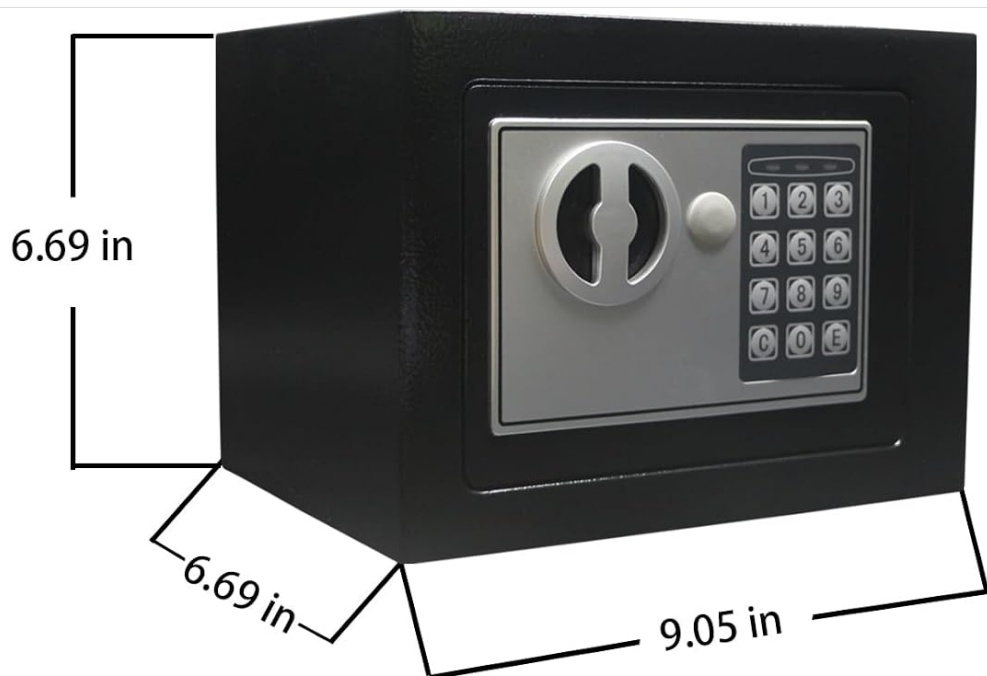


Image: Technical drawing illustrating the external and internal dimensions of the safe, including width, depth, and height measurements.

10. WARRANTY AND SUPPORT

For warranty information or technical support, please contact Yuanshikj customer service through the retailer where the product was purchased or visit the official Yuanshikj website. Please have your model number (YSKJ-SAFE-17K-SFB) and purchase details ready when contacting support.

For additional resources and product information, you may visit the [Yuanshikj Store on Amazon](#).

© 2025 Yuanshikj. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Where is the serial number located on the Yuanshikj YSKJ-SAFE-17K-SFB Electronic Digital Security Safe Box?

The provided manual for the Yuanshikj YSKJ-SAFE-17K-SFB does not explicitly state the location of a unique serial number. However, for most small electronic safes of this type, you should check the following common locations: The...

[Read full answer](#)

How do I silence the beeps when entering my code on the Yuanshikj YSKJ-SAFE-17K-SFB Electronic Digital Security Safe Box?

Based on the provided manual for the Yuanshikj YSKJ-SAFE-17K-SFB Electronic Digital Security Safe Box, there is no documented procedure for silencing the keypad beeps or entering a "silent mode." The manual indicates that beeps are...

[Read full answer](#)

How can I open my Yuanshikj YSKJ-SAFE-17K-SFB safe if I have forgotten the code and do not have the emergency key?

According to the Yuanshikj YSKJ-SAFE-17K-SFB manual, there are only two official ways to open the safe: using the digital passcode or using the physical emergency keys. If you have forgotten the code and do...

[Read full answer](#)