

Ergosolid Castor 2

Ergosolid Castor 2 TV Table Stand Instruction Manual

Model: Castor 2

IMPORTANT SAFETY INFORMATION

Please read this entire instruction manual before installation and assembly. If you have any questions regarding any of the instructions or warnings, please contact your local distributor for assistance. Keep this manual for future reference.

- This product is designed for installation by qualified personnel only.
- Ensure the mounting surface can safely support the combined weight of the equipment and all attached hardware.
- Never exceed the maximum load capacity of 40 kg (88 lbs).
- Use the safety cable provided to prevent accidental tipping.
- Always use a helper or mechanical lifting equipment to safely lift and position the television.
- Tighten screws firmly but do not overtighten. Overtightening can damage components.
- Do not use this product for any purpose not explicitly specified by the manufacturer.

PACKAGE CONTENTS

Verify that all components are present and undamaged before assembly. If any parts are missing or defective, do not proceed with assembly. Contact customer support for replacement parts.

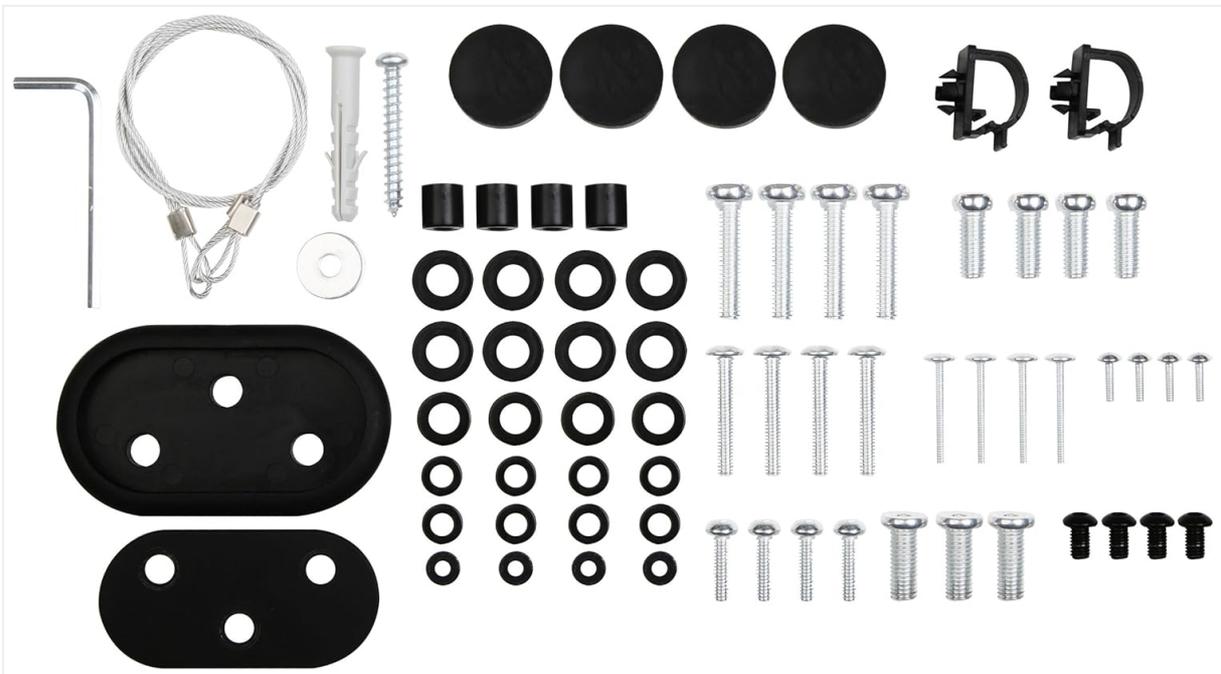


Image: All components and hardware included with the Ergosolid Castor 2 TV Table Stand. This includes the glass base, metal column, TV mounting plate, TV brackets, various screws, washers, spacers, cable clips, and a safety cable.

- TV Stand Base (Glass)
- Support Column
- TV Mounting Plate
- TV Brackets (2x)
- Set of Screws and Hardware (various sizes for TV and stand assembly)
- Installation Instructions (this manual)
- Safety Cable

SETUP AND ASSEMBLY

Follow these steps carefully to assemble your Ergosolid Castor 2 TV Table Stand.

1. **Attach the Support Column to the Base:**

Place the glass base on a soft, clean surface to prevent scratches. Align the support column with the pre-drilled holes on the base. Secure it using the appropriate screws and washers from the hardware kit. Ensure it is firmly tightened.

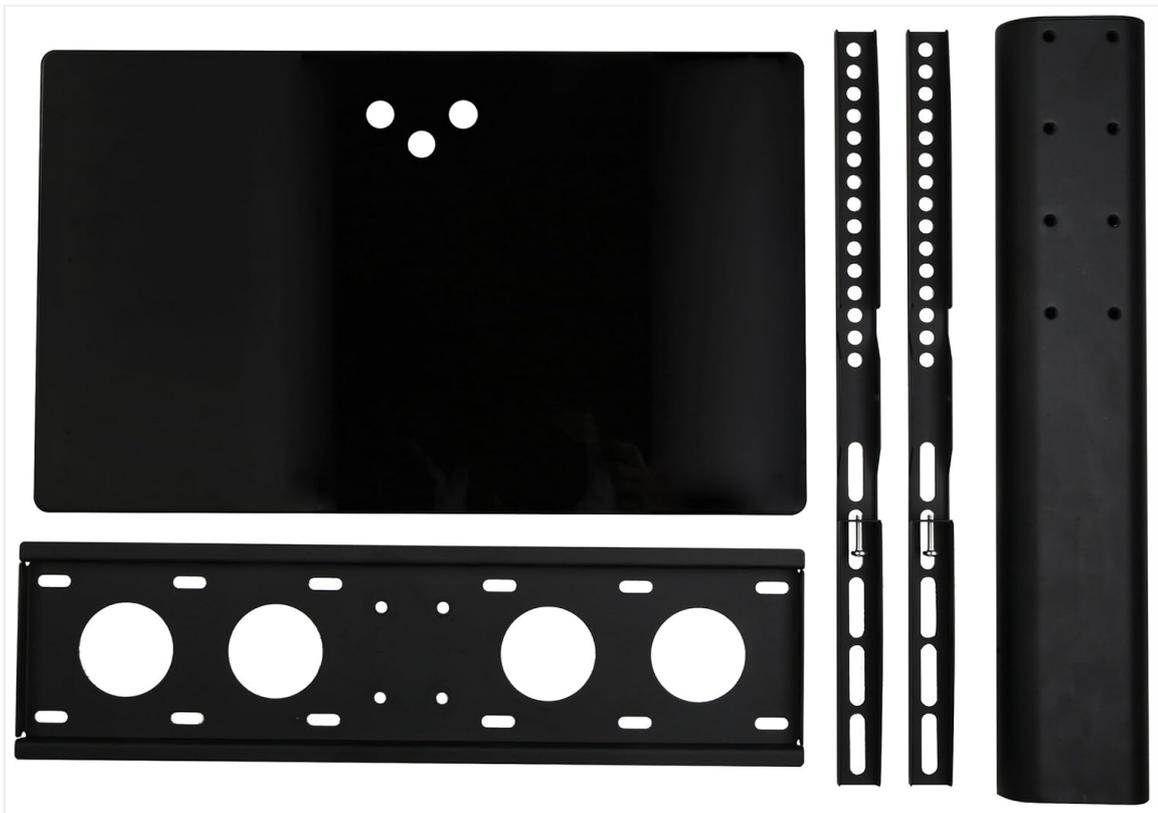


Image: Main components of the TV stand laid out, including the glass base, metal column, and TV mounting plate, ready for assembly.

2. Attach the TV Mounting Plate to the Support Column:

Position the TV mounting plate onto the top of the support column. Secure it using the provided screws. Ensure the plate is level and securely fastened.

3. Attach TV Brackets to your Television:

Identify the VESA mounting holes on the back of your television. Select the correct screws, washers, and spacers from the hardware kit that fit your TV's VESA pattern (100x100mm up to 400x400mm). Attach the two TV brackets to the back of your television. Ensure the brackets are oriented correctly (hooks facing downwards) and are securely tightened.



Image: Close-up view of a TV bracket being attached to the back of a television with a screw, demonstrating the connection point.

4. Mount the Television onto the Stand:

With assistance, carefully lift the television and hook the attached TV brackets onto the TV mounting plate. Ensure both brackets are properly seated on the plate. Secure the TV to the plate using the locking screws or mechanisms provided on the brackets.



Image: Front view of the assembled Ergosolid Castor 2 TV Table Stand with a television mounted, showcasing the final product.

5. Cable Management:

Use the provided cable clips to route and organize your TV cables along the support column. This helps maintain a tidy appearance and prevents cable damage.

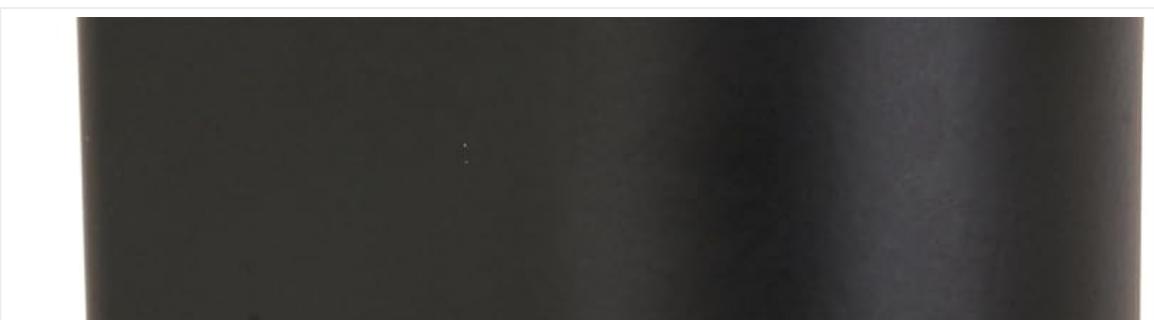




Image: Close-up of a cable management clip attached to the support column of the TV stand, illustrating how cables can be organized.

6. Install the Safety Cable:

Attach one end of the safety cable to the designated point on the TV stand or the back of your TV. Secure the other end to a wall stud or a sturdy piece of furniture using the provided hardware. This

prevents the TV from accidentally tipping over.

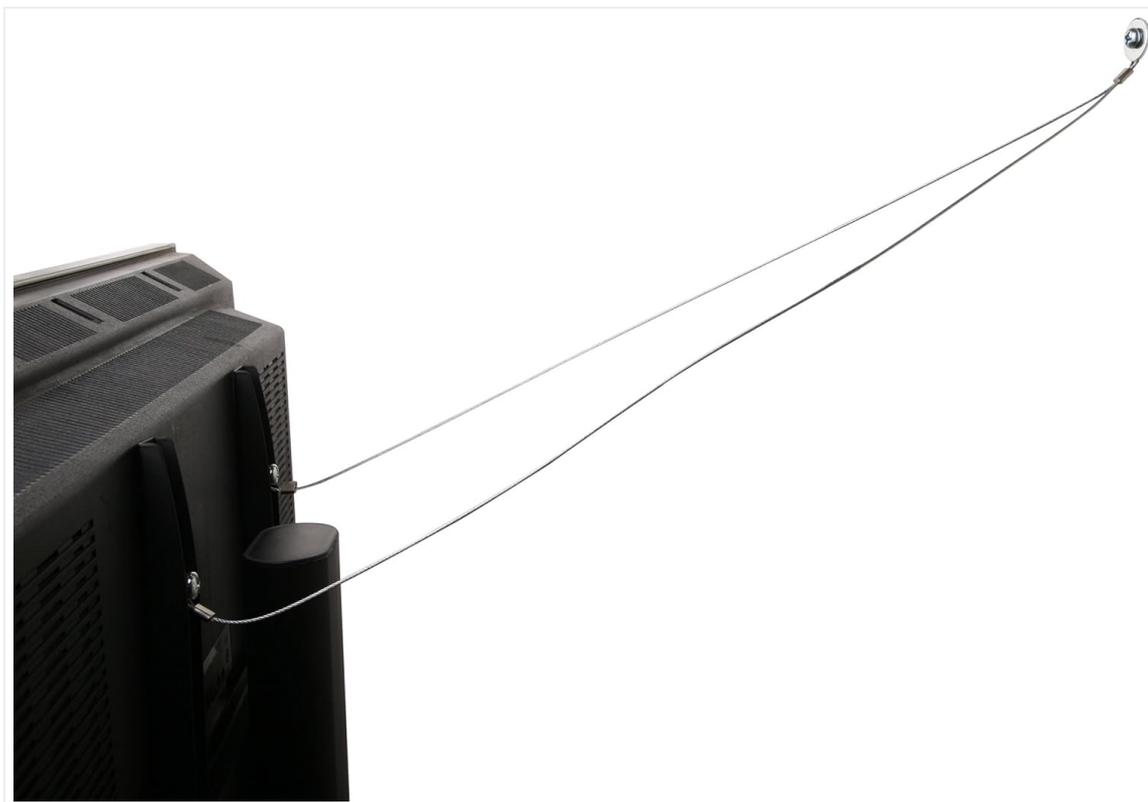


Image: Safety cable attached from the back of a television to a wall anchor point, demonstrating the anti-tip mechanism.

OPERATING AND ADJUSTMENTS

The Ergosolid Castor 2 TV Table Stand allows for height adjustment of your television.

- **Height Adjustment:** The TV brackets offer multiple mounting points on the TV mounting plate, allowing you to set the desired height for your television. To adjust, carefully remove the TV from the stand (with assistance), reposition the brackets on the mounting plate, and re-mount the TV.
- **Weight Capacity:** Ensure the total weight of your television does not exceed 40 kg (88 lbs).

MAINTENANCE

Proper maintenance ensures the longevity and safe operation of your TV stand.

- **Cleaning:** Use a soft, damp cloth to clean the glass base and metal components. Avoid abrasive cleaners or solvents that could damage the finish.
- **Periodic Checks:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary, but do not overtighten.
- **Damage:** If any part of the stand becomes damaged, discontinue use immediately and contact customer support for replacement parts.

TROUBLESHOOTING

If you encounter issues during or after assembly, refer to these common solutions.

- **Stand is unstable:** Ensure all screws are properly tightened, especially those connecting the column to the base and the TV plate to the column. Verify the stand is on a flat, level surface.

- **TV does not fit the brackets:** Double-check your TV's VESA pattern against the stand's compatibility (100x100mm to 400x400mm). Ensure you are using the correct screws and spacers for your TV model.
- **Missing parts:** Refer to the 'Package Contents' section. If parts are missing, contact customer support. Do not attempt to substitute parts.

SPECIFICATIONS

Feature	Specification
Brand	Ergosolid
Model	Castor 2
Compatible TV Sizes	32 - 55 inches (81 - 140 cm diagonal)
Maximum Load Capacity	40 kg (88 lbs)
VESA Compatibility	100x100mm up to 400x400mm
Base Dimensions	260 x 425mm (Tempered Glass)
Material	Metal Alloy, Tempered Glass
Color	Black
Movement Type	Adjustable Height

WARRANTY AND SUPPORT

This Ergosolid Castor 2 TV Table Stand comes with a 2-year warranty from the date of purchase. This warranty covers manufacturing defects and material flaws under normal use.

For warranty claims, technical support, or replacement parts, please contact your retailer or Ergosolid customer service with your purchase receipt and product model information.