LA SOMMELIERE CIG251

La Sommeliere CIG251 Cigar Humidor User Manual

Model: CIG251 | Brand: LA SOMMELIERE

1. Important Safety Instructions

Please read all instructions carefully before using your La Sommeliere CIG251 cigar humidor. Keep this manual for future reference.

- Ensure the humidor is placed on a stable, level surface away from direct sunlight or heat sources.
- Allow adequate ventilation around the unit. Do not block ventilation openings.
- Do not install the humidor inside another cabinet or enclosed space, as this will void the warranty and affect performance.
- Connect to a grounded power outlet only. Do not use extension cords or ungrounded adapters.
- Do not touch the power plug with wet hands.
- Keep children away from the appliance.
- Unplug the humidor before cleaning or performing any maintenance.

2. Product Overview

The La Sommeliere CIG251 is a premium cigar humidor designed to maintain optimal conditions for cigar storage. It features precise temperature and humidity control, ensuring your cigars are perfectly preserved.

Key Features:

- Storage capacity for up to 250 cigars.
- Adjustable temperature setting: 10-22°C.
- Digital temperature and hygrometer display.
- Adjustable humidity level with analog hygrometer.
- Lockable UV-protected glass door.


- 3 wooden shelves made of oak (2 display shelves).
- Interior LED lighting.
- Anti-vibration system.
- Energy Efficiency Class E.



Front view of the La Sommeliere CIG251 cigar humidor, showcasing the digital display, control panel, and interior with cigars on wooden shelves.

3. Components

- **Control Panel:** Digital display for temperature and humidity, temperature adjustment buttons, light control, and power button.
- **Glass Door:** UV-protected and lockable for security and cigar protection.
- **Wooden Shelves:** Three oak shelves, two of which are designed for display.
- **Analog Hygrometer:** Located inside, provides a secondary reading for humidity.
- **Water Tray:** For maintaining humidity levels (located at the bottom).
- **LED Lighting:** Illuminates the interior for better visibility.

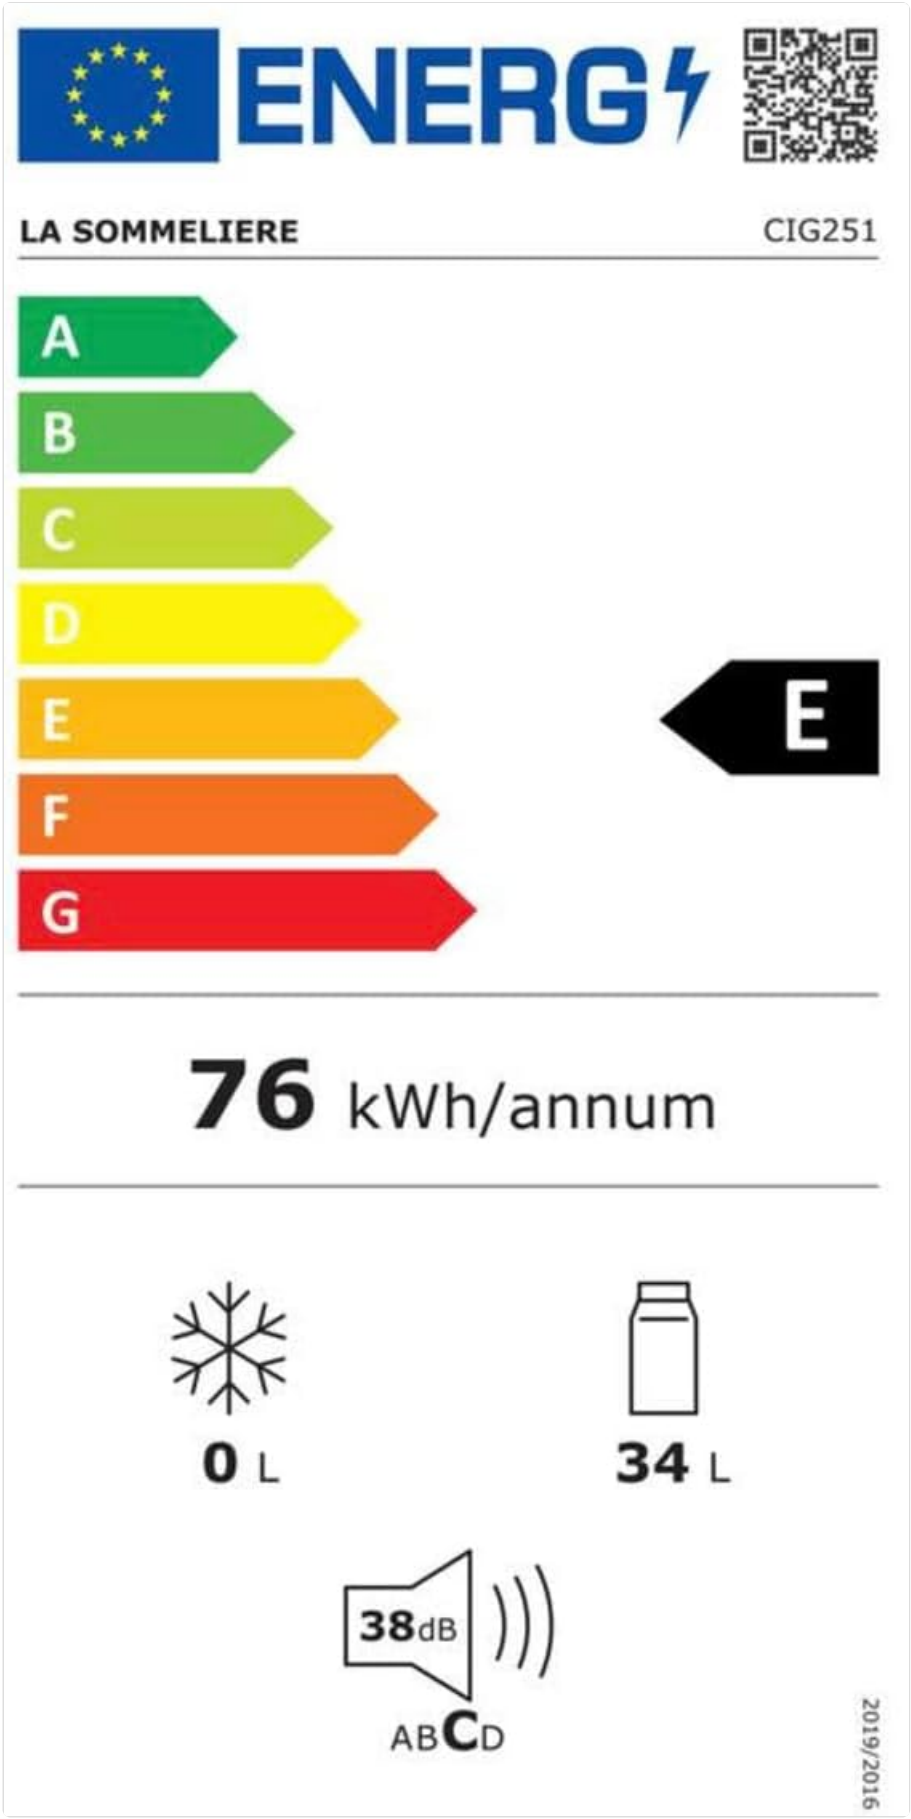

Detailed view of one of the wooden shelves, featuring an integrated analog hygrometer for precise humidity monitoring.



The humidor with its door open, showing the arrangement of the wooden shelves inside.

4. Setup

4.1 Unpacking

Carefully remove the humidor from its packaging. Inspect for any shipping damage. Keep the packaging materials for future transport if needed.

4.2 Placement

Place the humidor on a flat, stable surface. Ensure there is at least 10 cm (4 inches) of space around the back and sides for proper ventilation. Avoid placing it near direct sunlight, heating vents, or other heat-generating appliances.

4.3 Leveling

Adjust the leveling feet at the bottom of the unit to ensure it is perfectly level. This is crucial for proper door sealing and efficient operation.

4.4 Initial Cleaning

Before first use, wipe the interior and exterior with a soft, damp cloth. Do not use abrasive cleaners or solvents. Ensure the interior is completely dry before proceeding.

4.5 Power Connection

Plug the humidor into a dedicated, grounded electrical outlet. Allow the unit to stand for at least 2 hours before

plugging it in if it has been tilted during transport.

5. Operating Instructions

5.1 Control Panel Functions

- **Power Button (U):** Press to turn the unit on or off.
- **Temperature Adjustment (▲ / ▼):** Use the up and down arrows to set the desired temperature between 10°C and 22°C. The digital display will show the current internal temperature.
- **Humidity Adjustment (%):** Press the humidity button to cycle through preset humidity levels or to enter manual adjustment mode (refer to specific model features for detailed steps).
- **Light Button (☀):** Press to turn the interior LED light on or off.

5.2 Seasoning the Humidor

Before storing cigars, it is essential to season the humidor to prevent the wood from absorbing moisture from your cigars. This process can take several days.

1. Wipe down the interior cedar wood surfaces (shelves and walls) with a clean, damp cloth moistened with distilled water. Do not soak the wood.
2. Fill the water tray with distilled water. Place it at the bottom of the humidor.
3. Close the door and allow the humidor to stabilize for 24-48 hours.
4. Monitor the digital hygrometer. Once it consistently reads between 65-72% relative humidity, the humidor is seasoned and ready for cigars.
5. Repeat the wiping process if humidity levels do not rise sufficiently.

5.3 Loading Cigars

Once seasoned, carefully place your cigars on the wooden shelves. Avoid overfilling to allow for proper air circulation. Utilize the display shelves for showcasing your collection.



Cigars properly stored on the wooden shelves inside the humidor.

6. Maintenance

6.1 Cleaning

- **Exterior:** Wipe with a soft, dry cloth. For stubborn marks, use a mild detergent and water, then dry thoroughly.
- **Interior:** Use a soft, damp cloth with distilled water only. Do not use soap or chemical cleaners inside, as they can contaminate your cigars.
- **Glass Door:** Clean with a glass cleaner and a soft cloth.

6.2 Water Tray Refilling

Regularly check the water level in the water tray. Refill with distilled water as needed to maintain desired humidity levels. Do not use tap water, as it can leave mineral deposits.

6.3 Hygrometer Calibration

Periodically check the accuracy of the analog hygrometer. If it seems inaccurate, you can calibrate it using a salt solution method or a calibration kit.

7. Troubleshooting

If you experience issues with your humidor, consult the table below for common problems and solutions.

Problem	Possible Cause	Solution
Humidor not cooling	Power issue, poor ventilation, door not sealed	Check power connection; ensure adequate space around unit; check door seal and close firmly.
Humidity too low	Water tray empty, humidor not seasoned, door not sealed	Refill water tray with distilled water; re-season humidor; check door seal.
Humidity too high	Too much water, ambient humidity too high	Reduce water in tray; ensure room is not excessively humid.
Unusual noise	Unit not level, fan obstruction	Adjust leveling feet; check for obstructions around the fan.
Digital display not working	Power interruption, malfunction	Unplug and re-plug the unit; if problem persists, contact customer support.

If the problem persists after trying these solutions, please contact customer support.

8. Specifications

Specification	Value
Model Number	CIG251
Brand	LA SOMMELIERE
Color	Black
Product Dimensions (H x W x D)	50.5 cm x 39.5 cm x 50 cm
Capacity	42 Liters (approx. 250 cigars)
Power/Wattage	60 watts
Voltage	220 Volts
Material	Metal
Noise Level	39 dB
Special Features	Removable Shelf
Recommended Uses	Home Bar
First Available Date	August 30, 2023



Ficha de información del producto

REGLAMENTO DELEGADO (UE) 2019/2016 DE LA COMISIÓN

Nombre o marca comercial del proveedor: LA SOMMELIERE			
Dirección del proveedor: MARKETING LA SOMMELIERE, BOULEVARD PIERRE LEFAUCHEUX 143, 72230 ARNAGE, FR			
Identificador del modelo: CIG251			
Tipo de aparato de refrigeración:			
Aparato de bajo nivel de ruido:	No	Tipo de diseño:	De libre instalación
Armarios para la conservación de vi-	No	Otros aparatos de refrigeración:	Sí

nos:					

Parámetros generales del producto:

Parámetro		Valor	Parámetro	Valor
Dimensiones totales (milímetros)	Altura	506	Volumen total (dm³ o l)	32
	Anchura	396		
	Profundidad	520		
IEE		122	Clase de eficiencia energética	F
Ruido acústico aéreo emitido [dB(A) re 1 pW]		41	Clase de ruido acústico aéreo emitido	C
Consumo de energía anual (kWh/a)		93,0	Clase climática:	tropical
Temperatura ambiente mínima (°C) en la que puede funcionar el aparato de refrigeración		16	Temperatura ambiente máxima (°C) en la que puede funcionar el aparato de refrigeración	38
Ajuste de invierno		No		

Parámetros de los compartimentos:

Tipo de compartimento		Parámetros y valores de los compartimentos			
		Volumen del compartimento (dm³ o l)	Ajuste de temperatura recomendado para la conservación optimizada de los alimentos (°C). Estos ajustes no contradirán las condiciones de conservación contempladas en el anexo IV, cuadro 3.	Capacidad de congelación (kg/24h)	Defrosting type (auto-defrost=A, manual defrost=M)
Despensa	No	-	-	-	-
Conservación de vinos	No	-	-	-	-

Compartimento bodega	Sí	32,0	-	-	A,
Alimentos frescos	No	-	-	-	-
Helador	No	-	-	-	-
0 estrellas o fabricación de hielo	No	-	-	-	-
1 estrella	No	-	-	-	-
2 estrellas	No	-	-	-	-
3 estrellas	No	-	-	-	-
4 estrellas	No	-	-	-	-
Sección 2 estrellas	No	-	-	-	-
Compartimento de temperatura variable	-	-	-	-	-

Parámetros de las fuentes luminosas:

Tipo de fuente luminosa	-
Clase de eficiencia energética	-

Duración mínima de la garantía ofrecida por el fabricante: 12 meses

Información adicional:

Enlace del sitio web del fabricante, en el que se encuentra la información contemplada en el punto 4, letra a), del anexo del Reglamento (UE) 2019/2019: https://www.interfroidservices.fr/

EU Energy Label for the CIG251 model, indicating an Energy Class E and annual energy consumption of 76 kWh. For more details, visit the official EPREL database: https://eprel.ec.europa.eu/qr/441724

9. Warranty Information

The manufacturer offers a minimum warranty period of**12 months** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

Please note that the warranty may be voided if the product is installed inside another cabinet or used for purposes other than its intended design (freestanding cigar storage).

Keep your proof of purchase for any warranty claims.

10. Customer Support

For further assistance, technical support, or warranty claims, please contact your retailer or the official La Sommeliere customer service. Refer to the product packaging or the manufacturer's website for contact details.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question