

Cecotec 01508

Cecotec Power Matic-ccino 8000 Touch Coffee Maker User Manual

Model: 01508

INTRODUCTION

Welcome to the user manual for your new Cecotec Power Matic-ccino 8000 Touch Super Automatic Coffee Maker. This appliance is designed to provide a premium coffee experience, allowing you to prepare a wide variety of hot beverages with ease. Featuring a highly intuitive touchscreen LED display, 19-bar ForceAroma technology, and a versatile Plug&Play system, this machine offers customizable settings for intensity, aroma, temperature, volume, and milk frothing. Please read this manual carefully to ensure proper setup, operation, and maintenance, maximizing the lifespan and performance of your coffee maker.



Figure 1: Cecotec Power Matic-cino 8000 Touch Coffee Maker with its external milk tank, preparing a latte.

SETUP AND FIRST USE

1. Unpacking and Placement

- Carefully remove all packaging materials and protective films from the coffee maker.
- Place the appliance on a stable, flat, and heat-resistant surface, away from direct sunlight and heat sources.
- Ensure adequate ventilation around the machine.

2. Initial Cleaning

- Wash the water tank, milk tank, drip tray, and coffee grounds container with warm soapy water. Rinse thoroughly and dry.
- Wipe the exterior of the coffee maker with a damp cloth.

3. Filling the Water Tank

- Remove the water tank (1.7 L capacity) from the back or side of the machine.
- Fill it with fresh, cold drinking water up to the MAX line.
- Insert the water tank back into its position until it clicks securely.

4. Loading Coffee Beans or Ground Coffee

- For coffee beans: Open the lid of the 250g coffee bean container. Pour fresh coffee beans into the container. Close the lid to preserve aroma.
- For ground coffee: Open the extra independent pod container. Add one scoop of pre-ground coffee. This container is for single-serve ground coffee only.



Figure 2: Side view of the coffee maker, showing the water tank and coffee bean container.

OPERATING INSTRUCTIONS

1. Powering On

- Plug the coffee maker into a suitable power outlet.
- Press the power button. The machine will perform an automatic rinsing cycle (Thermoblock rapid heating system).
- Wait for the display to indicate that the machine is ready for use.

2. Using the Touch Control Panel

- The LED touchscreen display provides intuitive access to all functions.
- Select your desired beverage from the main menu (Espresso, Latte, Cappuccino, Macchiato, Hot Milk, Water).



Figure 3: Interactive touch control panel for beverage selection.

3. Customizing Your Coffee (Custom4You System)

- Before brewing, you can adjust parameters such as:
 - **Intensity and Aroma:** Adjust the amount of coffee ground per cup.
 - **Temperature:** Select your preferred brewing temperature.
 - **Volume:** Customize the water volume for your drink.

- **Milk Frothing Time:** Control the duration of milk frothing for desired consistency.
- **Water Hardness:** Set according to your local water supply for optimal descaling reminders.
- The machine allows you to memorize your personalized settings for future use.

4. Preparing Milk-Based Beverages (AllCappuccino System)

- Connect the FullLatte milk tank (400 ml capacity) to the coffee maker.
- Fill the milk tank with fresh milk.
- Select a milk-based beverage (e.g., Latte, Cappuccino). The AllCappuccino system will automatically add coffee, milk, and foam directly to your cup.
- After use, the milk tank can be stored in the refrigerator to keep milk fresh.



Figure 4: The FullLatte milk tank is designed for convenient refrigerator storage.

5. Adjusting Coffee Outlet Height

- The coffee outlet is height-adjustable from 10.5 cm to 15 cm to accommodate various cup sizes, from espresso cups to large breakfast mugs.



Figure 5: The adjustable coffee outlet accommodates different cup sizes.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance are crucial for the longevity and optimal performance of your Cecotec coffee maker. The **AlwaysClean system** ensures individualized circuit cleaning.

1. Daily Cleaning

- **Drip Tray and Coffee Grounds Container:** Empty and rinse daily. The removable drip tray has a float system fill indicator.
- **Milk System:** After preparing milk-based beverages, perform a quick rinse cycle for the milk frother. Disassemble and clean the milk tank and tube with warm soapy water.
- **Coffee Outlet:** Wipe clean with a damp cloth.

2. Descaling

- The machine will prompt you when descaling is required, based on the water hardness setting.

- Follow the on-screen instructions for the descaling process using a suitable descaling solution for coffee machines.

3. Cleaning the Brewing Unit

- Refer to the machine's menu for instructions on removing and cleaning the internal brewing unit. This should be done periodically.
- Rinse the brewing unit under running water and allow it to air dry before reinserting.

TROUBLESHOOTING

If you encounter issues with your coffee maker, please refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Coffee is not dispensing or is dispensing slowly.	Clogged coffee outlet, brewing unit dirty, or machine needs descaling.	Clean the coffee outlet. Clean the brewing unit. Perform a descaling cycle.
Milk is not frothing properly.	Milk tank/tube clogged, milk is not cold enough, or milk type is unsuitable.	Clean the milk tank and tube thoroughly. Use fresh, cold milk. Try different milk types (e.g., whole milk).
"Empujar depósito agua" (Push water tank) error.	Water tank not correctly inserted or empty.	Ensure the water tank is fully pushed into its position. Refill the water tank if empty.
Coffee tastes weak or watery.	Incorrect grind setting, insufficient coffee dose, or water hardness setting.	Adjust the ceramic grinder to a finer setting (5 levels available). Increase coffee intensity via Custom4You system. Check water hardness setting.
Machine is noisy during operation.	Normal operation sounds (grinding, pump), or air trapped in the system.	This is often normal. If excessive, run a hot water cycle to clear air. Ensure water tank is full.

For issues not listed here, or if solutions do not resolve the problem, please contact Cecotec customer support.

SPECIFICATIONS

Feature	Detail
Brand	Cecotec
Model Number	01508
Color	Bianca Series
Product Dimensions	51.5 x 35 x 43.5 cm
Item Weight	11.1 kg
Water Tank Capacity	1.7 Liters


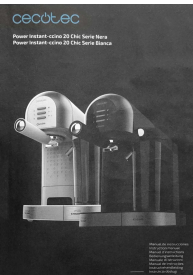
Feature	Detail
Coffee Bean Container Capacity	250 g
Milk Tank Capacity	400 ml
Power / Wattage	1500 watts
Voltage	230
Pressure Pump	19 bar (ForceAroma technology)
Heating System	Thermoblock
Grinder	Integrated ceramic grinder with 5 levels
Special Features	Built-in display, Built-in Grinder, Milk Tank, Auto-off (programmable)





WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official Cecotec website. If you require technical assistance or have questions regarding your Cecotec Power Matic-ccino 8000 Touch coffee maker, please contact Cecotec customer service directly.

© 2024 Cecotec. All rights reserved.

Related Documents - 01508

	<p>Cecotec Power Matic-ccino 8000 Touch: Manual de Instrucciones y Uso Detallado</p> <p>Descubra cómo utilizar su cafetera automática Cecotec Power Matic-ccino 8000 Touch Serie Nera. Este manual proporciona instrucciones detalladas sobre operación, limpieza, mantenimiento y especificaciones técnicas para disfrutar de cafés perfectos.</p>
	<p>Cecotec Power Instant-ccino 20 Chic Coffee Machine User Manual</p> <p>Comprehensive instruction manual for the Cecotec Power Instant-ccino 20 Chic Serie Nera and Serie Bianca coffee machines, covering setup, operation, cleaning, maintenance, troubleshooting, and warranty.</p>

	<p>Cecotec Cremmaet Compactccino Super-automatic Coffee Machine User Manual</p> <p>Comprehensive user manual for the Cecotec Cremmaet Compactccino Super-automatic Coffee Machine, covering safety instructions, operation, cleaning, maintenance, troubleshooting, and technical specifications.</p>
	<p>Cecotec FreeStyle Latte Capsule Coffee Machine User Manual</p> <p>Comprehensive user manual for the Cecotec FreeStyle Latte capsule coffee machine, covering setup, operation, cleaning, maintenance, troubleshooting, and technical specifications.</p>
	<p>Cecotec Cremmaet Compact Automatic Coffee Machine User Manual</p> <p>Comprehensive user manual for the Cecotec Cremmaet Compact automatic coffee machine, covering safety instructions, operation, maintenance, troubleshooting, and technical specifications.</p>
	<p>Cecotec Power Espresso 20 Matic Instruction Manual</p> <p>Comprehensive instruction manual for the Cecotec Power Espresso 20 Matic espresso machine, covering safety, parts, first use, operation, cleaning, maintenance, troubleshooting, technical specifications, and disposal.</p>