

## AAOBOSI SJE-006

# Aobosi SJE-006 Slow Juicer Instruction Manual

Model: SJE-006 | Brand: AAOBOSI

## 1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the Aobosi SJE-006 Slow Juicer. Retain this manual for future reference. Failure to follow these safety guidelines may result in electric shock, fire, or serious injury.

- Always unplug the juicer from the power outlet before assembling, disassembling, or cleaning.
- Do not immerse the motor base in water or any other liquid. Clean with a damp cloth only.
- Keep hands and utensils away from the feeding chute during operation to prevent injury. Use the food pusher provided.
- Ensure all parts are correctly assembled and locked before operating the juicer. The safety lock feature prevents operation if not properly assembled.
- Do not process frozen fruits, hard seeds, or ice in the juicer, as this can damage the auger and other components.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not operate the appliance if it has been dropped or damaged in any way. Contact customer support for assistance.
- Avoid using attachments not recommended or sold by the manufacturer, as they may cause fire, electric shock, or injury.

## 2. PRODUCT OVERVIEW

The Aobosi SJE-006 Slow Juicer is designed for efficient and quiet juice extraction, preserving nutrients through its masticating technology. It features a compact design and user-friendly components.

### 2.1 Key Features

- **Compact Design:** Space-saving footprint for any kitchen.
- **Masticating Technology:** Extracts juice by slowly pressing ingredients, minimizing oxidation and preserving enzymes, nutrients, and vitamins.
- **Higher Juice Yield:** Designed to extract more juice from fruits and vegetables.

- **Quiet Operation:** Operates at less than 60dB, ensuring a peaceful juicing experience.
- **Premium Filter:** Food-grade 304 stainless steel filter with small holes for purer juice and easy cleaning.
- **Durable Materials:** Constructed with Tritan material (BPA-free) for safe drinking and a stainless steel body for longevity.
- **Safety Lock:** Ensures the juicer is correctly assembled before operation.
- **Reverse Function:** Helps clear clogs during operation.
- **Waterproof Button Cover:** Protects the power switch from splashes.
- **Portable Handle:** Integrated handle for easy transport.

# COMPACT DESIGN

Your kitchen space saver



Figure 2.1: The Aobosi SJE-006 Slow Juicer showcasing its compact design alongside fresh fruits and a glass of juice.

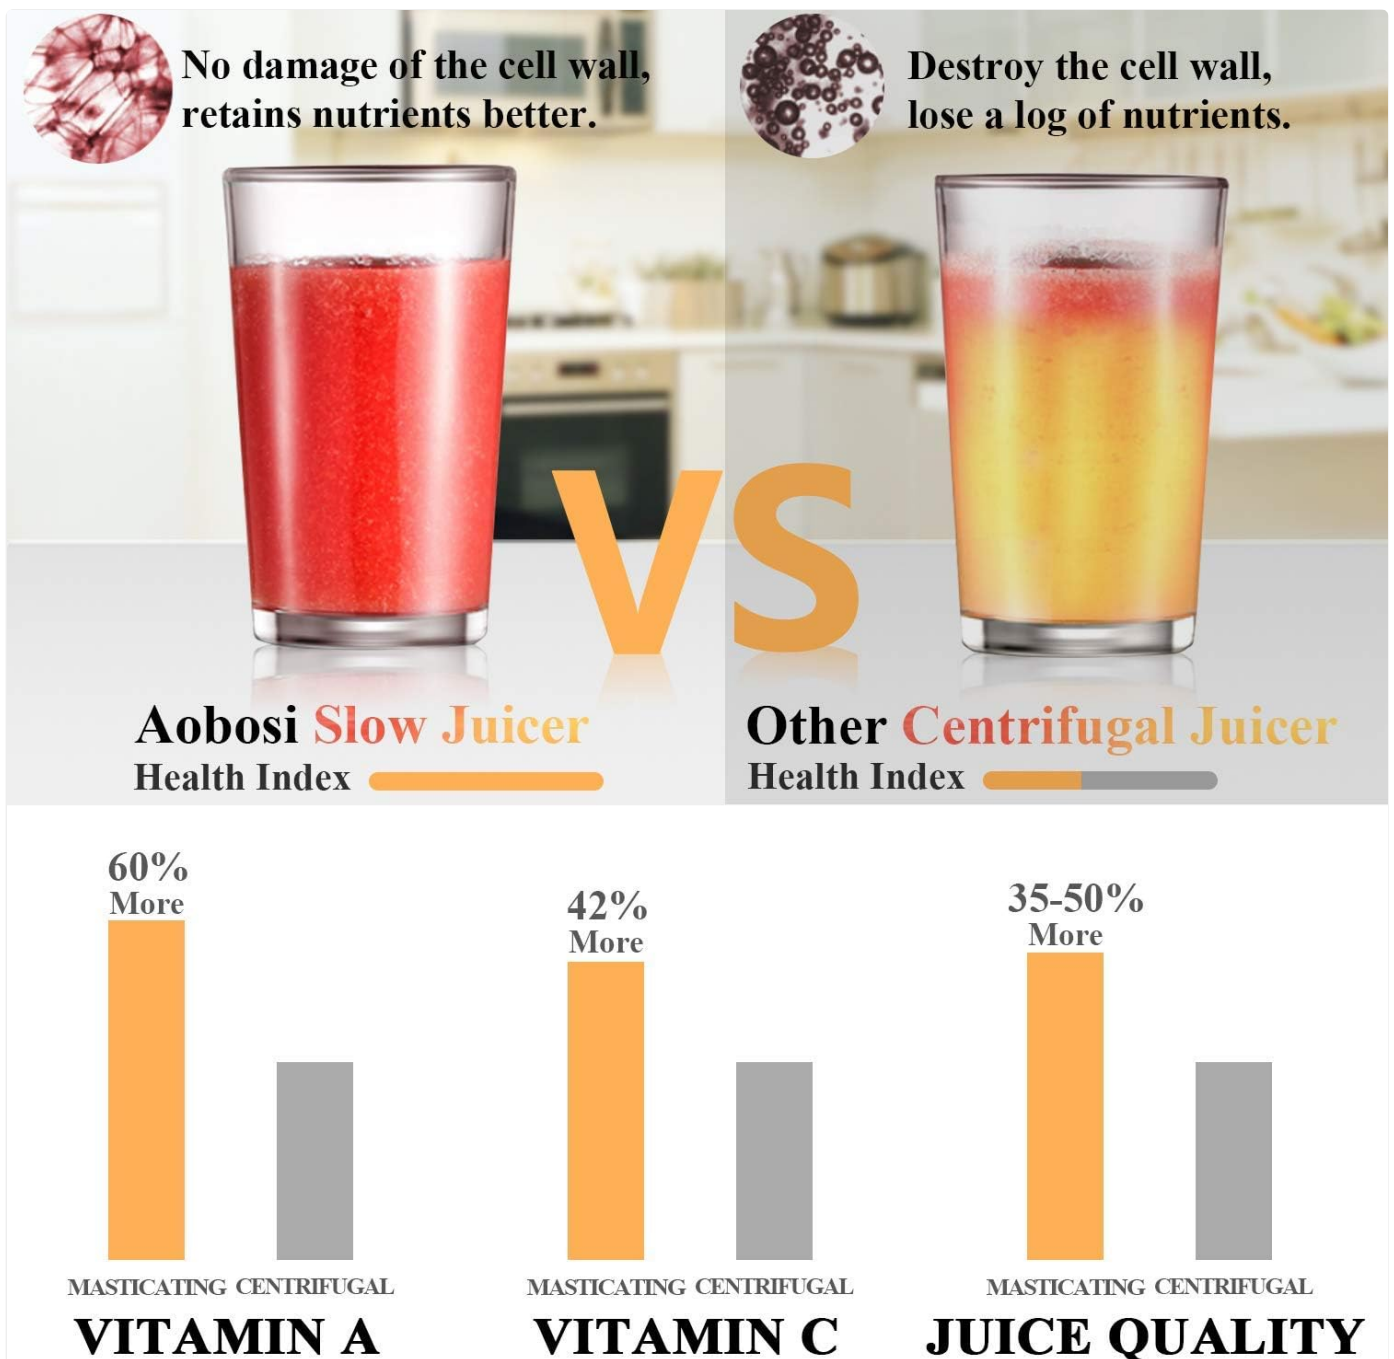


Figure 2.2: A visual comparison illustrating how the Aobosi Slow Juicer's masticating technology retains more nutrients and causes less cell wall damage than traditional centrifugal juicers.

# Quiet Operation

— Less than 60db —



10 db  
Blossom



20 db  
leaves  
sound



30 db  
Whisper



40 db  
Alarm  
Clock



**Aobosi slow juicer**  
Normal  
Chat



70 db  
Phone  
Ringing



90 db  
Car  
Horns

Figure 2.3: This image demonstrates the quiet operation of the Aobosi SJE-006 Slow Juicer, indicating noise levels below 60dB, comparable to a normal conversation.

# Humanized Features



Figure 2.4: Detailed view of the juicer highlighting features such as Tritan material, portable handle, pulp outlet, safety lock, waterproof button cover, and stainless steel body.

## 2.2 Components

Familiarize yourself with the following components of your Aobosi SJE-006 Slow Juicer:

1. Motor Base (with power cord and control switch)
2. Juicing Bowl
3. Filter (fine mesh)
4. Auger (slow press screw)
5. Juicer Cover (with feeding chute)
6. Food Pusher
7. Juice Cup
8. Pulp Cup
9. Cleaning Brush

### 3. SETUP AND ASSEMBLY

Before first use, wash all detachable parts (juicing bowl, filter, auger, juicer cover, juice cup, pulp cup, food pusher) in warm soapy water, rinse thoroughly, and dry. The motor base should only be wiped with a damp cloth.

#### Assembly Steps:

## Installation Steps



Before installing the juicer, please insert the silicone tab to pulp hole which is at the bottom of the bowl, otherwise the juice leaking would happen.



Align the "O" mark on the juicing bowl with the "O" mark on the base, then rotate it in the clockwise direction to keep it point to "lock" mark.



Align the bottom bulge of the filter with the bottom grooves of the juicing bowl until it is fixed well.



Place the auger at the center hole of the juicing bowl then rotate and push to the bottom of the juicing bowl.



Place the juicer cover at the juicing bowl, align "O" mark on juicer cover with "O" mark on juicing bowl.



Rotate the juicer cover in the clockwise direction to keep it point to "lock" mark on juicing bowl.

Figure 3.1: Visual guide for assembling the Aobosi SJE-006 Slow Juicer.

- 1. Prepare the Juicing Bowl:** Before installing the juicer, ensure the silicone tab is correctly placed into the pulp hole at the bottom of the juicing bowl. This prevents juice leakage.
- 2. Attach Juicing Bowl to Motor Base:** Align the "O" mark on the juicing bowl with the "O" mark on the motor base. Rotate the juicing bowl clockwise until it points to the "lock" mark.
- 3. Insert Filter:** Align the bottom bulge of the filter with the bottom grooves of the juicing bowl until it is fixed securely.
- 4. Place Auger:** Place the auger into the center hole of the juicing bowl. Rotate and push it down firmly until it sits correctly.
- 5. Attach Juicer Cover:** Place the juicer cover onto the juicing bowl. Align the "O" mark on the juicer cover with the "O" mark on the juicing bowl.
- 6. Lock Juicer Cover:** Rotate the juicer cover clockwise until it points to the "lock" mark. The juicer is now assembled and ready for use.

### 4. OPERATING INSTRUCTIONS

Follow these steps to operate your Aobosi SJE-006 Slow Juicer and enjoy fresh, nutritious juice.

## 4.1 Preparation of Ingredients

- Wash all fruits and vegetables thoroughly.
- Peel fruits with thick skins (e.g., oranges, lemons, pineapples).
- Remove hard seeds or pits from fruits (e.g., peaches, cherries, mangoes) to prevent damage to the auger.
- Cut ingredients into small pieces (approximately 1-2 inches or 2-5 cm) that fit easily into the feeding chute. For fibrous vegetables like celery or leafy greens, cut them into shorter lengths to prevent clogging.

## 4.2 Juicing Process

1. Ensure the juicer is correctly assembled and locked.
2. Place the juice cup under the juice spout and the pulp cup under the pulp outlet.
3. Plug the power cord into a grounded electrical outlet.
4. Press the "ON" button to start the juicer.
5. Slowly feed the prepared ingredients into the feeding chute. Use the food pusher gently to guide ingredients down. Do not force ingredients.
6. The juicer will extract juice, which will flow into the juice cup, and the pulp will be expelled into the pulp cup.
7. Once all ingredients are processed, press the "OFF" button to stop the juicer.
8. Unplug the appliance from the power outlet.

## 4.3 Reverse Function

If ingredients become jammed or the juicer stops during operation, press and hold the "R" (Reverse) button for a few seconds. This will rotate the auger in the opposite direction to dislodge the blockage. Release the "R" button, then press "ON" to resume juicing. If the blockage persists, disassemble the juicer, clear the obstruction, and reassemble before continuing.

# Higher Juice Yield



Figure 4.1: Illustration of the high juice yield capability of the Aobosi SJE-006 Slow Juicer for different produce types, showing extraction rates for apples, oranges, celery, and ginger.

## 5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Aobosi SJE-006 Slow Juicer.

### 5.1 Disassembly for Cleaning

1. Ensure the juicer is turned off and unplugged from the power outlet.
2. Remove the juice cup and pulp cup.
3. Rotate the juicer cover counter-clockwise to unlock and remove it.
4. Remove the auger, then the filter.
5. Rotate the juicing bowl counter-clockwise to unlock and remove it from the motor base.

### 5.2 Cleaning the Components

- **Motor Base:** Wipe the exterior of the motor base with a soft, damp cloth. Never immerse the motor base in water or any other liquid.
- **Detachable Parts:** The juicing bowl, filter, auger, juicer cover, juice cup, pulp cup, and food pusher are dishwasher safe. For manual cleaning, rinse them under running water immediately after use to prevent pulp from drying. Use the provided cleaning brush to remove any stubborn pulp from the filter mesh and other crevices. Wash with warm soapy water, rinse thoroughly, and dry.
- **Silicone Tab:** Ensure the small silicone tab in the pulp outlet of the juicing bowl is clean and properly seated after cleaning to prevent leaks.

# Premium Filter

## Food Grade 304 Stainless Steel



ANTI-ABRASIVE  
MATERIAL



BPA FREE  
SAFE



HEAT  
RESISTANCE

- Improve juice extraction rate
- Removable for easy clean
- No residue



Dimming holes on filter  
makes the juice purer



Cleaning Brush  
Easy for cleaning



Figure 5.1: The premium filter, highlighting its design for efficient juice extraction and the included cleaning brush for easy maintenance. The filter's dimming holes contribute to purer juice.

### 5.3 Storage

After cleaning and drying all parts, reassemble the juicer or store the components in a clean, dry place away from direct sunlight and heat. Keep the juicer out of reach of children.

## 6. TROUBLESHOOTING

If you encounter any issues with your Aobosi SJE-006 Slow Juicer, refer to the following table for common problems and solutions.

| Problem                                         | Possible Cause                                                                              | Solution                                                                                                                                                                                                                                                         |
|-------------------------------------------------|---------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Juicer does not turn on.                        | Not plugged in.<br>Not properly assembled/locked.<br>Power outage.                          | Ensure the power cord is securely plugged into a working outlet.<br>Check that all parts are correctly assembled and the juicer cover is locked into place (refer to Section 3).<br>Check your household's circuit breaker.                                      |
| Juicer stops during operation or motor strains. | Ingredients are jammed.<br>Overloading the juicer.<br>Fibrous ingredients causing blockage. | Press and hold the "R" (Reverse) button to clear the blockage.<br>Reduce the amount of ingredients fed at one time.<br>Cut fibrous ingredients (e.g., celery, spinach) into smaller pieces (1-2 cm) before juicing. If blockage persists, disassemble and clean. |
| Juice leaks from the bottom.                    | Silicone tab in pulp hole is not correctly seated.<br>Juicing bowl not properly installed.  | Check and adjust the silicone tab in the pulp outlet of the juicing bowl.<br>Ensure the juicing bowl is correctly aligned and locked onto the motor base.                                                                                                        |
| Low juice yield or wet pulp.                    | Filter is clogged.<br>Ingredients are too soft or overripe.                                 | Disassemble and clean the filter thoroughly with the cleaning brush.<br>Ensure ingredients are fresh and firm. Alternate soft and hard ingredients for better extraction.                                                                                        |

## 7. SPECIFICATIONS

Technical specifications for the Aobosi SJE-006 Slow Juicer.

| Feature               | Detail                                                            |
|-----------------------|-------------------------------------------------------------------|
| Brand                 | AAOBOSI                                                           |
| Model Number          | SJE-006                                                           |
| Power                 | 200 Watts                                                         |
| Material              | Glass (for juice jug), Tritan (BPA-free plastic), Stainless Steel |
| Dishwasher Safe Parts | Yes (detachable parts)                                            |
| UPC                   | 641926182472, 641926182496, 641926182489                          |
| ASIN                  | B07L6C1LF3                                                        |

## 8. WARRANTY AND SUPPORT

AAOBOSI is committed to providing high-quality products and customer satisfaction. For any questions, concerns, or warranty claims regarding your SJE-006 Slow Juicer, please contact our customer support team.

- **Customer Service Email:** [info\\_sibake@126.com](mailto:info_sibake@126.com)
- Please have your model number (SJE-006) and purchase information ready when contacting support.
- Refer to your purchase receipt or product packaging for specific warranty period details.

© 2023 AAOBOSI. All rights reserved.

## ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

### Name

Anonymous

### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question