

Relaxdays 10024155_49

Relaxdays Magnetic 4-Way Locking Cat Flap Instruction Manual - Model 10024155_49

PRODUCT OVERVIEW

This manual provides detailed instructions for the installation, operation, and maintenance of your Relaxdays Magnetic 4-Way Locking Cat Flap. Designed for cats and small dogs, this pet door offers convenience and control over your pet's access to and from your home.

Key Features

- **Functional:** Provides independent access for cats and small dogs, enhancing their freedom and your convenience.
- **4 Modes:** Features a versatile four-way locking mechanism, allowing you to control your pet's movement: open both ways, entry only, exit only, or fully locked.
- **Magnetic Closure:** An integrated magnet ensures the flap closes securely after your pet passes through, preventing it from swinging open unintentionally and maintaining insulation.
- **Insulated Design:** Equipped with a brush seal around the flap's edge to minimize drafts and cold air entry, making it suitable for various weather conditions.
- **Dimensions:** External frame measures approximately 22 cm (height) x 20 cm (width). The internal opening for your pet is approximately 15 cm (height) x 15.5 cm (width).



Image: The Relaxdays Magnetic Cat Flap in white, with a cat peeking through the transparent flap. This image illustrates the product's appearance and how a pet uses it.

SETUP AND INSTALLATION

Careful installation is crucial for the proper function and longevity of your cat flap. This section guides you through the necessary steps to install the product securely in a door or wall.

Tools Required

- Pencil or marker
- Measuring tape
- Drill with appropriate drill bits
- Jigsaw or suitable cutting tool for your door/wall material
- Screwdriver
- Safety glasses and gloves (recommended)

Installation Steps

1. **Determine Placement:** Choose a suitable location on your door or wall. Ensure the bottom of the

flap's internal opening is at a comfortable height for your pet, typically around their belly height. Consider any obstructions on either side of the door/wall.

2. **2. Mark the Opening:** Use the cat flap frame as a template. Place it against the door/wall at your chosen height and carefully trace the inner opening onto the surface. Ensure the template is level and square.
3. **3. Cut the Opening:** Drill pilot holes in the corners of your traced opening. Using a jigsaw or appropriate cutting tool, carefully cut along the traced lines. Ensure the cut is clean and precise. For thicker doors or walls, you may need to cut from both sides to ensure a clean edge.
4. **4. Prepare the Flap:** The cat flap typically comes in two halves. Separate them if they are joined.
5. **5. Insert the Flap:** Place one half of the cat flap into the cut opening from one side, and the other half from the opposite side. Align the screw holes on both halves.
6. **6. Secure the Flap:** Insert the provided screws through the designated holes and tighten them securely. Do not overtighten, as this may damage the plastic frame.
7. **7. Check Operation:** Test the flap to ensure it swings freely and the magnetic closure engages correctly. Also, test the 4-way locking mechanism.

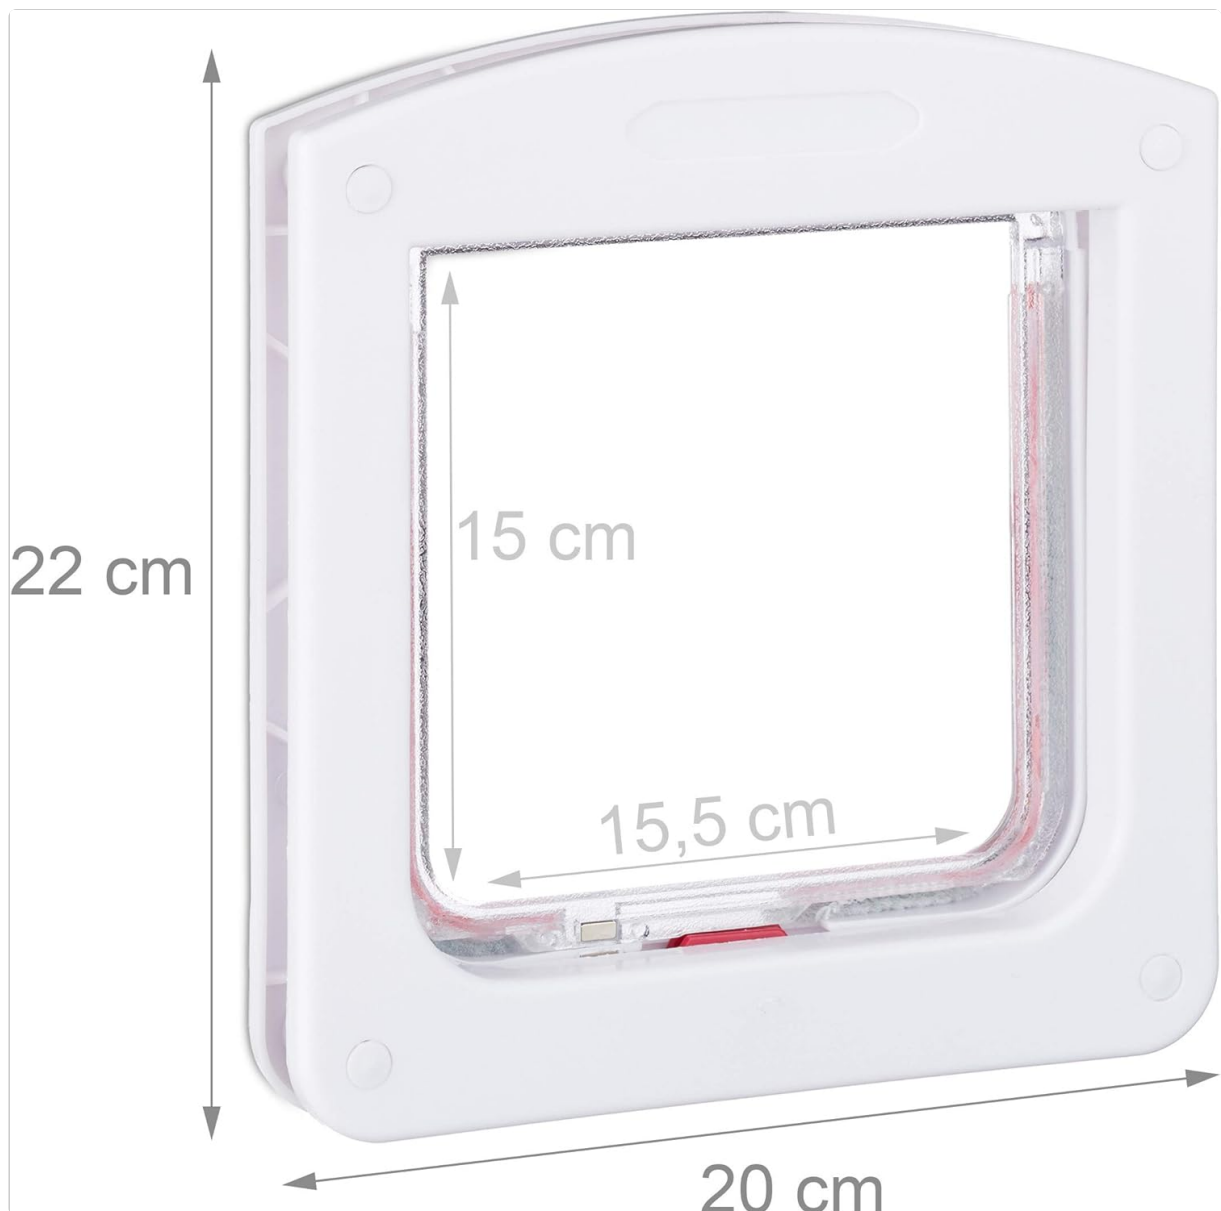


Image: A diagram illustrating the external and internal dimensions of the cat flap. External: 22 cm height, 20 cm width. Internal opening: 15 cm height, 15.5 cm width. These measurements are critical for accurate cutting during installation.



Image: A brown tabby cat is shown exiting a dark brown door through the installed cat flap, demonstrating a typical installation scenario.

OPERATING INSTRUCTIONS

The Relaxdays Cat Flap features a 4-way locking mechanism, allowing you to control your pet's access. The red dial on the flap controls these settings.

4-Way Locking Modes

To change the mode, rotate the red dial to align with the desired icon. The icons represent the following settings:

- 1. Open Both Ways (Unlocked):** *(Represented by two arrows in a circle)* Your pet can freely enter and exit the house. This is the default setting for unrestricted movement.
- 2. Entry Only:** *(Represented by a cat icon with an arrow pointing inwards)* Your pet can enter the house but cannot exit. This is useful for keeping your pet indoors after a certain time or for bringing them in from outside.
- 3. Exit Only:** *(Represented by a cat icon with an arrow pointing outwards)* Your pet can exit the house but cannot re-enter. This is useful if you want to keep your pet outside for a period.

4. Fully Locked: (Represented by a lock icon) The flap is completely locked, preventing both entry and exit. Use this when you want to keep your pet securely inside or outside, or to prevent other animals from entering your home.



Image: A close-up view of the red circular dial on the cat flap, illustrating the four locking positions with their respective icons. This image helps users understand how to select the desired access mode.

MAINTENANCE

Regular maintenance ensures the smooth operation and extends the lifespan of your Relaxdays Cat Flap. Follow these simple steps to keep your pet door in optimal condition:

- **Cleaning:** Clean the cat flap regularly with a damp cloth and mild, non-abrasive soap. Avoid harsh chemicals, abrasive cleaners, or solvents that could damage the plastic or brush seal.
- **Flap Inspection:** Periodically check the transparent flap for any cracks, chips, or damage. Ensure it swings freely without obstruction and that the magnetic closure is working effectively to keep it shut.
- **Brush Seal:** Inspect the brush seal around the flap for accumulated dirt, pet hair, or debris that might hinder its insulating properties or prevent the flap from closing properly. Clean the brush seal gently as needed.
- **Screw Tightness:** Occasionally check that all mounting screws are tight and secure. Retighten if

necessary, but be careful not to overtighten, which could strip the plastic.

TROUBLESHOOTING

If you encounter issues with your cat flap, refer to the following common problems and their potential solutions:

Problem	Possible Cause	Solution
Flap does not close completely or swings open easily.	Debris in the hinge mechanism, weak magnetic attraction, or misaligned installation.	Clean the hinge area and brush seal thoroughly. Check if the magnet is securely in place. Verify the flap was installed level and square; adjust if necessary.
Pet is hesitant to use the flap.	Unfamiliarity with the new object, fear of the flap's movement, or difficulty pushing it open.	Encourage your pet with treats and praise. Temporarily tape the flap open to allow them to get used to the opening, then gradually lower it. Guide them through gently.
Drafts or cold air entering through the flap.	Damaged or dirty brush seal, or improper closure of the flap.	Clean the brush seal to remove any obstructions. Ensure the flap closes fully and the magnet engages properly. If the seal is severely damaged, consider replacing the flap.
Locking mechanism is stiff or not working correctly.	Dirt or debris accumulated within the mechanism, or internal damage.	Clean around the red dial and the locking components. Try to gently work the mechanism back and forth. If it remains stiff or non-functional, avoid forcing it to prevent breakage.

SPECIFICATIONS

Detailed technical specifications for the Relaxdays Magnetic 4-Way Locking Cat Flap.

Feature	Detail
Model Number	10024155_49
Brand	Relaxdays
Color	White
Material	Plastic
External Dimensions (H x W x D)	Approx. 22 x 20 x 3.3 cm
Internal Opening Dimensions (H x W)	Approx. 15 x 15.5 cm
Product Weight	Approx. 220 g

Feature	Detail
Locking Mechanism	4-Way Manual Lock
Magnetic Closure	Yes
Suitable for	Cats and small dogs

WARRANTY AND SUPPORT

Relaxdays products are manufactured to high-quality standards. For any questions regarding your product, installation, or if you require technical support, please contact the manufacturer or your retailer.

Please retain your proof of purchase for warranty claims. Specific warranty terms and conditions may vary by region and retailer. Refer to your purchase documentation for detailed warranty information.