Navaris 44769.03_m001870

Navaris Automatic Pet Food Dispenser User Manual

Model: 44769.03_m001870

1. Introduction

This manual provides detailed instructions for the setup, operation, and maintenance of your Navaris Automatic Pet Food Dispenser. This device is designed to provide regular, portion-controlled meals for your dog or cat, offering convenience and ensuring your pet's dietary needs are met even when you are away.



Image 1.1: Navaris Automatic Pet Food Dispenser, black model, filled with kibble in the bowl.

2. Safety Information

Please read all safety instructions carefully before using the device to prevent injury or damage.

- **Battery Installation:** The ON/OFF button functions only when batteries are inserted. Ensure 3x LR20 D batteries

(not included) are correctly installed for full functionality and as a backup power source.

- **Indoor Use Only:** This dispenser is designed for indoor use. Do not expose to rain or moisture.
- **Food Type:** Use only dry pet food. Do not use wet food, canned food, or treats that may clog the dispenser mechanism.
- **Power Source:** Use the provided USB cable and power adapter. Ensure the power outlet meets the device's requirements.
- **Children and Pets:** Keep out of reach of small children. Supervise pets during initial use to ensure proper interaction with the feeder.

3. Package Contents

Verify that all items are present in the package:

- Navaris Automatic Pet Food Dispenser Unit
- Food Container (6L capacity)
- Food Bowl
- USB Cable (3m)
- Power Adapter
- User Manual (this document)



Image 3.1: Exploded view showing the main unit, food container, food bowl, and power accessories.

4. Setup

Follow these steps to set up your automatic pet food dispenser:

1. **Unpack and Assemble:** Remove all components from the packaging. Ensure the food container is securely placed on the main unit and the food bowl is attached to the front.
2. **Install Batteries (Optional but Recommended):** Open the battery compartment at the bottom of the unit. Insert 3x LR20 D batteries (not included) according to the polarity markings. This provides backup power in case of a power outage.
3. **Connect Power:** Plug the USB cable into the dispenser and connect the power adapter to a wall outlet.
4. **Fill with Food:** Press the button on the lid to open it. Fill the food container with dry pet kibble. The capacity is approximately 6 liters (2-3 kg of kibble). Close the lid securely.



Image 4.1: Visual guide for opening the lid, filling the feeder, programming, and automatic food release.

5. Operating Instructions

The dispenser allows you to program up to 4 meals per day with adjustable portion sizes and an optional voice recording.

5.1 Setting the Current Time

1. Press and hold the **"TIME"** button.

2. While holding **"TIME"**, press the **"HOUR"** button to set the current hour.
3. While holding **"TIME"**, press the **"MINUTE"** button to set the current minute.

5.2 Programming Meal Times and Portions

You can program up to 4 meals (Breakfast, Lunch, Dinner, 4th Meal).

1. Press the **"MEAL"** button to select the meal you wish to program (e.g., 1-Breakfast). The corresponding meal indicator on the display will flash.
2. Use the **"HOUR"** and **"MINUTE"** buttons to set the desired feeding time for that meal.
3. Use the **"PORTION SIZE"** button to adjust the number of portions for that meal. The dispenser offers 39 different portion sizes (minimum 5g - maximum 390g).
4. To enable or disable a meal, press the **"ON/OFF"** button when the meal is selected.
5. Repeat for other meals as desired.

5.3 Voice Recording Feature

You can record a short voice message (up to 10 seconds) that will play at each feeding time to alert your pet.

1. Press and hold the **"MIC"** button. The display will show a recording icon.
2. Speak clearly into the microphone located on the front of the unit.
3. Release the **"MIC"** button to stop recording.
4. To play back your recording, press the **"PLAY"** button.

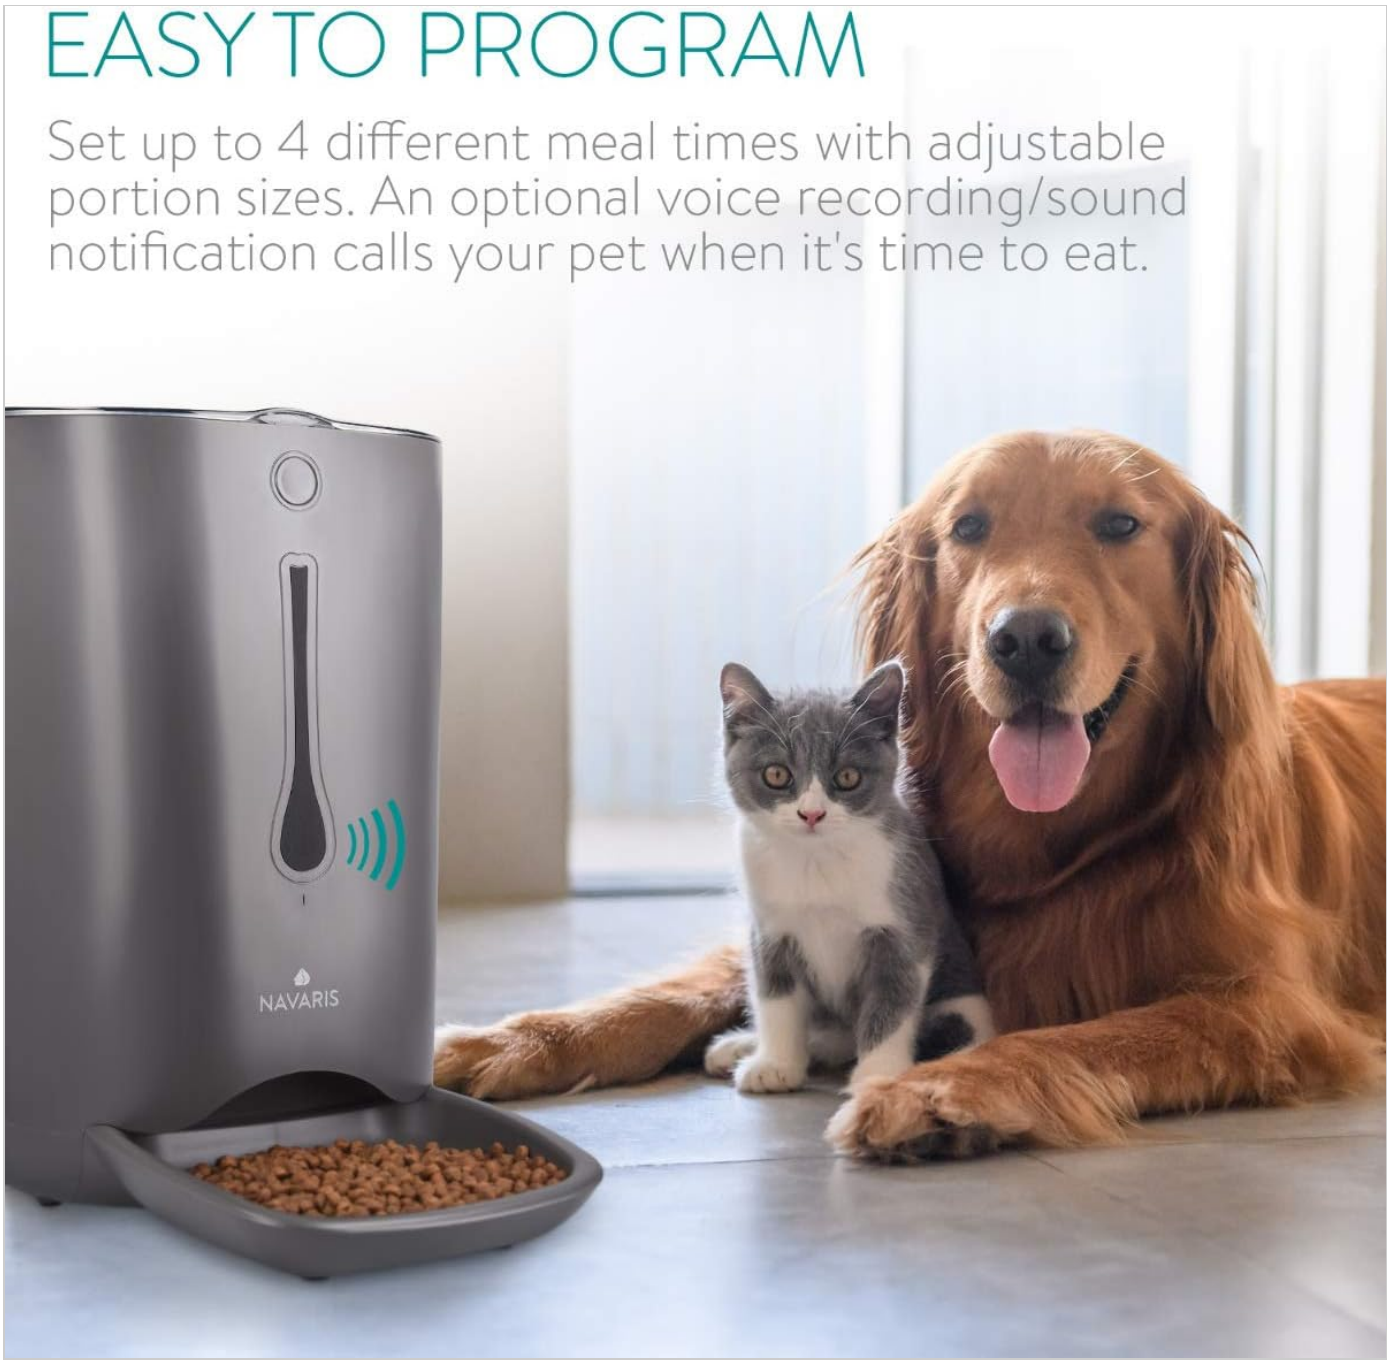


Image 5.1: The dispenser is easy to program, allowing for multiple meal times and portion adjustments. It also features an optional voice recording.

6. Maintenance and Cleaning

Regular cleaning ensures the longevity and hygienic operation of your pet food dispenser.

- **Disassembly:** The dispenser can be easily disassembled for cleaning.
- **Food Container and Bowl:** The food container and food bowl are washable. They can be cleaned by hand with mild soap and water or placed in a dishwasher.
- **Main Unit:** Wipe the main unit with a damp cloth. Do not submerge the main unit in water or place it in a dishwasher, as it contains electronic components.
- **Drying:** Ensure all parts are completely dry before reassembling and refilling with food.

7. Troubleshooting

If you encounter any issues with your Navaris Automatic Pet Food Dispenser, refer to the following common problems

and solutions:

Problem	Possible Cause	Solution
Food not dispensing	Food chute clogged; low food level; dispenser not powered; incorrect programming.	Check for food blockages and clear them. Refill the food container. Ensure the dispenser is properly plugged in or has working batteries. Verify meal times and portion settings.
Voice recording is unclear or not playing	Microphone issue; recording too quiet or too short.	Ensure you speak clearly and close to the microphone during recording. Re-record the message.
Clock loses time	Minor drift in internal clock.	Periodically check and reset the current time as needed. This is a minor drift and does not affect immediate feeding schedules significantly.
Dispenser not turning on	No power; batteries depleted or incorrectly installed.	Check power connection. Replace batteries if using battery power or if they are low. Remember the ON/OFF button requires batteries to function.

8. Specifications

Feature	Detail
Model Number	44769.03_m001870
Dimensions (L x W x H)	35 cm x 25 cm x 39 cm
Weight	10 grams (unit only, without food)
Capacity	6 Liters (approx. 2-3 kg of kibble)
Material	Plastic
Power Supply	Electric current with USB cable (3m) and transformer (included) or 3x LR20 D batteries (not included)
Programmable Meals	Up to 4 meals per day
Portion Sizes	39 levels (min. 5g - max. 390g)
Special Features	Automatic feeding, acoustic timer, voice recording
Target Species	Dog, Cat (suitable for small to medium-sized animals)
Country of Origin	China



Image 8.1: Product dimensions and 6L capacity indication.



Image 8.2: This feeder is suitable for small to medium-sized animals, typically under 60 cm in height and 20 kg in weight, such as Chihuahuas, French Bulldogs, Beagles, and Schnauzers.

9. Warranty and Support

Navaris products are designed and manufactured to high-quality standards. For information regarding warranty, returns, or customer support, please refer to the retailer's specific policies or contact Navaris customer service directly.

Return Policy: If you wish to return a product within 30 days of receipt because you have changed your mind, please consult the retailer's help page on returns. If you have received a defective or damaged product, please consult the retailer's help page on defective items. For specific information on purchases made through a marketplace, please consult the marketplace's help page.

© 2024 Navaris. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question