

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [SEVERIN](#) /

› [SEVERIN Retro Refrigerator-Freezer Combination RKG 8933 User Manual](#)

SEVERIN RKG 8933

SEVERIN Retro Refrigerator-Freezer Combination

Model: RKG 8933

INTRODUCTION

Thank you for choosing the SEVERIN Retro Refrigerator-Freezer Combination RKG 8933. This appliance is designed to provide efficient and reliable cooling and freezing for your food items. With its space-saving design and stylish retro look, it is an ideal addition to any modern kitchen. This manual provides essential information for the safe and effective use, installation, and maintenance of your new appliance.





Figure 1: SEVERIN Retro Refrigerator-Freezer Combination RKG 8933 (Cream)

IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using the appliance and keep them for future reference. Failure to follow these instructions may result in injury or damage to the appliance.

- Ensure the appliance is disconnected from the power supply before cleaning or performing any maintenance.
- Do not damage the refrigerant circuit. If the refrigerant circuit is damaged, avoid open flames and sources of ignition, and ventilate the room thoroughly.
- This appliance is intended for household use only. Do not use it for commercial purposes.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Keep ventilation openings in the appliance enclosure or in the built-in structure clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- Children should be supervised to ensure that they do not play with the appliance.

SETUP AND INSTALLATION

1. Unpacking

Carefully remove all packaging materials. Inspect the appliance for any damage during transit. Keep packaging materials out of reach of children.

2. Placement

Place the refrigerator-freezer on a firm, level surface. Ensure adequate ventilation around the appliance. Do not place it in direct sunlight or near heat sources such as radiators, stoves, or other heat-producing appliances. The appliance is designed to fit in various spaces due to its compact width of 55 cm.



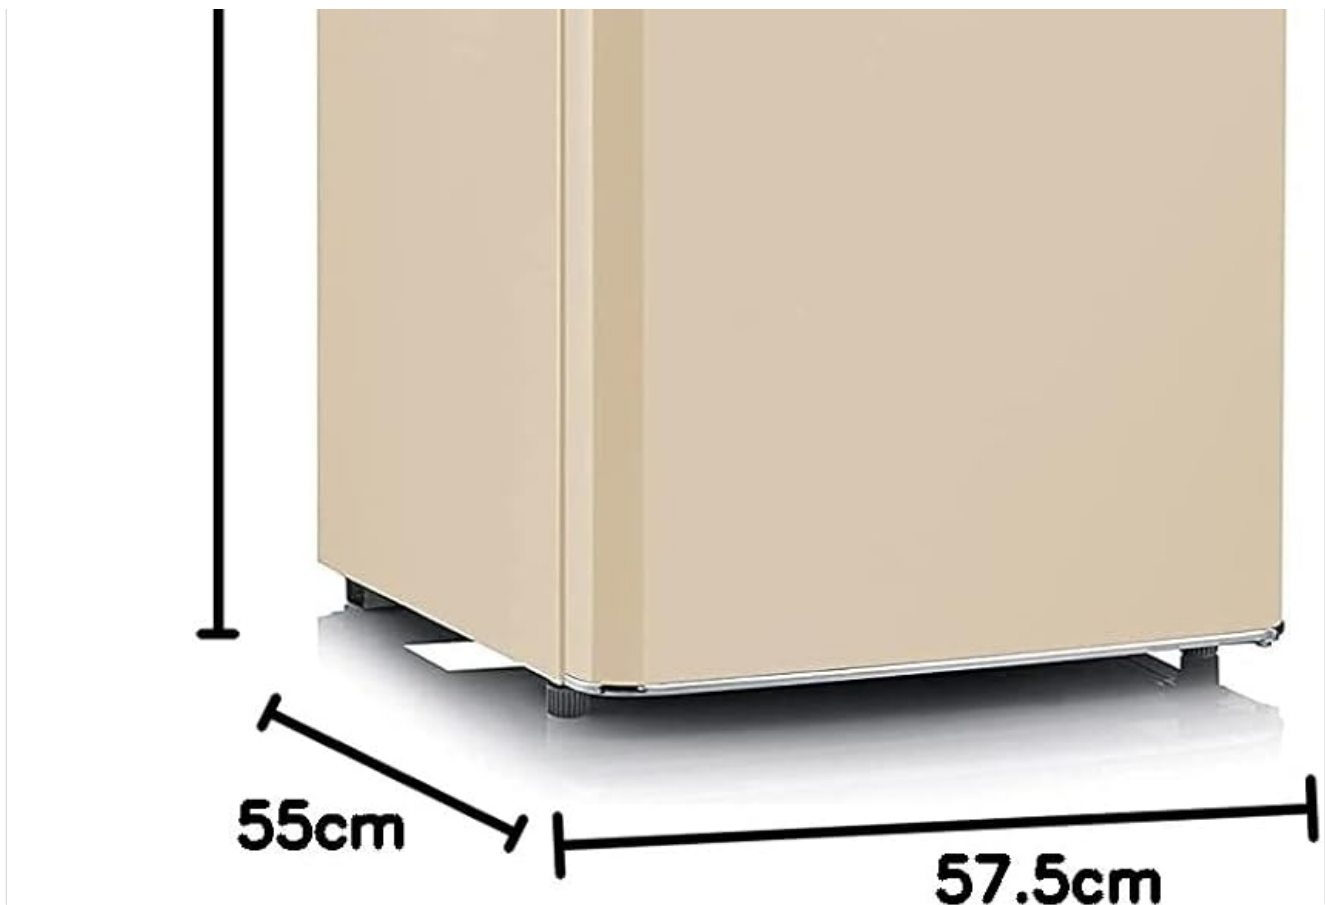


Figure 2: Appliance Dimensions (Height: 144 cm, Width: 55 cm, Depth: 57.5 cm)

3. Electrical Connection

Before connecting, ensure the voltage and frequency indicated on the rating plate match your household power supply. The appliance operates on 230 Volts. Plug the appliance into a properly grounded wall socket. Do not use extension cords or multiple socket adapters.

4. Initial Cleaning

Before first use, clean the interior and all accessories with lukewarm water and a mild detergent. Wipe dry thoroughly. Allow the appliance to air out for a few hours before loading food.

OPERATING YOUR APPLIANCE

1. Temperature Control

The appliance features a temperature controller located inside the refrigerator compartment. Turn the knob to adjust the cooling intensity. Higher numbers typically indicate colder temperatures. Start with a medium setting and adjust as needed based on ambient temperature and food load.

2. Interior Features

The refrigerator compartment offers ample storage and organization options:



Figure 3: Interior Layout with Shelves and Compartments

- **Adjustable Shelves:** Four height-adjustable shelves made of safety glass allow for flexible storage of various food items.
- **Veggiebox:** A spacious fresh food compartment designed for separate storage of fruits and vegetables, helping to maintain their freshness.
- **Door Compartments:** Includes a dedicated compartment for bottles up to 1.5 liters and two universal compartments for organized storage of smaller items.

- **LED Interior Lighting:** Modern LED lighting illuminates the interior, providing clear visibility of contents while being energy efficient.

Große Veggiebox zur separaten Lagerung von Obst und Gemüse

Moderne LED Beleuchtung



Figure 4: Large Veggiebox and Modern LED Lighting

3. Freezer Compartment

The 4-star freezer compartment has a freezing capacity of 2.5 kg per 24 hours. In case of a power failure, food can be stored safely for up to 12 hours.

MAINTENANCE AND CARE

1. Cleaning

Regular cleaning of your appliance will ensure optimal performance and hygiene. Always unplug the appliance before cleaning.

- Clean the interior with a soft cloth, lukewarm water, and a mild, non-abrasive detergent.
- Wipe down the exterior surfaces with a damp cloth. For stubborn stains, use a mild cleaner.
- Clean the door seals regularly to ensure a tight seal.

- Do not use abrasive cleaners, scouring pads, or solvents, as these can damage surfaces.

2. Defrosting

This appliance features an automatic defrost system in the refrigerator compartment, minimizing the need for manual defrosting. The freezer compartment may require occasional manual defrosting if a significant layer of ice builds up. To defrost the freezer, turn off the appliance, remove all food, and allow the ice to melt naturally. Place towels at the bottom to absorb water. Once defrosted, clean and dry the compartment before restarting.

3. Power Outages and Vacations

During short power outages, keep the doors closed to maintain the internal temperature. For longer absences, empty the appliance, unplug it, clean it thoroughly, and leave the doors slightly ajar to prevent odors and mold growth.

TROUBLESHOOTING

Before contacting customer service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
Appliance does not operate.	No power supply.	Check if the plug is properly inserted and the power outlet is working.
Appliance is not cooling sufficiently.	Temperature setting is too high; door is not closed properly; too much food loaded; ambient temperature too high.	Adjust temperature setting; ensure door is fully closed; do not overload; ensure proper ventilation.
Unusual noises.	Appliance is not level; components are loose; normal operating sounds.	Adjust leveling feet; check for loose items; gurgling or humming sounds are normal. The appliance operates at a low noise level of 39 dB(A).
Water on the floor.	Defrost water drain is blocked.	Clear the drain hole at the back of the refrigerator compartment.

TECHNICAL SPECIFICATIONS

Feature	Specification
Model Number	RKG 8933 (8933-000)
Brand	SEVERIN
Total Usable Capacity	206 Liters
Refrigerator Capacity	162 Liters
Freezer Capacity	44 Liters
Dimensions (H x W x D)	146 cm x 55 cm x 61.5 cm (Product dimensions: 55 x 61.5 x 146 cm; 39 Kilogram)
Weight	39 kg



Feature	Specification
Energy Efficiency Class	E (on a scale of A to G)
Annual Energy Consumption	180 kWh/year
Noise Level	39 dB(A) (Sound Emission Class C)
Climate Class	N-ST (16 - 38 °C)
Defrost System	Automatic (refrigerator)
Door Hinge	Fixed right
Shelving Material	Safety Glass
Number of Shelves	4
Number of Doors	2
Installation Type	Freestanding

WARRANTY AND CUSTOMER SUPPORT

SEVERIN products are manufactured to high quality standards. For information regarding warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official SEVERIN website. For technical assistance, spare parts, or service inquiries, please contact SEVERIN customer support. You can find more information and contact details on the official SEVERIN brand store[SEVERIN Brand Store](#)

© 2025 SEVERIN. All rights reserved.

Related Documents - RKG 8933

 SEVERIN RKG 8890 / 8933 / 8934 / 8935 / 8936 / 8937 / 8938 / 8939 / 8940 / 8941 / 8942 / 8943 / 8944 / 8945 / 8946 / 8947 / 8948 / 8949 / 8950 / 8951 / 8952 / 8953 / 8954 / 8955 / 8956 / 8957 / 8958 / 8959 / 8960 / 8961 / 8962 / 8963 / 8964 / 8965 / 8966 / 8967 / 8968 / 8969 / 8970 / 8971 / 8972 / 8973 / 8974 / 8975 / 8976 / 8977 / 8978 / 8979 / 8980 / 8981 / 8982 / 8983 / 8984 / 8985 / 8986 / 8987 / 8988 / 8989 / 8990 / 8991 / 8992 / 8993 / 8994 / 8995 / 8996 / 8997 / 8998 / 8999 / 9000	SEVERIN Retro Kühlschrank Bedienungsanleitung & Technische Daten (RKG 8890-8936) Umfassende Anleitung für SEVERIN Retro Kühlschränke (Modelle RKG 8890-8936). Enthält Informationen zu Installation, Nutzung, Sicherheit, Wartung und Energieeffizienz.
 SEVERIN RKG 8983 / 8984 / 8985 / 8986 / 8989 / 8992	SEVERIN RKG 8983/8984/8985/8986/8989/8992 Retro Refrigerator User Manual Comprehensive user manual for the SEVERIN RKG retro-style refrigerator series, covering setup, operation, safety, and maintenance. Learn how to properly use and care for your SEVERIN refrigerator.

This document outlines the warranty terms and conditions provided by SEVERIN for its appliances, including model numbers RKG 8920, RKG 8922, RKG 8923, and RKG 8925. It details consumer rights, manufacturer commitments, warranty exclusions, and the procedure for making a claim.

Umfassende Gebrauchsanweisung für SEVERIN Retro Kühlschränke der Modelle RKS 8830 bis RKS 8835. Enthält wichtige Informationen zu Sicherheit, Bedienung, Wartung und Energieeffizienz.

Umfassende Bedienungsanleitung für den SEVERIN Retro-Kühlschrank (Modelle RKS 8830, 8831, 8832, 8833, 8834). Enthält Installations-, Betriebs-, Wartungs- und Entsorgungshinweise.

Finden Sie detaillierte Anleitungen und wichtige Sicherheitshinweise für den SEVERIN Wasserkocher WK 3472. Erfahren Sie mehr über Anschluss, Bedienung, Reinigung und Wartung.